

CONTENDER

STEP UP TO THE PLATE



CONTENDER BEVERAGE COOLER

RUG057 | RUG058 | RUG059 | RUG060

CONTENTS

1.	IMPORTANT SAFETY INSTRUCTIONS	3
2.	APPLIANCE SAFETY	3
3.	IMPORTANT SAFEGUARDS	3
4.	ELECTRICAL CONNECTION	4
5.	BEFORE USE & INSTALLATION	4
6.	OPERATING YOUR BEVERAGE COOLER	5
7.	CARE & MAINTENANCE	7
8.	TROUBLESHOOTING	7
9.	TECHNICAL SPECIFICATIONS	8
10.	WARRANTY & SUPPORT	9

I. IMPORTANT SAFETY INSTRUCTIONS



WARNING!

TO REDUCE THE RISK OF FIRE, ELECTRICAL SHOCK, OR INJURY, FOLLOW THESE BASIC PRECAUTIONS AT ALL TIMES. READ ALL INSTRUCTIONS FULLY BEFORE OPERATING.

- **DANGER** — RISK OF CHILD ENTRAPMENT. BEFORE DISCARDING ANY APPLIANCE, REMOVE THE DOOR AND LEAVE SHELVES IN PLACE TO PREVENT CHILDREN CLIMBING INSIDE.
- NEVER ALLOW CHILDREN TO OPERATE, PLAY WITH, OR CLIMB INSIDE THIS APPLIANCE.
- NEVER CLEAN APPLIANCE PARTS WITH FLAMMABLE FLUIDS. FUMES CAN CREATE A FIRE HAZARD OR EXPLOSION.
- DO NOT STORE OR USE PETROL OR OTHER FLAMMABLE VAPOURS AND LIQUIDS NEAR THIS OR ANY OTHER APPLIANCE.

2. APPLIANCE SAFETY

YOUR SAFETY AND THE SAFETY OF OTHERS IS OUR HIGHEST PRIORITY. THIS MANUAL CONTAINS IMPORTANT SAFETY MESSAGES THROUGHOUT. ALWAYS READ AND OBSERVE ALL WARNINGS BEFORE OPERATING THE APPLIANCE.

DANGER — FAILURE TO OBSERVE THIS WARNING MAY RESULT IN SEVERE PERSONAL INJURY OR DEATH.

WARNING — FAILURE TO OBSERVE THIS WARNING MAY RESULT IN SERIOUS PERSONAL INJURY, DEATH, OR SIGNIFICANT PRODUCT DAMAGE.

CAUTION — FAILURE TO OBSERVE THIS NOTICE MAY RESULT IN MINOR OR MODERATE PERSONAL INJURY, OR PROPERTY DAMAGE.

3. IMPORTANT SAFEGUARDS

BEFORE USE, ENSURE THE APPLIANCE IS CORRECTLY POSITIONED AND INSTALLED AS DESCRIBED IN THIS MANUAL.

DANGER

- CONNECT ONLY TO A PROPERLY EARTHED 230 V AC / 50 HZ OUTLET. DO NOT REMOVE THE EARTH PIN, USE AN ADAPTOR, OR USE AN EXTENSION LEAD.
- REPLACE ALL PANELS BEFORE OPERATING THE APPLIANCE.
- A DEDICATED CIRCUIT SERVING ONLY THIS APPLIANCE IS RECOMMENDED. USE A SOCKET THAT CANNOT BE SWITCHED OFF BY A PULL-CORD OR SECONDARY SWITCH.
- NEVER CLEAN PARTS WITH FLAMMABLE FLUIDS, AND DO NOT STORE PETROL OR OTHER FLAMMABLE SUBSTANCES IN THE VICINITY OF THIS APPLIANCE.
- DISCONNECT THE APPLIANCE FROM THE MAINS SUPPLY BEFORE CARRYING OUT ANY CLEANING OR MAINTENANCE.
- DO NOT CONNECT OR DISCONNECT THE POWER PLUG WITH WET HANDS.
- DO NOT ATTEMPT TO REPAIR OR REPLACE ANY PART UNLESS SPECIFICALLY INSTRUCTED IN THIS MANUAL. ALL OTHER SERVICING MUST BE CARRIED OUT BY A QUALIFIED TECHNICIAN.

WARNING

- USE TWO OR MORE PERSONS TO MOVE AND INSTALL THIS APPLIANCE TO AVOID INJURY.
- ENSURE THE FRONT VENTILATION OF THE UNIT IS COMPLETELY UNOBSTRUCTED AT ALL TIMES. INSTALL IN A WELL-VENTILATED AREA WITH AMBIENT TEMPERATURES BETWEEN 16 °C AND 32 °C, PROTECTED FROM WIND, RAIN, AND WATER SPRAY.
- DO NOT POSITION THE APPLIANCE ADJACENT TO OVENS, GRILLS, OR OTHER SOURCES OF HIGH HEAT.
- THE FUSE OR CIRCUIT BREAKER PROTECTING THIS APPLIANCE SHOULD BE RATED AT 15 AMPERES.
- LEVEL THE APPLIANCE CORRECTLY TO ENSURE PROPER OPERATION.
- DO NOT USE SOLVENT-BASED CLEANERS OR ABRASIVES ON INTERIOR SURFACES, AS THESE MAY DAMAGE OR DISCOLOUR THE FINISH.
- DO NOT USE THIS APPLIANCE FOR ANY PURPOSE OTHER THAN ITS INTENDED FUNCTION.

4. ELECTRICAL CONNECTION

THIS APPLIANCE MUST BE PROPERLY EARTHED. THE POWER CORD IS FITTED WITH A 3-PIN PLUG FOR CONNECTION TO A STANDARD EARTHED WALL SOCKET, MINIMISING THE RISK OF ELECTRIC SHOCK.

SUPPLY REQUIREMENT: 230 V AC ~ / 50 HZ. HAVE THE SOCKET AND CIRCUIT CHECKED BY A QUALIFIED ELECTRICIAN TO CONFIRM CORRECT EARTHING BEFORE FIRST USE.

THE SUPPLY CORD SHOULD BE SECURED BEHIND THE APPLIANCE AND MUST NOT BE LEFT EXPOSED OR TRAILING. ALWAYS DISCONNECT BY GRIPPING THE PLUG FIRMLY — NEVER PULL ON THE CORD. INSPECT THE CORD REGULARLY; REPLACE IMMEDIATELY IF FRAYED, CRACKED, OR DAMAGED.

4.1. EXTENSION LEADS

DUE TO POTENTIAL SAFETY HAZARDS, THE USE OF AN EXTENSION LEAD WITH THIS APPLIANCE IS STRONGLY DISCOURAGED.

4.2. SURGE PROTECTION

THE ELECTRONIC CONTROL BOARDS WITHIN THIS APPLIANCE ARE SUSCEPTIBLE TO DAMAGE FROM POWER SURGES. IF YOUR PREMISES ARE SUBJECT TO POWER FLUCTUATIONS, USE A SUITABLY RATED SURGE PROTECTOR. DAMAGE CAUSED BY POWER SURGES IS NOT COVERED UNDER THE MANUFACTURER'S WARRANTY.

5. BEFORE USE & INSTALLATION

5.1. BEFORE FIRST USE

- REMOVE ALL EXTERIOR AND INTERIOR PACKAGING MATERIALS.
- CONFIRM THE FOLLOWING ITEMS ARE PRESENT: 1 × USER MANUAL, 5 × BEVERAGE SHELVES, 2 × KEYS.
- ALLOW THE APPLIANCE TO STAND UPRIGHT FOR A MINIMUM OF 2 HOURS BEFORE CONNECTING TO THE POWER SUPPLY. THIS ALLOWS REFRIGERANT TO SETTLE AND REDUCES THE RISK OF COOLING SYSTEM MALFUNCTION.
- WIPE DOWN ALL INTERIOR SURFACES WITH A SOFT CLOTH DAMPENED WITH LUKEWARM WATER.

5.2. INSTALLATION

- THIS APPLIANCE IS DESIGNED FOR FREESTANDING INSTALLATION ONLY.
- POSITION ON A FLOOR CAPABLE OF BEARING THE FULLY LOADED WEIGHT OF THE UNIT.
- THE APPLIANCE MAY BE USED IN A FIXED POSITION OR MOVED USING THE REAR-MOUNTED CASTORS.
- SITE AWAY FROM DIRECT SUNLIGHT AND HEAT SOURCES SUCH AS COOKERS, HEATERS, AND RADIATORS. DIRECT SUNLIGHT MAY AFFECT THE EXTERIOR FINISH; HEAT SOURCES WILL INCREASE ENERGY CONSUMPTION. EXTREME COLD AMBIENT TEMPERATURES MAY ALSO IMPAIR PERFORMANCE.
- AVOID POSITIONING IN AREAS OF HIGH MOISTURE OR HUMIDITY.
- CONNECT TO A DEDICATED, PROPERLY EARTHED SOCKET. NEVER CUT OR REMOVE THE EARTH PIN FROM THE POWER CORD.

6. OPERATING YOUR BEVERAGE COOLER



IMPORTANT

DO NOT STORE FOOD IN THIS APPLIANCE — INTERIOR TEMPERATURES MAY BE INSUFFICIENT TO PREVENT SPOILAGE. IN WARM OR HUMID CONDITIONS, CONDENSATION MAY FORM ON THE EXTERIOR OF THE GLASS DOOR. SIMPLY WIPE CLEAN WITH A DRY CLOTH.

FOR OPTIMUM PERFORMANCE, INSTALL IN AN AREA WHERE THE AMBIENT TEMPERATURE IS BETWEEN 22 °C AND 26 °C. OPERATING OUTSIDE THIS RANGE MAY CAUSE INTERIOR TEMPERATURES TO FLUCTUATE AND THE TARGET RANGE OF 2–8 °C MAY NOT BE ACHIEVED.

6.1. COMPRESSOR PROTECTION DELAY

THIS APPLIANCE IS FITTED WITH A COMPRESSOR PROTECTION DELAY SYSTEM. ON INITIAL POWER-UP, OR FOLLOWING A POWER INTERRUPTION, THE COMPRESSOR WILL NOT START FOR 3 MINUTES. THE DIGITAL DISPLAY, LED LIGHTING, AND TEMPERATURE SETTINGS REMAIN FULLY OPERATIONAL DURING THIS PERIOD.

6.2. SWITCHING ON

THE APPLIANCE POWERS ON AUTOMATICALLY AS SOON AS IT IS CONNECTED TO A LIVE SOCKET. TO SWITCH OFF THE COOLING SYSTEM, SIMPLY UNPLUG FROM THE MAINS.

6.3. SETTING THE TEMPERATURE

THE TEMPERATURE CONTROL IS LOCATED ON THE UPPER LEFT-HAND SIDE OF THE INTERIOR. THE OPERATING RANGE IS 2 °C TO 8 °C.

- ON FIRST USE: PRESS AND HOLD THE SET BUTTON FOR MORE THAN 3 SECONDS, THEN PRESS THE DOWN BUTTON TO SET THE TEMPERATURE TO 2 °C.
- AFTER 24–48 HOURS OF OPERATION, ADJUST TO THE TEMPERATURE THAT BEST SUITS YOUR REQUIREMENTS BY PRESSING AND HOLDING SET FOR MORE THAN 3 SECONDS, THEN USING THE UP OR DOWN BUTTONS.

NOTE: COLD AIR FALLS AND WARM AIR RISES. A SLIGHT TEMPERATURE VARIANCE BETWEEN THE TOP AND BOTTOM SHELVES IS NORMAL.

6.4. INTERIOR LIGHT

THE INTERIOR LIGHT CAN BE TOGGLED ON OR OFF BY PRESSING THE FN BUTTON ON THE CONTROL PANEL, LOCATED AT THE UPPER LEFT-HAND SIDE OF THE INTERIOR.

6.5. DOOR LOCK

THE APPLIANCE IS SUPPLIED WITH A LOCK AND TWO KEYS. KEYS ARE LOCATED IN THE PLASTIC BAG WITH THIS MANUAL. TO UNLOCK, INSERT THE KEY AND TURN CLOCKWISE. TO LOCK, TURN COUNTERCLOCKWISE AND ENSURE THE METAL PIN IS FULLY ENGAGED. STORE THE SPARE KEY IN A SECURE LOCATION.

6.6. SELF-CLOSING DOOR

THE DOOR IS FITTED WITH A SELF-CLOSING MECHANISM THAT ENSURES A POSITIVE SEAL BETWEEN THE DOOR GASKET AND THE CABINET BODY.

6.7. SHELF LOAD CAPACITY

EACH SHELF IS RATED TO A MAXIMUM LOAD OF 35 KG. DO NOT EXCEED THIS LIMIT.

6.8. DISPLAY PANEL - ACCESSING PARAMETER SETTINGS

- PRESS SET FOR 3 SECONDS — THE DISPLAY WILL SHOW PS.
- TO ACCESS TYPE F (FREQUENT) AND TYPE C (CONFIGURATION) PARAMETERS, ENTER THE PASSWORD '22' USING THE UP/DOWN BUTTONS.
- TO ACCESS THE TYPE F PARAMETER MENU ONLY, PRESS SET WITHOUT ENTERING THE PASSWORD.
- SCROLL THROUGH THE PARAMETER MENU USING UP/DOWN.
- TO DISPLAY OR SET A VALUE, PRESS SET, THEN UP/DOWN, THEN SET TO CONFIRM.
- TO SAVE ALL NEW VALUES AND EXIT: PRESS SET FOR 3 SECONDS.
- TO EXIT WITHOUT SAVING: ALLOW THE MENU TO TIME OUT (DO NOT PRESS ANY BUTTON FOR 60 SECONDS).

6.9. ALARM CODES

IF THE CONTROLLER DETECTS A FAULT CONDITION, AN ALARM CODE WILL BE DISPLAYED. REFER TO THE TABLE BELOW TO IDENTIFY AND RESOLVE THE ISSUE. CONTACT OUR SUPPORT TEAM IF THE FAULT PERSISTS.

ALARM CODE	LED STATUS	DESCRIPTION
EO	ON	PROBE 1 ERROR — CONTROL PROBE FAULT
EI	ON	PROBE 2 ERROR — DEFROST PROBE FAULT
DA	ON	OPEN DOOR ALARM
LO	ON	LOW TEMPERATURE ALARM
HI	ON	HIGH TEMPERATURE ALARM
EE	ON	UNIT PARAMETER ERROR
EF	ON	OPERATING PARAMETER ERROR

7. CARE & MAINTENANCE

7.1. INSTALLATION

- DISCONNECT THE APPLIANCE FROM THE MAINS SUPPLY AND REMOVE ALL ITEMS, INCLUDING SHELVES, BEFORE CLEANING.
- CLEAN INTERIOR SURFACES WITH A SOLUTION OF WARM WATER AND BICARBONATE OF SODA (APPROXIMATELY 2 TABLESPOONS PER LITRE OF WATER).
- WASH SHELVES WITH A MILD DETERGENT SOLUTION.
- WHEN CLEANING AROUND THE CONTROLS OR ANY ELECTRICAL COMPONENTS, WRING EXCESS WATER FROM THE CLOTH BEFORE USE.
- CLEAN THE EXTERIOR CABINET WITH WARM WATER AND A MILD LIQUID DETERGENT. RINSE THOROUGHLY AND DRY WITH A CLEAN SOFT CLOTH.
- DO NOT USE STEEL WOOL OR WIRE BRUSHES ON STAINLESS STEEL SURFACES, AS THIS WILL INTRODUCE STEEL PARTICLES AND MAY CAUSE CORROSION.

7.2. POWER INTERRUPTION

MOST POWER INTERRUPTIONS ARE BRIEF AND WILL NOT SIGNIFICANTLY AFFECT THE INTERNAL TEMPERATURE, PROVIDED THE DOOR IS KEPT CLOSED. IF A PROLONGED OUTAGE IS ANTICIPATED, TAKE APPROPRIATE STEPS TO PROTECT THE CONTENTS.

7.3. MOVING THE APPLIANCE

- REMOVE ALL STORED ITEMS BEFORE MOVING.
- SECURE ALL LOOSE SHELVES WITH TAPE.
- TAPE THE DOOR CLOSED.
- KEEP THE APPLIANCE UPRIGHT THROUGHOUT TRANSPORTATION. PROTECT THE EXTERIOR WITH A BLANKET OR SUITABLE PROTECTIVE MATERIAL.

7.4. ENERGY SAVING TIPS

- POSITION THE APPLIANCE IN THE COOLEST AREA OF THE ROOM, AWAY FROM HEAT-PRODUCING EQUIPMENT AND DIRECT SUNLIGHT.
- AVOID OPENING THE DOOR MORE FREQUENTLY THAN NECESSARY, AND ENSURE THE DOOR IS FULLY CLOSED AFTER EACH USE.

8. TROUBLESHOOTING

BEFORE CONTACTING OUR SUPPORT TEAM, PLEASE CHECK THE TABLE BELOW — MANY COMMON ISSUES CAN BE RESOLVED QUICKLY WITHOUT THE NEED FOR A SERVICE CALL.

PROBLEM	POSSIBLE CAUSE / ACTION
APPLIANCE DOES NOT OPERATE	CHECK THE POWER CORD IS FULLY PLUGGED IN.
	CHECK THE CIRCUIT BREAKER OR FUSE.
	NOTE: THE COMPRESSOR DELAY SYSTEM PAUSES START-UP FOR 3 MINUTES AFTER FIRST POWER-ON OR AFTER A POWER INTERRUPTION.

PROBLEM	POSSIBLE CAUSE / ACTION
NOT COOLING SUFFICIENTLY	CHECK THE TEMPERATURE SETTING IS CORRECT.
	MINIMISE DOOR OPENING FREQUENCY.
	ENSURE THE DOOR IS CLOSING FULLY AND THE GASKET IS SEALING CORRECTLY.
COMPRESSOR CYCLING FREQUENTLY	AMBIENT TEMPERATURE MAY BE ELEVATED.
	A LARGE VOLUME OF WARM PRODUCT MAY HAVE BEEN LOADED.
	CHECK DOOR IS CLOSING FULLY AND GASKET IS SEALING. VERIFY TEMPERATURE SETTING.
INTERIOR LIGHT NOT WORKING	CHECK THE APPLIANCE IS POWERED.
	CHECK THE FN BUTTON HAS NOT SWITCHED THE LIGHT OFF.
	CHECK THE CIRCUIT BREAKER OR FUSE.
VIBRATION OR RATTLING	ENSURE THE APPLIANCE IS CORRECTLY LEVELLED.
	RATTLING CAN ALSO BE CAUSED BY NORMAL REFRIGERANT FLOW — THIS IS NOT A FAULT.
EXCESSIVE NOISE	SOME GURGLING OR POPPING SOUNDS AT THE END OF A COOLING CYCLE ARE NORMAL (REFRIGERANT FLOW AND THERMAL EXPANSION).
	ENSURE THE APPLIANCE IS LEVEL.
DOOR NOT CLOSING PROPERLY	CHECK THE DOOR IS NOT MISALIGNED.
	ENSURE THE APPLIANCE IS LEVEL.
	CLEAN THE DOOR GASKET. CHECK SHELVES ARE CORRECTLY POSITIONED.

9. TECHNICAL SPECIFICATIONS

PRODUCT CODES	RUG057	RUG058	RUG059	RUG060
TEMPERATURE RANGE	2 – 8 °C			
AMBIENT OPERATING RANGE	16 °C – 32 °C (RECOMMENDED 22–26 °C)			
POWER SUPPLY	230 V AC ~ / 50 HZ			
FUSE RATING	13 AMP			
CAPACITY GROSS (L)	360	908	908	1180
CAPACITY NETT (L)	278	880	880	1055
NUMBER OF SHELVES	4			
MAX. SHELF LOAD	35KG PER SHELF			
EXTERIOR DIMENSIONS (W × D × H)	590 X 600 X 1900	1295 X 715 X 1995	1295 X 715 X 1995	1830 X 740 X 1995
NET WEIGHT (KG)	80	120	120	130
REFRIGERANT	R134A/R290			
INTERIOR LIGHTING	2 X VERTICAL LED			
DOOR TYPE	HINGED	HINGED	SLIDING	HINGED
DOOR LOCK	YES (2 KEYS SUPPLIED)			
CASTORS	YES REAR-MOUNTED			

10. WARRANTY & SUPPORT

DOCUMENTS WITHOUT SALES DATE, FACTORY AND SELLER COMPANY APPROVAL ARE INVALID. IN ORDER TO BENEFIT FROM THE WARRANTY, THE SALES (INVOICE, ASSEMBLY REPORT, ETC.) DOCUMENT MUST BE SHOWN.

ALL CONTENDER PRODUCTS COME WITH A 24 MONTHS PARTS ONLY WARRANTY.

THE DEVICE IS GUARANTEED AGAINST MALFUNCTIONS CAUSED BY MATERIAL AND WORKMANSHIP DEFECTS IF IT IS ASSEMBLED AND USED AS DESCRIBED IN THE ASSEMBLY, USE AND MAINTENANCE MANUAL.

THE MANUFACTURER DETERMINES THE DETECTION, REPAIR METHOD AND LOCATION OF THE MALFUNCTIONS COVERED BY THE WARRANTY.

WARRANTY COVERAGE BELONGS ONLY TO THE GUARANTEED DEVICE IF THE INSTALLATION, USE AND MAINTENANCE MANUAL AND WARRANTY CONDITIONS ARE COMPLIED WITH, NO RIGHTS OR COMPENSATION CAN BE CLAIMED UNDER ANY OTHER NAME.

THE WARRANTY IS VOID IF THE INFORMATION ON THE WARRANTY CERTIFICATE OR ON THE WARRANTED DEVICE INDICATING THE TYPE, MODEL AND SERIAL NUMBERS OF THE DEVICE IS SCRATCHED, ERASED OR MODIFIED.

THE WARRANTY ONLY INCLUDES MAINTENANCE AND REPAIR AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP THAT MAY OCCUR WITHIN THE VALID PERIODS. FAILURES AND PARTS WITHIN THE SCOPE OF THE WARRANTY ARE REPAIRED AND REPLACED FREE OF CHARGE.

DURING THE WARRANTY PERIOD, ONLY SERVICE PERSONNEL AUTHORISED BY THE MANUFACTURER CAN INTERVENE IN MALFUNCTIONS. INTERVENTION OF UNAUTHORISED PERSONS MAY EXCLUDE THE DEVICE FROM THE WARRANTY.

INSTALLATION MUST BE DONE AS SPECIFIED IN THE INSTRUCTIONS. IN CASE OF CHANGING THE ADDRESS OF USE OF THE DEVICE, IT MUST BE NOTIFIED IN ACCORDANCE WITH THE RELOCATION AND ASSEMBLY INSTRUCTIONS.

IN CASE OF ANY MALFUNCTION DURING USE, THE AUTHORISED SERVICE SHOULD BE NOTIFIED.

ANY DAMAGES AND MALFUNCTIONS THAT MAY OCCUR DURING THE SHIPMENT PROCESS SUCH AS LOADING AND UNLOADING OUTSIDE THE RESPONSIBILITY OF THE MANUFACTURER WILL BE TREATED OUT OF WARRANTY. THE ELIMINATION OF DAMAGES AND MALFUNCTIONS CAUSED BY EXTERNAL FACTORS DURING THE USE OF THE DEVICE IS OUT OF WARRANTY.

IN THE BUILDING WHERE THE DEVICE WILL BE CONNECTED, THE INSTALLATION MUST BE IN ACCORDANCE WITH THE REGULATIONS, AND ALL NECESSARY MEASURES MUST BE TAKEN TO ENSURE THE SAFETY OF LIFE AND PROPERTY.

IF THE ABOVE IS NOT OBSERVED OUR COMPANY WILL NOT ACCEPT RESPONSIBILITY.

TO MAKE A WARRANTY CLAIM OR TO OBTAIN TECHNICAL SUPPORT, PLEASE CONTACT OUR CUSTOMER SERVICES TEAM WITH YOUR PROOF OF PURCHASE AND MODEL DETAILS:

RG DISTRIBUTORS LTD UNIT 7 JADE BUSINESS PARK, SPRING ROAD, SEAHAM, SR7 9DR
TEL: 0333 358 3678 · EMAIL: SALES@ECATERING.CO.UK · WEB: WWW.ECATERING.CO.UK





RUG057 • CONTENDER 367L COMMERCIAL GLASS DOOR DISPLAY FRIDGE

RUG058 • CONTENDER 783L COMMERCIAL DOUBLE GLASS DOOR FRIDGE - HINGED DOORS

RUG059 • CONTENDER 783L COMMERCIAL DOUBLE GLASS DOOR FRIDGE - SLIDING DOORS

RUG060 • CONTENDER 1045L COMMERCIAL DOUBLE GLASS DOOR FRIDGE - HINGED DOORS



STEP UP TO THE PLATE

Distributed by RG Distributors Ltd | Unit 7 Jade Business Park | Spring Road | Seaham | SR7 9DR

SERVICE & SUPPORT:  **0333 358 3678**  **sales@ecatering.co.uk**

Office Hours: Mon – Fri 9:00AM – 5:00PM (excluding public holidays)