



STEP UP TO THE PLATE



CONTENDER COUNTERTOP SNACK OVEN

OVP008

CONTENTS

1. INTRODUCTION	3
2. PRECAUTIONS FOR USAGE	3
3. HANDLE ASSEMBLY INSTRUCTIONS	4
4. OPERATION	5
5. CLEANING & MAINTENENCE.....	5
6. WARRANTY TERMS.....	6

I. IMPORTANT SAFETY INFORMATION

THIS MANUAL CONTAINS ESSENTIAL INFORMATION FOR THE SAFE OPERATION OF YOUR COUNTERTOP SNACK OVEN. PLEASE READ THIS GUIDE THOROUGHLY BEFORE SETUP, OPERATION, OR MAINTENANCE.



WARNING

FAILURE TO FOLLOW PROPER SAFETY AND MAINTENANCE PROCEDURES MAY RESULT IN EQUIPMENT DAMAGE OR VOID THE WARRANTY.


2. PRECAUTIONS FOR USAGE

PLEASE OBSERVE THE FOLLOWING SAFETY PRECAUTIONS BEFORE OPERATING THE OVEN:


1. AVOID DIRECT CONTACT WITH HOT SURFACES.
2. DO NOT ATTEMPT TO COOK OVERSIZED OR GREASY FOODS. EXCESS GREASE MAY DAMAGE HEATING COILS OR CAUSE SMOKE.
3. KEEP THE TOP OF THE UNIT CLEAR — DO NOT PLACE OR STORE ITEMS ON TOP.
4. DO NOT STACK MULTIPLE OVENS ON TOP OF EACH OTHER.
5. ENSURE FOOD, SUCH AS PIZZA, IS PLACED IN THE CORRECT COOKING PAN BEFORE INSERTING INTO THE OVEN.
6. PLUG ONLY INTO A 3-PRONG GROUNDED OUTLET. NEVER MODIFY OR FORCE THE PLUG INTO AN INCOMPATIBLE SOCKET.
7. DO NOT PLUG IN, UNPLUG, OR OPERATE WITH WET HANDS TO PREVENT ELECTRICAL SHOCK.
8. KEEP THE UNIT, PLUG, AND CORD AWAY FROM LIQUIDS; NEVER IMMERSE ANY PART OF THE OVEN IN WATER.
9. ALWAYS UNPLUG THE UNIT WHEN CLEANING OR DURING IDLE PERIODS.
10. NEVER LEAVE THE OVEN UNATTENDED WHILE IN OPERATION.
11. THIS APPLIANCE IS INTENDED ONLY FOR ITS DESIGNATED COOKING FUNCTIONS.
12. INDOOR USE ONLY – DO NOT OPERATE OUTDOORS.
13. OPERATE ONLY ON FIRM, LEVEL SURFACES ALLOWING AT LEAST 12 INCHES OF CLEARANCE ON ALL SIDES AND ABOVE.
14. DO NOT USE IF THE UNIT, POWER CORD, OR PLUG IS DAMAGED OR MALFUNCTIONING.
15. KEEP CHILDREN AND ANIMALS AWAY FROM THE UNIT DURING OPERATION.
16. ONLY QUALIFIED PROFESSIONALS SHOULD PERFORM REPAIRS OR ELECTRICAL SERVICING. UNAUTHORISED ALTERATIONS WILL VOID THE WARRANTY.
17. ENSURE THE UNIT IS SUPPLIED WITH THE CORRECT VOLTAGE FOR CONTINUOUS SAFE OPERATION.
18. DO NOT OPEN OR REMOVE INTERNAL COVERS OR PANELS — THIS WILL VOID WARRANTY COVERAGE.

3. HANDLE ASSEMBLY INSTRUCTIONS

FOLLOW THESE STEPS TO CORRECTLY ATTACH THE HANDLE BEFORE OPERATING THE OVEN:

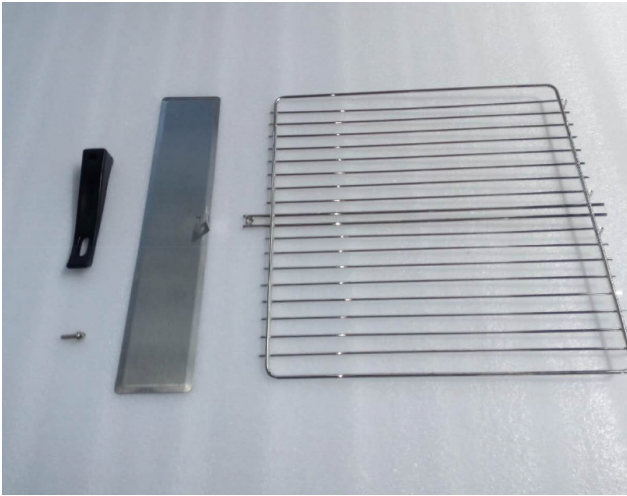

1. ALIGN THE HANDLE WITH THE DOOR AND PANEL ASSEMBLY.

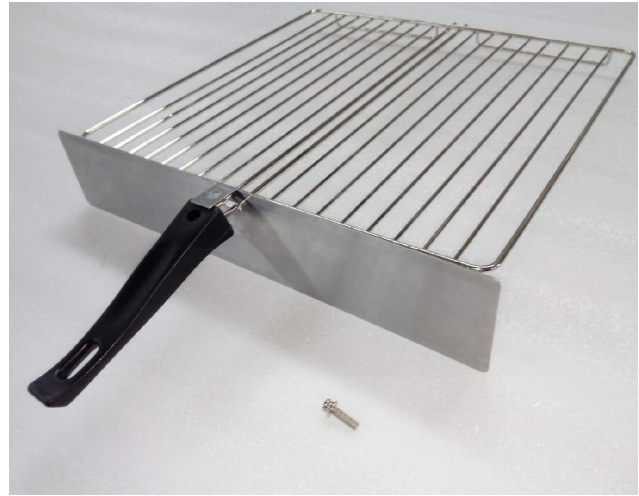

2. PLACE THE COOKING NET UPSIDE DOWN (WITH THE FLANGED EDGES FACING DOWNWARD).



3. INSERT THE HANDLE INTO THE PRE-CUT SLOTS IN THE TRAY, ENSURING THE HOLES ARE ALIGNED.



4. SECURE FIRMLY FROM BEHIND THE PANEL USING THE SCREW INCLUDED WITH THE UNIT.



CAUTION

ENSURE THE HANDLE IS FULLY TIGHTENED BEFORE EACH USE TO PREVENT DETACHMENT OR INJURY.

4. OPERATION

1. CONNECT THE OVEN TO A GROUNDED POWER OUTLET. THE OVEN DOES NOT REQUIRE ANY PREHEATING; IT IS READY FOR USE IMMEDIATELY.
2. SET THE DESIRED COOKING TIME BY TURNING THE TIMER KNOB TO THE APPROPRIATE DURATION.



IMPORTANT

NEVER LEAVE THE OVEN UNATTENDED WHILE HEATING!

3. WHEN REMOVING FOOD, USE OVEN MITTS OR PROTECTIVE GLOVES TO AVOID BURNS FROM HOT SURFACES.
4. AFTER USE, TURN OFF AND UNPLUG THE OVEN FROM THE POWER OUTLET.

5. CLEANING & MAINTENANCE



NOTE

TO ENSURE CLEANLINESS AND EXTEND THE LIFE OF THE APPLIANCE, CLEAN THE OVEN AFTER EACH USE.

DO NOT IMMERSE ANY PART OF THE OVEN IN WATER OR OTHER LIQUIDS. MOISTURE INSIDE ELECTRICAL COMPONENTS MAY CAUSE A SHORT CIRCUIT OR ELECTRIC SHOCK.

5.1. CLEANING PROCEDURE

1. ALLOW THE OVEN TO COOL COMPLETELY BEFORE CLEANING.
2. UNPLUG THE UNIT FROM THE POWER OUTLET.
3. PULL OUT THE CRUMB TRAY, REMOVING ANY LEFTOVER FOOD DEBRIS OR RESIDUE.
4. CLEAN THE CRUMB TRAY USING A DAMP CLOTH OR SPONGE.
5. WIPE DOWN THE INTERIOR AND EXTERIOR OF THE OVEN USING A SOFT, DAMP CLOTH.
6. DRY THE SURFACES THOROUGHLY WITH A CLEAN, NON-ABRASIVE TOWEL.
7. AVOID ABRASIVE CLEANERS, SCOURING PADS, OR CHEMICAL SOLVENTS THAT CAN DAMAGE THE FINISH.
8. IF SOAP OR CHEMICAL AGENTS ARE USED, ENSURE THEY ARE COMPLETELY RINSED AWAY TO PREVENT CORROSION.

USE CAUTION WHILE CLEANING; SHARP EDGES MAY EXIST NEAR THE TRAY OR PANEL AREA.

- KEEP APPLIANCE AND SURROUNDING AREA CLEAN AND DRY.
- ALWAYS UNPLUG WHEN NOT IN USE.
- FOR SERVICE OR REPAIR, CONTACT AN AUTHORISED TECHNICIAN.

6 WARRANTY TERMS

6.1. COVERAGE

YOUR SNACK OVEN IS COVERED BY A 24-MONTH LIMITED PARTS WARRANTY FROM THE DATE OF PURCHASE AGAINST MANUFACTURING DEFECTS OR WORKMANSHIP FAULTS.

6.2. VALID CONDITIONS

- THE APPLIANCE MUST BE INSTALLED AND OPERATED AS DESCRIBED IN THIS MANUAL.
- THE RATING PLATE MUST REMAIN LEGIBLE AND INTACT.
- REPAIRS MUST BE CARRIED OUT BY AUTHORISED TECHNICIANS.

6.3. EXCLUSIONS

- DAMAGE CAUSED BY MISUSE OR IMPROPER INSTALLATION.
- WEAR FROM NORMAL PROFESSIONAL USE.
- UNAUTHORISED REPAIRS OR MODIFICATIONS.

6.4. SERVICE & SUPPORT

IF THE APPLIANCE FAILS TO OPERATE CORRECTLY:

1. STOP USING THE APPLIANCE AND UNPLUG IMMEDIATELY.
2. DO NOT ATTEMPT SELF-REPAIR.
3. CONTACT YOUR AUTHORISED DISTRIBUTOR OR SERVICE PROVIDER WITH PROOF OF PURCHASE AND THE MODEL NUMBER.
4. FOLLOW GUIDANCE FROM THE AUTHORISED SERVICE REPRESENTATIVE.

SAVE THIS USER MANUAL FOR FUTURE REFERENCE

USE ONLY AS INTENDED. OPERATE SAFELY. MAINTAIN REGULARLY.



OVPO08 · CONTENDER SMALL COUNTERTOP SNACK OVEN - TAKEAWAY - DELI - CAFE MODEL



STEP UP TO THE PLATE

Distributed by RG Distributors Ltd | Unit 7 Jade Business Park | Spring Road | Seaham | SR7 9DR

SERVICE & SUPPORT:  **0333 358 3678**  **sales@ecatering.co.uk**

Office Hours: Mon - Fri 9:00AM - 5:00PM (excluding public holidays)