


CONTENDER

STEP UP TO THE PLATE



CONTENDER ELECTRIC CREPE MACHINES

GPS004 | GPD003

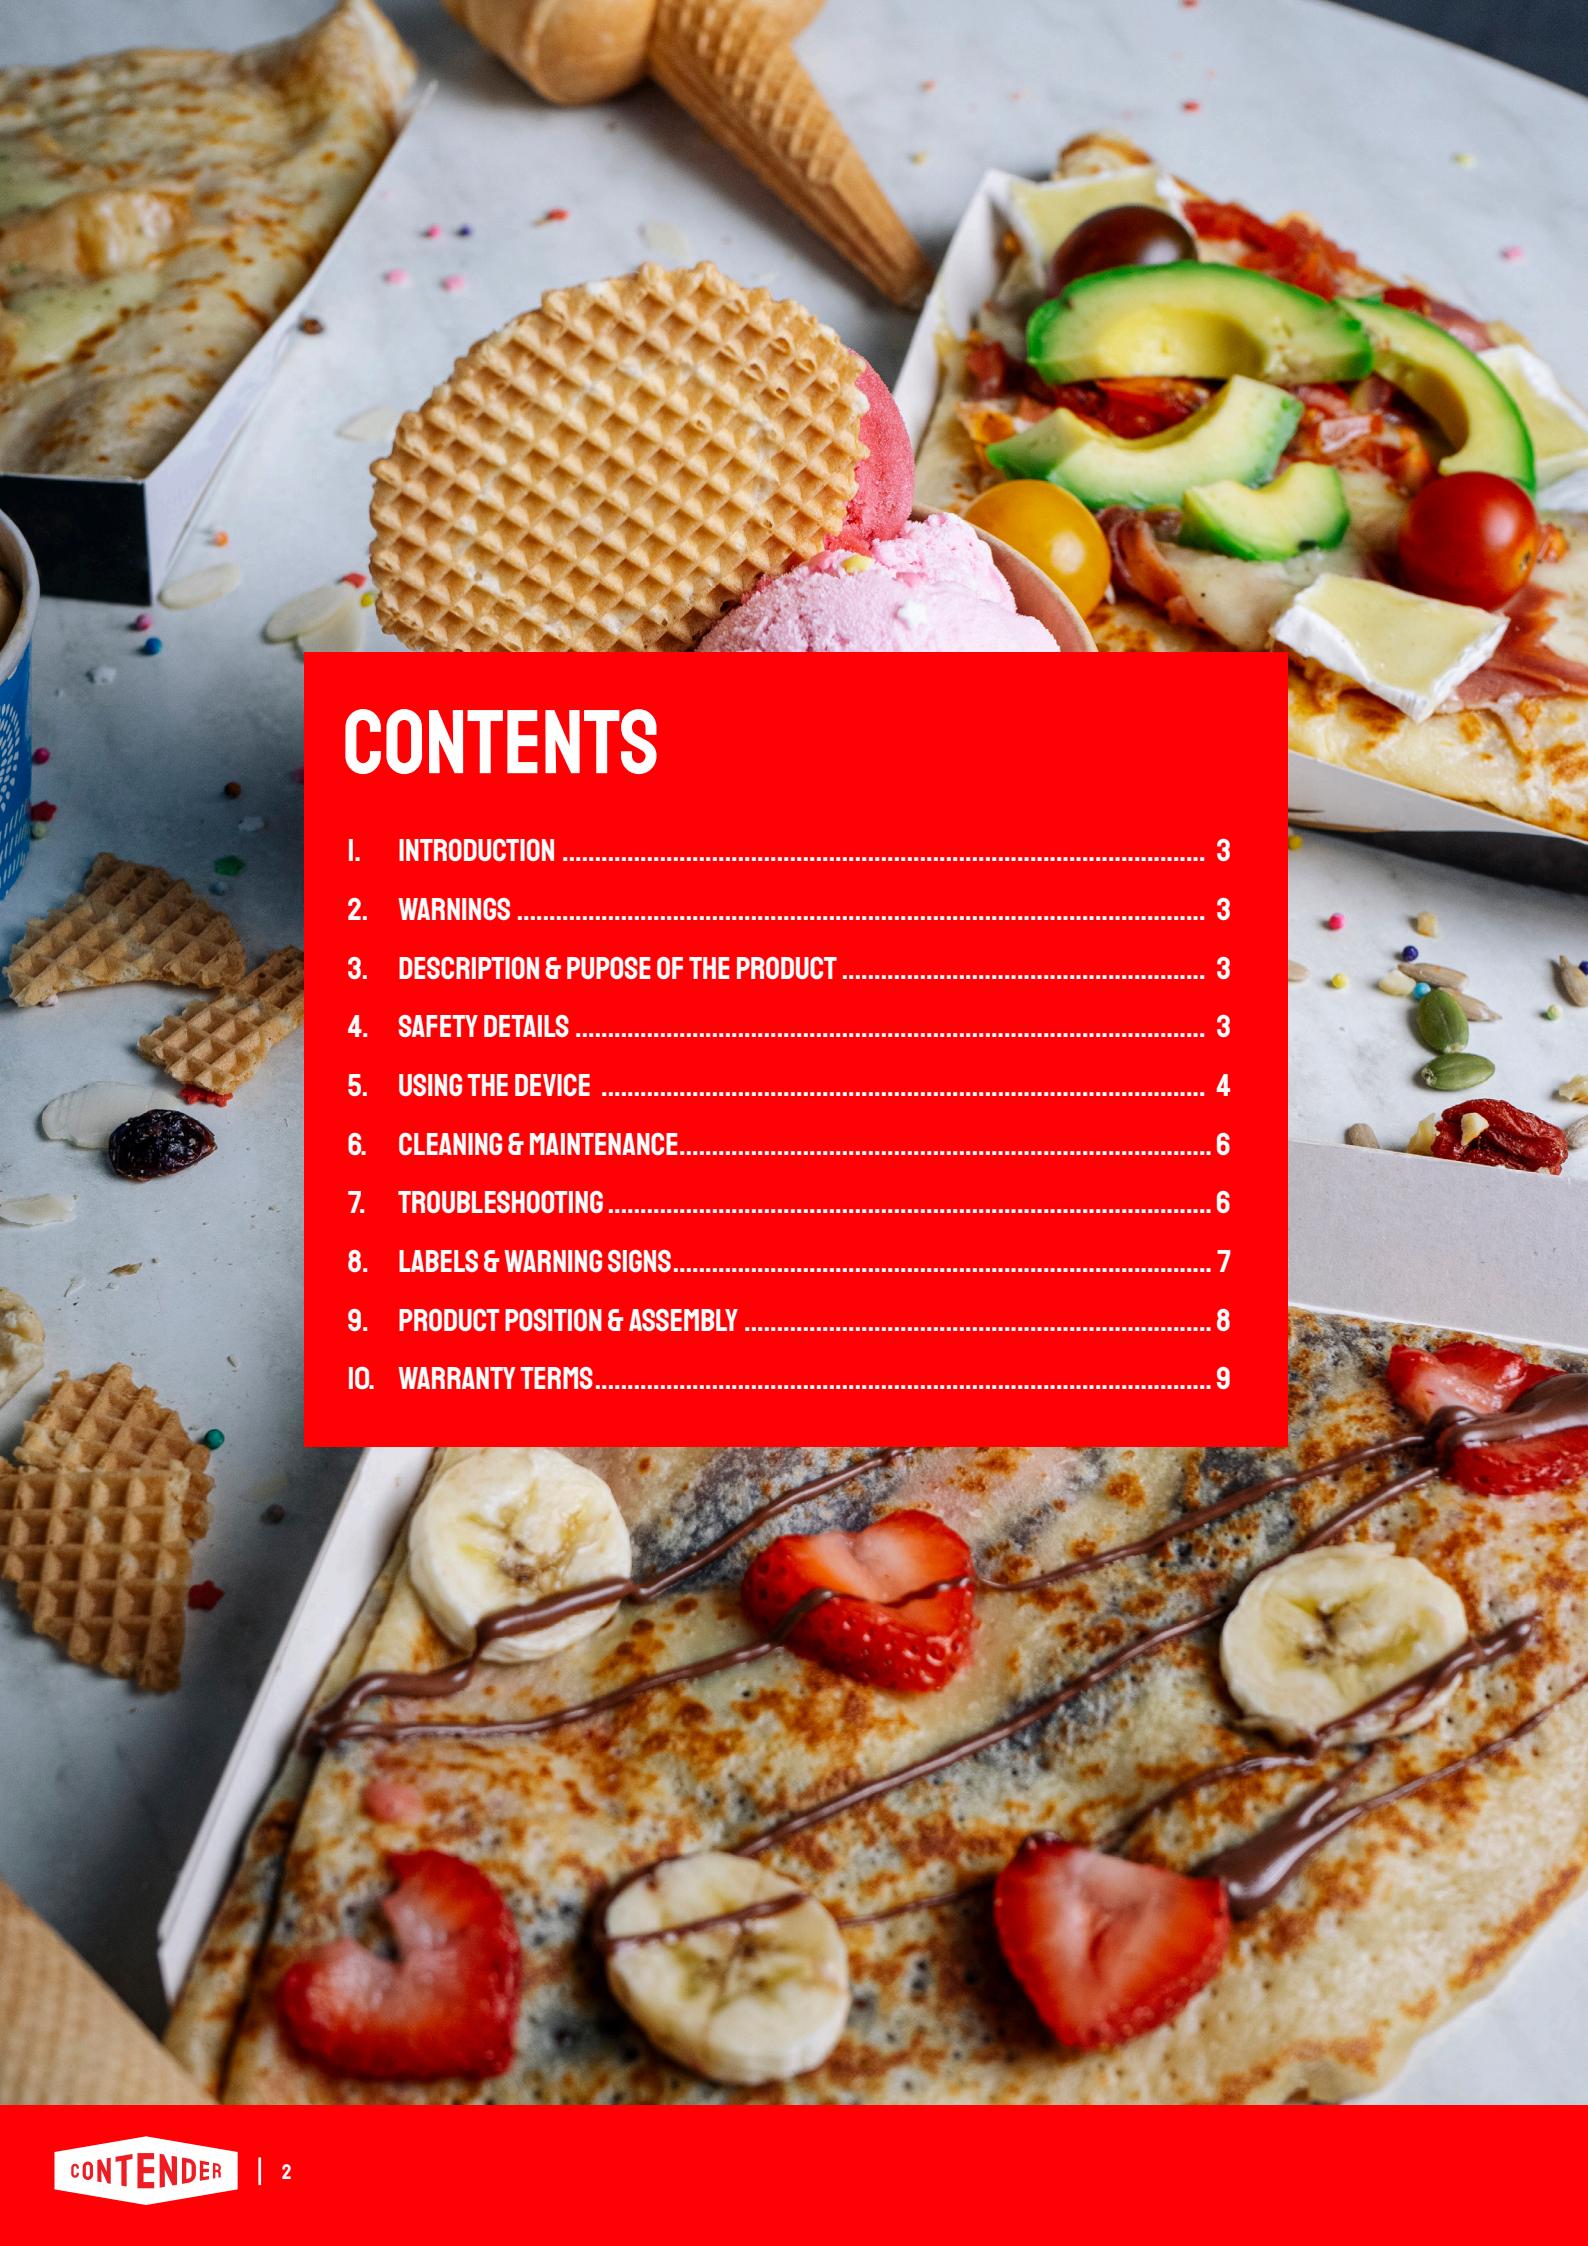

CONTENTS

1. INTRODUCTION	3
2. WARNINGS	3
3. DESCRIPTION & PURPOSE OF THE PRODUCT	3
4. SAFETY DETAILS	3
5. USING THE DEVICE	4
6. CLEANING & MAINTENANCE.....	6
7. TROUBLESHOOTING	6
8. LABELS & WARNING SIGNS.....	7
9. PRODUCT POSITION & ASSEMBLY	8
10. WARRANTY TERMS.....	9

I. INTRODUCTION

THANK YOU FOR CHOOSING OUR PRODUCT AND TRUSTING IN US. OUR DEVICES ARE USED IN MANY CITIES AT HOME AND ABROAD. OUR PRODUCT IS MANUFACTURED ACCORDING TO INTERNATIONAL STANDARDS. WE STRONGLY REMIND YOU TO READ THE USER MANUAL AND HAVE IT READ TO GET THE DEVICE'S EFFICIENCY TO YOUR EXPECTATIONS AND USE IT FOR A LONG TIME. WE ASK YOU TO HEED THE FOLLOWING WARNINGS BEFORE CALLING OUR SERVICE.

2. WARNINGS

PLEASE READ THE MANUAL CAREFULLY BEFORE INSTALLING AND USING THE DEVICE, AND MAKE SURE THAT THOSE WHO USE IT READ IT. THE DEVICE WILL BE EXCLUDED FROM THE WARRANTY WHEN YOU START THE MACHINE WITHOUT READING THE MANUAL. THE MANUAL THAT PROVIDES INFORMATION ABOUT OUR PURCHASED PRODUCT'S INSTALLATION, USE, AND MAINTENANCE SHOULD BE READ CAREFULLY.

THE ELECTRICAL INSTALLATION TO WHICH THE DEVICE WILL BE CONNECTED MUST BE BY THE LEGAL REGULATIONS. FAILURES IN YOUR INSTALLATION ARE YOUR RESPONSIBILITY. FOR ANY MATTERS YOU ARE HESITANT AND DO NOT UNDERSTAND, PLEASE GET IN TOUCH WITH YOUR NEAREST AUTHORISED SERVICE BY PHONE. WE HOPE THAT YOU GET THE BEST EFFICIENCY FROM OUR PRODUCT. ON-SITE SERVICE IS SUBJECT TO A FEE FOR THIS PRODUCT.

3. DESCRIPTION & PURPOSE OF THE PRODUCT

THE DEVICE IS MADE TO COOK CREPES ON COOKING SURFACES IN THE KITCHENS OF INDUSTRIAL FACILITIES (SUCH AS BUSINESSES SERVING MASS MEALS, RESTAURANTS, TOURIST FACILITIES, AND KIOSKS).

SKU/MODEL	DIMENSIONS	NET WEIGHT	POWER
GPS004	425 X 490 X 250MM	13 KG	2,5 KW, 13 AMP
GPD003	825 X 490 X 200MM	18 KG	2 X 2.5KW, 13AMP

4. SAFETY DETAILS

- i** THE DEVICE WORKS WITH 220-230 VOLTS ~ 50-60 HZ.
- i** IF THE POWER CORD IS DAMAGED, MAKE SURE TO TAKE IT TO THE SERVICE.
- i** ALL KINDS OF SOLID-LIQUID MATERIALS (CLOTHING, ALCOHOL AND DERIVATIVES, PETROCHEMICAL PRODUCTS, WOOD AND PLASTIC MATERIALS, CURTAINS, ETC.) THAT MAY BURN WHERE THE DEVICE OPERATES SHOULD NEVER BE KEPT.
- i** DO NOT CLEAN WITH PRESSURIZED AND RUNNING WATER.
- i** YOU CAN USE OUR DEVICES WITH OUR OTHER PRODUCTS IN THE SAME SERIES. IT SHOULD BE AT LEAST 30 CM BETWEEN IT AND OTHER DEVICES.
- i** THIS DEVICE MUST BE INSTALLED BY APPLICABLE REGULATIONS AND SHOULD ONLY BE USED IN A WELL-VENTILATED PLACE. REFER TO THE INSTRUCTIONS BEFORE INSTALLATION AND USE OF THE DEVICE.

- i** THE DEVICE IS MADE FOR INDUSTRIAL USE AND SHOULD ONLY BE USED BY TRAINED PERSONNEL.
- i** THE DEVICE MUST NOT BE INTERFERED WITH OUTSIDE THE MANUFACTURER OR AUTHORISED SERVICE.
- i** USE A FIRE EXTINGUISHER BY TURNING OFF ELECTRICAL SWITCHES WITHOUT PANICKING (IF ANY) IN CASE OF A FIRE FLARE FOR ANY REASON IN THE AREA WHERE THE APPLIANCE IS USED. NEVER USE WATER TO EXTINGUISH THE FLAME.
- i** IT MUST BE USED WITH A SOILED OUTLET. CHECK THAT THE SOCKET IS GROUNDED.
- i** PEOPLE WHO WILL USE THE DEVICE SHOULD READ THE USER MANUAL
- i** USE OUT OF THE REACH OF CHILDREN.
- i** DO NOT USE THE DEVICE FOR ANY PURPOSE OTHER THAN THE SPECIFIED PURPOSE.
- i** DO NOT INSERT ANY OBJECTS INTO THE AIR-BREATHING HOLES OF THE DEVICE.
- i** THE FLOOR WHERE THE DEVICE IS USED MUST BE OF NON-SLIP MATERIAL.
- i** DO NOT OPERATE NEXT TO HOT APPLIANCES.
- i** THE DEVICE NEEDS TO TAKE THE AIR.
- i** DO NOT OPERATE IN DIRECT SUNLIGHT.
- i** USE HEAT-RESISTANT GLOVES TO PROTECT AGAINST HOT SURFACES.

5. USING THE DEVICE

5.1. FIRST USE

- REMOVE THE APPLIANCE FROM THE PACKAGE AND CHECK FOR DAMAGE DURING TRANSPORT. DO NOT OPERATE THE PRODUCT IF THERE IS DAMAGE.
- REMOVE THE PROTECTION NYLONS ON THE PANELS.
- CAREFULLY CLEAN THE PARTS OF THE DEVICE THAT ENCOUNTER THE FOOD.
- SMOKE MAY COME OUT OF THE APPLIANCE ON THE FIRST USE. THIS SMOKE COMES FROM INSULATION MATERIAL, WHICH IS NORMAL.

5.2. USAGE

- CONNECT THE APPLIANCE TO THE POWER.
- IF YOUR DEVICE HAS AN ON/OFF SWITCH, TURN IT ON. (AVAILABLE ON SOME MODELS)
- SET THE THERMOSTAT TO 250 DEGREES. ACCORDING TO THE WARM-UP MODEL, IT TAKES UP TO 30 MINUTES. WHEN THE DEVICE REACHES THE COOKING TEMPERATURE, THE THERMOSTAT LIGHT GOES OUT, AND YOU CAN COOK.
- IF THE TEMPERATURE IS LOW, THE THERMOSTAT SETTING IS BROUGHT TO THE TOP POSITION.
- AFTER COOKING IS FINISHED, THE TEMPERATURE IS BROUGHT TO 150 DEGREES TO SAVE MONEY.
- WHEN THE DEVICE'S USE ENDS, THE DEVICE'S HEAT THERMOSTAT MUST BE TURNED OFF.

- THE ON/OFF SWITCH SHOULD BE TURNED OFF AND DISCONNECTED FROM THE ELECTRICITY.
- COOKING SURFACES SHOULD BE THOROUGHLY CLEANED AFTER THEY HAVE FINISHED USING. OTHERWISE, DIRTY LAYERS WILL FORM, AND THERE WILL BE PROBLEMS WITH PERFORMANCE AND HYGIENE.
- DISCONNECT THE POWER WHEN YOU ARE NOT IN USE.
- THE DEVICE MUST BE OPERATED ON A COMPLETELY FLAT SURFACE.
- THE COOKING SURFACE IS TEFLON COATING. DO NOT TOUCH WITH SHARP OBJECTS.
- AFTER THE DEVICE REACHES THE DESIRED TEMPERATURE, THE DOUGH BAKER IS POURED ONTO THE SURFACE AND SPREAD OUT WITH THE HELP OF AN APPARATUS, AND COOKING IS PROVIDED.

5.3. CLEANING

- ALWAYS DISCONNECT FROM THE ELECTRICITY BEFORE CLEANING.
- AFTER EACH USE, THE COOKING SURFACES MUST BE THOROUGHLY CLEANED.
- DO NOT POUR WATER INTO IT. CLEAN THE MAIN BODY WITH A DAMP CLOTH.
- DO NOT WASH THE MAIN BODY UNDER RUNNING WATER.
- THE LUBRICANT OF THE DEVICE SHOULD BE CLEANED.
- IF THE DEVICE IS NOT USED FOR A LONG TIME, IT SHOULD BE THOROUGHLY CLEANED AND PACKAGED.

5.4. TRANSPORT AND REPLACEMENT

- THE ELECTRICAL CONNECTION MUST BE DISCONNECTED BEFORE TRANSPORT.
- THE DEVICE CAN BE CARRIED BY HAND BY THE WORKFORCE.
- DO NOT HIT OR DROP THE PRODUCT WHILE CARRYING IT.

5.5. INSTALLATION OF THE DEVICE

- THE FEET OF THE UNDER-SET MACHINE WHERE THE DEVICE WILL BE PLACED MUST BE ADJUSTED, AND THE DEVICE MUST OPERATE ON THE BALANCE PLANE.
- THE ELECTRICAL CONNECTION OF THE DEVICE MUST BE CONTROLLED BY A QUALIFIED ELECTRICIAN, MAX FROM THE GROUND. IT MUST BE CONNECTED TO THE FUSE AT THE HEIGHT OF 170 CM.
- THE ELECTRICAL CONNECTION SHOULD BE MADE BY PLACING 30 MA LEAKAGE CURRENT INSURANCE IN THE SUPPLY INSURANCE AGAINST THE DANGER OF LEAKAGE CURRENT.
- THE ELECTRICAL INSTALLATION OF THE DEVICE SHOULD BE CONNECTED TO THE GROUNDING BAR ON THE NEAREST PANEL AND GROUNDED.

5.6. EFFICIENCY USE (EFFICIENT USE OF ENERGY)

- TURN OFF YOUR DEVICE WHEN IT IS NOT IN USE.
- DO NOT FORGET TO CLEAN THE APPLIANCE.
- STRICTLY COMPLY WITH THE USE OF THE DEVICE.
- THE AMBIENT OPERATING TEMPERATURE OF THE DEVICE PROVIDES OPTIMAL EFFICIENCY AT 24 DEGREES.
- THE OPERATING TEMPERATURE RANGE IS -5 AND +40 DEGREES.

6. CLEANING AND MAINTENANCE

6.1. CLEANING

- CLEAN AND DRY THE COMPLETE EXTERIOR WITH SPONGES AND LIQUID CLEANING MATERIAL BEFORE AND AFTER THE DEVICE IS FIRST USED AND AFTER EACH SUBSEQUENT USE (WITHOUT POWER TO THE APPLIANCE).
- DO NOT USE SALT SPIRIT, CIF, AND SIMILAR CHEMICAL CLEANING MATERIALS DURING CLEANING.
- THE DEVICE MUST BE DISCONNECTED FROM THE POWER BEFORE ANY MAINTENANCE.
- WORN PARTS MUST BE REPLACED WITH THE ORIGINAL.
- PERIODIC MAINTENANCE CAN BE CARRIED OUT BY THE USER.
- WE RECOMMEND MAINTENANCE EVERY 2 MONTHS, DEPENDING ON THE FREQUENCY OF USE OF THE DEVICE.
- ALTHOUGH WITHIN THE WARRANTY PERIOD, MAINTENANCE OF THE DEVICE BY OUR AUTHORIZED SERVICE PERSONNEL IS SUBJECT TO A FEE.
- DISCONNECT THE APPLIANCE FROM THE POWER DURING PERIODIC MAINTENANCE.

6.2. LIFE OF DEVICE

THE DEVICE'S LIFESPAN IS AROUND 10 YEARS IF USED UNDER RECOMMENDED CONDITIONS OF USE.

6.3. DEFECTS THAT MAY OCCUR AND FAULT DETECTION

- THE DEVICE IS CONNECTED TO THE SOCKET, BUT THE PRODUCT DOES NOT WORK.
- CHECK THE MAIN POWER SWITCH.
- CHECK THE STATUS OF THE CABLE OF THE DEVICE.
- CHECK THE ON-OFF BUTTON AND THERMOSTAT.
- IF THE PROBLEM PERSISTS, TAKE IT TO THE SERVICE PROVIDER.

6.4. SERVICE AND SPARE PARTS STATION

UNIT 7 JADE BUSINESS PARK, SPRING ROAD, MURTON, COUNTY DURHAM SR7 9DR. T: 0333 358 3678. E: SALES@ECATERING.CO.UK

7. TROUBLESHOOTING



ISSUE	CAUSES	SOLUTIONS
THE DEVICE DOES NOT OPERATE	THE DEVICE MAY NOT BE RECEIVING ELECTRICITY	CHECK THE ELECTRIC CONNECTION
	CIRCUIT BREAKER MAY NOT BE OPEN	CHECK THE FUSE BOX CONNECTION
THE DEVICE DOES NOT COOK WELL	TEMPERATURE ADJUSTMENT BUTTON IS NOT WORKING OR TEMPERATURE SETTING MAY BE WRONG	CHECK THE TEMPERATURE SETTING
THE DEVICE HAS STOPPED WORKING	THE DEVICE MAY STOP DUE TO LOW VOLTAGE	CHECK THE VOLTAGE

8. LABELS & WARNING SIGNS

RG Distributors Ltd t/a ECATERING Unit 7 Jade Business Park, Spring Road, Muton, County Durham, SR7 9DR Telephone: (+44) 333 358 3678 Email: sales@ecatering.co.uk Website: www.ecatering.co.uk		
Product Name		
Model/Type		
Power/Watt		
Production Date		
Country of Production		
Category		
Voltage		
CAUTION!.. This device should be installed in accordance with current regulations and should only be used in well-ventilated areas. Instructions must be followed before and after use.		

	WARNINGS ABOUT DANGEROUS SITUATIONS RELATED TO THE SAFETY OF LIFE AND PROPERTY.
 220V	WARNING: RISK OF ELECTRICAL SHOCK
	WARNING: HOT SURFACE
	WARNING: HIGH TEMPERATURE - DO NOT TOUCH WHEN IN USE
	IMPORTANT INFORMATION AND USEFUL TIPS FOR USING THE DEVICE. THIS DEVICE MUST BE INSTALLED IN ACCORDANCE WITH REGULATIONS AND SHOULD ONLY BE USED IN A WELL-VENTILATED AREA. CONSULT THE INSTRUCTIONS BEFORE INSTALLING AND USING THE DEVICE.

9. PRODUCT POSITION & ASSEMBLY

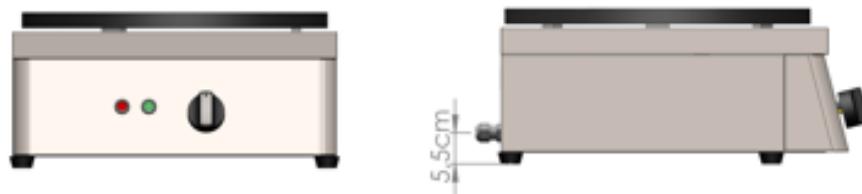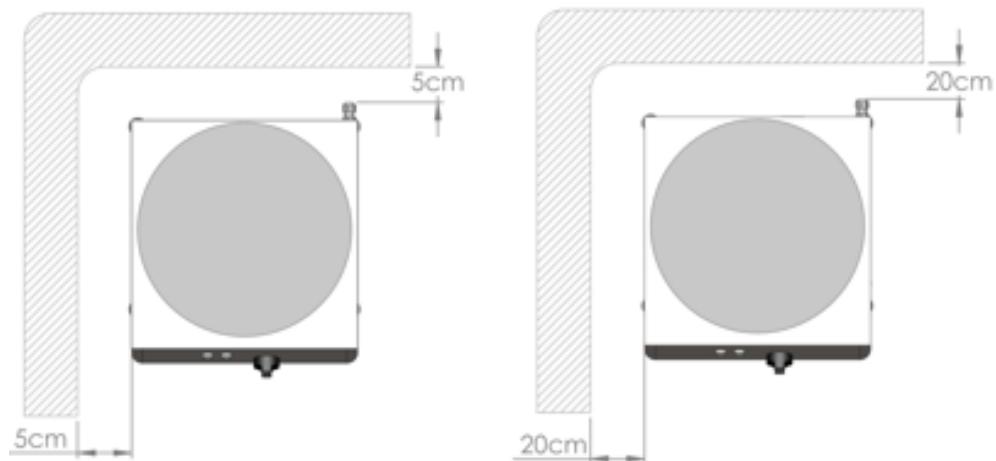

- THE DISTANCE BETWEEN THE TUBE AND THE DEVICE MUST BE A MINIMUM 500MM.
- THERE SHOULD BE A MINIMUM OF 200MM BETWEEN THE DEVICE AND THE SIDE WALLS.

10. WARRANTY TERMS

DOCUMENTS WITHOUT SALES DATE, FACTORY AND SELLER COMPANY APPROVAL ARE INVALID. IN ORDER TO BENEFIT FROM THE WARRANTY, THE SALES (INVOICE, ASSEMBLY REPORT, ETC.) DOCUMENT MUST BE SHOWN.

ALL CONTENDER PRODUCTS COME WITH A 24 MONTHS PARTS ONLY WARRANTY.

THE DEVICE IS GUARANTEED AGAINST MALFUNCTIONS CAUSED BY MATERIAL AND WORKMANSHIP DEFECTS IF IT IS ASSEMBLED AND USED AS DESCRIBED IN THE ASSEMBLY, USE AND MAINTENANCE MANUAL.

THE MANUFACTURER DETERMINES THE DETECTION, REPAIR METHOD AND LOCATION OF THE MALFUNCTIONS COVERED BY THE WARRANTY.

WARRANTY COVERAGE BELONGS ONLY TO THE GUARANTEED DEVICE IF THE INSTALLATION, USE AND MAINTENANCE MANUAL AND WARRANTY CONDITIONS ARE COMPLIED WITH, NO RIGHTS OR COMPENSATION CAN BE CLAIMED UNDER ANY OTHER NAME.

THE WARRANTY IS VOID IF THE INFORMATION ON THE WARRANTY CERTIFICATE OR ON THE WARRANTED DEVICE INDICATING THE TYPE, MODEL AND SERIAL NUMBERS OF THE DEVICE IS SCRATCHED, ERASED OR MODIFIED.

THE WARRANTY ONLY INCLUDES MAINTENANCE AND REPAIR AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP THAT MAY OCCUR WITHIN THE VALID PERIODS. FAILURES AND PARTS WITHIN THE SCOPE OF THE WARRANTY ARE REPAIRED AND REPLACED FREE OF CHARGE.

DURING THE WARRANTY PERIOD, ONLY SERVICE PERSONNEL AUTHORIZED BY THE MANUFACTURER CAN INTERVENE IN MALFUNCTIONS. INTERVENTION OF UNAUTHORIZED PERSONS MAY EXCLUDE THE DEVICE FROM THE WARRANTY.

INSTALLATION MUST BE DONE AS SPECIFIED IN THE INSTRUCTIONS. IN CASE OF CHANGING THE ADDRESS OF USE OF THE DEVICE, IT MUST BE NOTIFIED IN ACCORDANCE WITH THE RELOCATION AND ASSEMBLY INSTRUCTIONS.

IN CASE OF ANY MALFUNCTION DURING USE, THE AUTHORIZED SERVICE SHOULD BE NOTIFIED.

ANY DAMAGES AND MALFUNCTIONS THAT MAY OCCUR DURING THE SHIPMENT PROCESS SUCH AS LOADING AND UNLOADING OUTSIDE THE RESPONSIBILITY OF THE MANUFACTURER WILL BE TREATED OUT OF WARRANTY. THE ELIMINATION OF DAMAGES AND MALFUNCTIONS CAUSED BY EXTERNAL FACTORS DURING THE USE OF THE DEVICE IS OUT OF WARRANTY.

IN THE BUILDING WHERE THE DEVICE WILL BE CONNECTED, THE INSTALLATION MUST BE IN ACCORDANCE WITH THE REGULATIONS, AND ALL NECESSARY MEASURES MUST BE TAKEN TO ENSURE THE SAFETY OF LIFE AND PROPERTY.

IF THE ABOVE IS NOT OBSERVED OUR COMPANY WILL NOT ACCEPT RESPONSIBILITY.





GPS004 · CONTENDER SINGLE ELECTRIC CREPE MAKER

GPD003 · CONTENDER DOUBLE ELECTRIC CREPE MAKER



STEP UP TO THE PLATE