


# CONTENDER

STEP UP TO THE PLATE

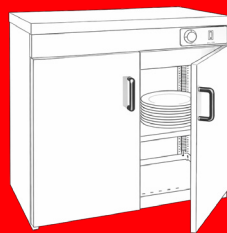

## CONTENDER ELECTRIC HOT CUPBOARD

HCU001 | HCU002

# I. INTRODUCTION

THANK YOU FOR PURCHASING A CONTENDER ELECTRIC HOT CUPBOARD. OUR PRODUCTS ARE OF THE HIGHEST QUALITY AND COME WITH COMPREHENSIVE AFTER SALES SERVICE. IN ORDER TO FULLY UNDERSTAND ALL THE FUNCTIONS, PLEASE READ THE MANUAL FULLY BEFORE USAGE.



## IMPORTANT

**ALWAYS READ ALL INSTRUCTIONS BEFORE OPERATING THIS APPLIANCE**

# 2. TECHNICAL SPECIFICATIONS


MODEL	HCU001	HCU002
VOLTAGE/FREQUENCY	~240V, 50HZ	~240V, 50HZ
POWER (KW)	0.4	0.8
DIMENSIONS (MM)	450 X 500 X 885	750 X 505 X 885
NET WEIGHT (KG)	23	32.2



# 3. OPERATION INSTRUCTIONS

- CONNECT THE UNIT'S PLUG TO THE POWER SUPPLY SOCKET.
- TURN ON THE POWER SWITCH AND ADJUST THE THERMOSTAT CONTROL KNOB TO YOUR TEMPERATURE SETTING.
- THE UNIT WILL BE READY AFTER APPROXIMATELY 10 MINUTES.

# 4. ELECTRICAL DIAGRAM

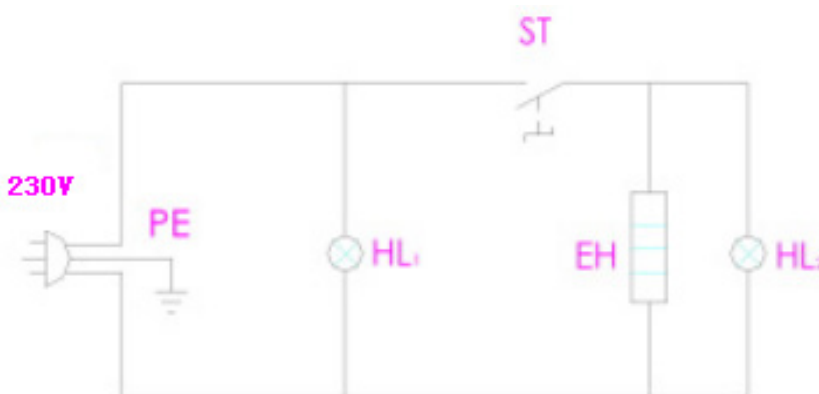

ST: TEMPERATURE CONTROLLER

HL: HEATING INDICATOR

EH: ELECTRIC HEATING ELEMENT

## 5. MAINTENANCE & CARE

- TURN THE ELECTRICITY OFF AND UNPLUG THE UNIT. WAIT UNTIL THE ELEMENT COOLS DOWN BEFORE PROCEEDING WITH ANY MAINTENANCE AND CARE.
- WIPE THE MACHINE WITH A SOFT CLOTH USING NON-CORROSIVE DETERGENTS.
- **DO NOT** SPRAY THE WHOLE UNIT WITH LARGE QUANTITIES OF WATER AS WATER PENETRATION AND DAMPNESS CAN LEAD TO ELECTRICAL PARTS FAILURE.



### WARNINGS

- TO BE SERVICE BY QUALIFIED PERSON ONLY.
- DO NOT SPRAY WATER ONTO THE PRODUCT / ELECTRICAL COMPONENTS.
- STOP USING IF WIRES, LEAD OR PLUG ARE WORN.
- CHANGE WIRES/LEAD TO THE SAME SPECIFICATIONS OR CONTACT SUPPLIER.
- AFTER USAGE, TURN OFF THE POWER SUPPLY.

## 6. WARRANTY TERMS

### 6.1. COVERAGE

THE ELECTRIC HOT CUPBOARD IS COVERED BY A 24-MONTH LIMITED PARTS WARRANTY FROM THE DATE OF PURCHASE AGAINST MANUFACTURING DEFECTS OR WORKMANSHIP FAULTS.

### 6.2. VALID CONDITIONS

- THE APPLIANCE MUST BE INSTALLED AND OPERATED AS DESCRIBED IN THIS MANUAL.
- THE RATING PLATE MUST REMAIN LEGIBLE AND INTACT.
- REPAIRS MUST BE CARRIED OUT BY AUTHORISED TECHNICIANS.

### 6.3. EXCLUSIONS

- DAMAGE CAUSED BY MISUSE OR IMPROPER INSTALLATION.
- WEAR FROM NORMAL PROFESSIONAL USE.
- UNAUTHORIZED REPAIRS OR MODIFICATIONS.

### 6.4. SERVICE & SUPPORT

IF THE APPLIANCE FAILS TO OPERATE CORRECTLY:

1. STOP USING THE APPLIANCE AND UNPLUG IMMEDIATELY.
2. DO NOT ATTEMPT SELF-REPAIR.
3. CONTACT YOUR AUTHORISED DISTRIBUTOR OR SERVICE PROVIDER WITH PROOF OF PURCHASE AND THE MODEL NUMBER.
4. FOLLOW GUIDANCE FROM THE AUTHORISED SERVICE REPRESENTATIVE.

### SAVE THIS USER MANUAL FOR FUTURE REFERENCE

USE ONLY AS INTENDED. OPERATE SAFELY. MAINTAIN REGULARLY.

HCU001 • CONTENDER HOT CUPBOARD STAINLESS STEEL - SINGLE DOOR - HOLDS UP TO 80 PLATES  
HCU002 • CONTENDER HOT CUPBOARD STAINLESS STEEL - DOUBLE DOOR - HOLDS UP TO 160 PLATES



**STEP UP TO THE PLATE**

Distributed by RG Distributors Ltd | Unit 7 Jade Business Park | Spring Road | Seaham | SR7 9DR

**SERVICE & SUPPORT:**  **0333 358 3678**  **sales@ecatering.co.uk**

**Office Hours:** Mon - Fri 9:00AM - 5:00PM (excluding public holidays)