

**CONTENDER**

**STEP UP TO THE PLATE**



**CONTENDER HEAVY DUTY DIGITAL INDUCTION HOB**

**H01013**

# CONTENTS

1. INTRODUCTION .....	3
2. SAFETY WARNINGS .....	3
3. PRODUCT DESCRIPTION .....	3
4. OPERATION .....	4
5. USABLE AND NON-USABLE UTENSILS .....	4
6. CLEANING.....	5
7. TROUBLESHOOTING .....	6
8. SERVICE AND SUPPORT .....	6
9. WARRANTY TERMS.....	7

# I. INTRODUCTION

THANK YOU FOR PURCHASING A CONTENDER INDUCTION HOB. OUR PRODUCTS ARE OF THE HIGHEST QUALITY AND COME WITH COMPREHENSIVE AFTER SALES SERVICE. IN ORDER TO FULLY UNDERSTAND ALL THE FUNCTIONS, PLEASE READ THE MANUAL BEFORE USAGE.



## IMPORTANT

ALWAYS READ ALL INSTRUCTIONS BEFORE OPERATING THIS APPLIANCE



## 2. TECHNICAL SPECIFICATIONS

MODEL	H01013
VOLTAGE/FREQUENCY	220-240V~ 50/60HZ
POWER RATE	3000W
TEMPERATURE RANGE	60°C - 240°C



## 3. SAFETY INSTRUCTIONS

- DO NOT PLUG WITH WET HANDS.
- DO NOT PLUG INTO A SOCKET WHERE SEVERAL OTHER APPLIANCES ARE PLUGGED IN.
- DO NOT USE IF THE PLUG CORD IS DAMAGED OR THE POWER PLUG DOES NOT FIT THE SOCKET SAFELY.
- DO NOT MODIFY THE PARTS, OR REPAIR THE UNIT BY YOURSELF.
- DO NOT USE THE UNIT NEAR FLAME OR WET PLACES.
- DO NOT USE WHERE CHILDREN CAN EASILY TOUCH THE UNIT, OR ALLOW CHILDREN TO USE THE UNIT BY THEMSELVES.
- DO NOT PLACE ON UNSTABLE SURFACES.
- DO NOT MOVE THE UNIT WHEN THE POT OR THE PAN IS ON IT.
- DO NOT HEAT THE POT EMPTY OR OVERHEAT THE POT.
- DO NOT PLACE METALLIC OBJECTS SUCH AS KNIVES, FORKS, SPOONS, LIDS, CANS, AND ALUMINUM FOILS ON THE TOP PLATE SINCE THEY CAN GET HOT.
- USE THE UNIT WITH SUFFICIENT SPACE AROUND IT. KEEP THE FRONT SIDE AND EITHER RIGHT OR LEFT SIDE OF THE UNIT CLEAR.
- DO NOT USE THE UNIT ON CARPET OR TABLECLOTH (VINYL) OR ANY OTHER LOW-HEAT-RESISTANT ARTICLE.
- DO NOT PLACE A SHEET OF PAPER BETWEEN THE POT OR THE PAN AND THE UNIT. THE PAPER MAY GET BURNT.
- IF THE SURFACE IS CRACKED, SWITCH OFF TO AVOID THE POSSIBILITY OF ELECTRIC SHOCK AND THEN TAKE TO THE SERVICE CENTER IMMEDIATELY.
- DO NOT BLOCK AIR INTAKE OR EXHAUST VENT.
- DO NOT TOUCH THE TOP PLATE RIGHT AFTER REMOVING THE POT OR THE PAN, AS THE TOP PLATE WILL STILL BE VERY HOT.
- DO NOT PLACE THE UNITE NEAR TO THE OBJECTS WHICH ARE AFFECTED BY MAGNET, SUCH AS: RADIOS, TELEVISIONS, AUTOMATIC-BANKING CARDS AND CASSETTE TAPES.

- THE POWER CORD MUST BE REPLACED BY QUALIFIED TECHNICIANS.
-  CAUTION: HOT SURFACE.
- THIS APPLIANCE IS NOT INTENDED FOR USE BY PERSONS (INCLUDING CHILDREN) WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES, OR LACK OF EXPERIENCE AND KNOWLEDGE, UNLESS THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE BY A PERSON RESPONSIBLE FOR THEIR SAFETY.
- THE TEMPERATURE OF ACCESSIBLE SURFACES MAY BE HIGH WHEN THE APPLIANCE IS OPERATING.
- ALUMINIUM FOIL AND PLASTIC VESSELS NOT PLACED ON HOT SURFACES.
- THE GLASS-CERAMIC SURFACES ARE NOT TO BE USED FOR STORAGE.
- METALLIC OBJECTS SUCH AS KITCHEN UTENSILS, CUTLERY ETC. SHALL NOT BE PLACED ON THE HOB SURFACE WITHIN THE COOKING ZONES SINCE THEY COULD GET HOT.
- TAKE CARE WHEN OPERATING THE APPLIANCE, AS RINGS, WATCHES AND SIMILAR OBJECTS WORN BY THE USER COULD GET HOT WHEN IN CLOSE PROXIMITY TO THE HOB SURFACE.
- ONLY USE VESSELS OF THE TYPE AND SIZE RECOMMENDED.
- AFTER USE, SWITCH THE HOB ELEMENT OFF BY MEANS OF ITS CONTROL. DO NOT RELY ON THE PAN DETECTOR.
- APPLIANCE NOT TO BE CLEANED WITH WATER JET;
- ANY REPAIRS SHALL BE CARRIED OUT ONLY BY PERSONS TRAINED OR RECOMMENDED BY THE MANUFACTURER.
- CARE BE TAKEN TO ENSURE THAT THE SPLASHBACK AND SURROUNDING AREA FREE OF METALLIC SURFACES
-  NON-IONIZING ELECTROMAGNETIC RADIATION
- THE APPLIANCE IS NOT INTENDED TO BE OPERATED BY MEANS OF AN EXTERNAL TIMER OR SEPARATE REMOTE-CONTROL SYSTEM.



## WARNING

CHILDREN SHOULD BE SUPERVISED TO ENSURE THAT THEY DO NOT PLAY WITH THE APPLIANCE.

## 4. OPERATION

1. PLACE SUITABLE COOKING UTENSILS IN THE CENTER OF THE TOP PLATE AND PLUG IN, THE POWER LIGHT WILL SHINE, INDICATING THAT THE POWER IS CONNECTED NORMALLY.
2. HEATING IS THE DEFAULT FUNCTION OF STARTING WORKING OF THE INDUCTION COOKER. WHEN PRESSING ON/OFF, THE LIGHT OF HEATING WILL SHINE, INDICATING THAT THE INDUCTION COOKER IS ENTERING THE STATE OF HEATING; THE DEFAULT POWER OF HEATING IS 2000W. ADJUST THE POWER RATE FROM LEVEL 500-3000W BY TURNING THE KNOB.
3. WHEN PRESSING FUNCTION BUTTON, THE LIGHT OF TEMP WILL SHINE. ADJUST THE TEMPERATURE FROM 60°C TO 240°C BY TURNING THE KNOB.
4. ADJUST THE TIMER FROM 0 MINUTE TO 180 MINUTES BY TURNING THE KNOB.
5. WHEN PRESSING ON/OFF DURING THE WORKING STATE, THE INDUCTION COOKER WILL STOP WORKING IMMEDIATELY. AFTER STOPPING WORKING, THE FAN WILL COOL DOWN THE INDUCTION COOKER FOR ONE MINUTE, AND THEN WILL BE SHUT OFF.
6. THE INDUCTION COOKER WILL SHUT OFF AUTOMATICALLY IF THERE IS NO ANY OPERATION WITHIN 2 HOURS IF TIMER IS NOT SET ABOVE 120 MINUTES.
7. THIS APPLIANCE IS LIABLE TO GET HOT DURING USE.
8. THE TEMPERATURE OF ACCESSIBLE SURFACES MAY BE HIGH WHEN THE APPLIANCE IS OPERATING.

## 5. USABLE AND NON-USABLE UTENSILS

### 5.1. USABLE PANS

STEEL OR CAST IRON, ENAMELED IRON, STAINLESS STEEL, FLAT-BOTTOM PANS / POTS WITH DIAMETER FROM 12 TO 26CM.



ENAMELED IRON  
POT



IRON OR ENAMELED  
IRON POT



CAST IRON PAN



IRON POT



DEEP-FRY PAN



STAINLESS STEEL POT



IRON PLATE

### 5.2. NON-USABLE PANS

HEAT-RESISTANT GLASS, CERAMIC CONTAINER, COPPER, ALUMINUM PANS/POTS. ROUNDED-BOTTOM PANS/POTS WITH BOTTOM MEASURING LESS THAN 12CM.



ROUNDED BOTTOM  
POT



ALUMINIUM COPPER POT



BOTTOM MEASURING LESS  
THAN 12CM



POT WITH STAND



CERAMIC POT  
GLASS POT



HEAT RESISTANT



## 6. CLEANING

1. DISCONNECT PLUG AND WAIT UNTIL THE UNIT IS COOLED DOWN COMPLETELY. CLEAN AFTER USING EVERY TIME.
2. IF THE POTS/PANS ARE USED WITHOUT BEING CLEANED, DISCOLORATION OR COOKED ON STAINS MAY BE CAUSED.
3. DO NOT USE BENZINE, THINNER, SCRUBBING BRUSH OR POLISHING POWDER TO CLEAN THE INDUCTION COOKER.
4. WIPE USING DISH WASHING AGENT AND DAMP CLOTH.
5. USE VACUUM CLEANER TO SUCK UP DIRT FROM THE AIR INTAKE AND EXHAUST VENT.
6. NEVER RUN WATER OVER THE UNIT (WATER GETS INSIDE MAY CAUSE MALFUNCTION).

## 7. TROUBLESHOOTING

ERROR CODE	POSSIBLE CAUSE	ACTION/SOLUTION
E0	NO PAN OR UNSUITABLE PAN.	SUITABLE PAN.
E1	TEMPERATURE OF IGBT IS TOO HIGH OR TEMPERATURE TESTING CIRCUIT FAILURE.	CLEAR/UNBLOCK VENTILATION SLOTS.LET THE DEVICE COOL OFF FOR A FEW MINUTES.THE DEVICE IS READY FOR THE ERROR MESSAGE REMAINS INDICATED IN THE DISPLAY AFTER THE DIVICE HAS COOLED OFF . CONTACT RETAILER.
E2	HEATING EMPTY PAN, TEMPERATURE OF PAN IS TOO HIGH OR TEMPERATURE TESTING CIRCUIT OF PAN IS FAIL.	REMOVE THE COOKWARE FORM THE HOB. LET THE DEVICE COOL OFF FOR A FEW MINUTES .THE DEVICE IS READY FOR OPERATION AFTERWARDS.
E3	VOLTAGE IS UNUSUAL.	LET THE DEVICE COOL OFF FOR A FEW MINUTES. THE DEVICES IS READY FOR OPERATION AFTERWARDS

## 8. SERVICE AND SUPPORT

IF YOU EXPERIENCE ANY PROBLEMS WITH THE INDUCTION HOB THAT YOU CANNOT RESOLVE USING THIS MANUAL:

1. SWITCH OFF THE APPLIANCE AND UNPLUG IT FROM THE MAINS.
2. DO NOT ATTEMPT TO DISMANTLE OR REPAIR THE APPLIANCE YOURSELF.
3. CONTACT YOUR SUPPLIER OR AN AUTHORISED SERVICE AGENT.

IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE AGENT OR SIMILARLY QUALIFIED PERSONS IN ORDER TO AVOID A HAZARD.

### IMPORTANT NOTES

- THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY ACCIDENTS OR DAMAGE CAUSED BY INCORRECT INSTALLATION, IMPROPER USE, OR UNAUTHORISED REPAIR.
- ONLY USE THE APPLIANCE FOR ITS INTENDED PURPOSE.
- ALWAYS FOLLOW BASIC SAFETY RULES AND THE INSTRUCTIONS IN THIS MANUAL.

# 9. WARRANTY TERMS

## 9.1. COVERAGE

THE INDUCTION HOB IS COVERED BY A 24-MONTH LIMITED PARTS WARRANTY FROM THE DATE OF PURCHASE AGAINST MANUFACTURING DEFECTS OR WORKMANSHIP FAULTS.

## 9.2. VALID CONDITIONS

- THE APPLIANCE MUST BE INSTALLED AND OPERATED AS DESCRIBED IN THIS MANUAL.
- THE RATING PLATE MUST REMAIN LEGIBLE AND INTACT.
- REPAIRS MUST BE CARRIED OUT BY AUTHORISED TECHNICIANS.

## 9.3. EXCLUSIONS

- DAMAGE CAUSED BY MISUSE OR IMPROPER INSTALLATION.
- WEAR FROM NORMAL PROFESSIONAL USE.
- UNAUTHORISED REPAIRS OR MODIFICATIONS.

## 9.4. SERVICE & SUPPORT

IF THE APPLIANCE FAILS TO OPERATE CORRECTLY:

1. STOP USING THE APPLIANCE AND UNPLUG IMMEDIATELY.
2. DO NOT ATTEMPT SELF-REPAIR.
3. CONTACT YOUR AUTHORISED DISTRIBUTOR OR SERVICE PROVIDER WITH PROOF OF PURCHASE AND THE MODEL NUMBER.
4. FOLLOW GUIDANCE FROM THE AUTHORISED SERVICE REPRESENTATIVE.

### **SAVE THIS USER MANUAL FOR FUTURE REFERENCE**

USE ONLY AS INTENDED. OPERATE SAFELY. MAINTAIN REGULARLY.



HO1013 • CONTENDER HEAVY DUTY COMMERCIAL INDUCTION HOB 3KW



**STEP UP TO THE PLATE**

Distributed by RG Distributors Ltd | Unit 7 Jade Business Park | Spring Road | Seaham | SR7 9DR

**SERVICE & SUPPORT:**  **0333 358 3678**  **sales@ecatering.co.uk**

**Office Hours:** Mon - Fri 9:00AM - 5:00PM (excluding public holidays)