
CONTENDER

STEP UP TO THE PLATE



CONTENDER 2 DOOR DUAL TEMPERATURE PREP COUNTER – FRIDGE & FREEZER

RGP088

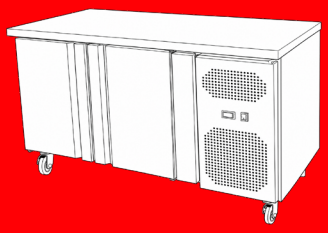

CONTENTS

1. SAFETY TIPS 3
2. INTRODUCTION 4
3. PACK CONTENTS 5
4. INSTALLATION 5
5. OPERATION 6
6. CLEANING, CARE & MAINTENANCE 8
7. ASSEMBLY GUIDE 9
8. TROUBLESHOOTING 11
9. DISPOSAL 12
10. COMPLIANCE 12
11. WARRANTY 13

I. SAFETY TIPS

- POSITION ON A FLAT AND STABLE SURFACE.
- A SERVICE AGENT/QUALIFIED TECHNICIAN SHOULD CARRY OUT INSTALLATION AND ANY REPAIRS IF REQUIRED. DO NOT REMOVE ANY COMPONENTS OR SERVICE PANELS ON THIS PRODUCT.
- CONSULT LOCAL AND NATIONAL STANDARDS TO COMPLY WITH THE FOLLOWING:
  - HEALTH AND SAFETY AT WORK LEGISLATION.
  - BS EN CODES OF PRACTICE.
  - FIRE PRECAUTIONS.
  - IET WIRING REGULATIONS (BS 7671).
  - BUILDING REGULATIONS.
- DO NOT USE JET/PRESSURE WASHERS TO CLEAN THE APPLIANCE.
- DO NOT USE THE APPLIANCE OUTSIDE.
- DO NOT USE THIS APPLIANCE TO STORE MEDICAL SUPPLIES OR BLOOD PRODUCTS.
- DO NOT USE ELECTRICAL APPLIANCES INSIDE THIS PRODUCT (E.G. HEATERS, ICE-CREAM MAKERS ETC.).
- DO NOT ALLOW OIL OR FAT TO COME INTO CONTACT WITH THE PLASTIC COMPONENTS OR DOOR SEALS. CLEAN IMMEDIATELY IF CONTACT OCCURS.
- DO NOT PLACE MORE THAN 30KG LOAD ON EACH SHELF.
- BOTTLES WHICH CONTAIN A HIGH PERCENTAGE OF ALCOHOL MUST BE SEALED AND PLACED VERTICALLY IN THE APPLIANCE.
- ALWAYS CARRY, STORE AND HANDLE THE APPLIANCE IN A VERTICAL POSITION AND MOVE BY HOLDING THE BASE OF THE APPLIANCE.
- ALWAYS SWITCH OFF AND DISCONNECT THE POWER SUPPLY TO THE UNIT BEFORE CLEANING.
- KEEP ALL PACKAGING AWAY FROM CHILDREN. DISPOSE OF THE PACKAGING IN ACCORDANCE WITH THE REGULATIONS OF LOCAL AUTHORITIES.
- IF THE POWER CORD IS DAMAGED, IT MUST BE REPLACED BY AN AGENT OR A RECOMMENDED QUALIFIED TECHNICIAN IN ORDER TO AVOID HAZARD.
- DO NOT STORE EXPLOSIVE SUBSTANCES SUCH AS AEROSOL CANS WITH A FLAMMABLE PROPELLANT IN THIS APPLIANCE.
- THIS APPLIANCE CAN BE USED BY CHILDREN AGED FROM 8 YEARS AND ABOVE AND PERSONS WITH REDUCED PHYSICAL, SENSORY OR MENTAL CAPABILITIES OR LACK OF EXPERIENCE AND KNOWLEDGE IF THEY HAVE BEEN GIVEN SUPERVISION OR INSTRUCTION CONCERNING USE OF THE APPLIANCE IN A SAFE WAY AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN SHALL NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE SHALL NOT BE CARRIED OUT BY CHILDREN WITHOUT SUPERVISION.

WARNING

KEEP VENTILATION OPENINGS, IN THE APPLIANCE ENCLOSURE OR IN THE BUILT-IN STRUCTURE, CLEAR OF OBSTRUCTION. DO NOT USE MECHANICAL DEVICES OR OTHER MEANS TO ACCELERATE THE DEFROSTING PROCESS, OTHER THAN THOSE RECOMMENDED BY THE MANUFACTURER. DO NOT DAMAGE THE APPLIANCE CIRCUIT. DO NOT USE ELECTRICAL APPLIANCES INSIDE THE FOOD STORAGE COMPARTMENTS OF THE APPLIANCE, UNLESS THEY ARE OF THE TYPE RECOMMENDED BY THE MANUFACTURER.

WARNING




THIS APPLIANCE USES A FLAMMABLE HYDROCARBON REFRIGERANT (R290 AND/OR R600A). REFER TO THE RATING LABEL FOR THE EXACT REFRIGERANT TYPE AND CHARGE WEIGHT. KEEP ANY VENTILATION OPENINGS CLEAR OF OBSTRUCTION, DO NOT PUNCTURE THE REFRIGERANT CIRCUIT, AND KEEP NAKED FLAMES OR OTHER IGNITION SOURCES AWAY FROM THE APPLIANCE. ONLY A QUALIFIED TECHNICIAN TRAINED IN FLAMMABLE REFRIGERANTS SHOULD CARRY OUT SERVICING.


2. INTRODUCTION

PLEASE TAKE A FEW MOMENTS TO CAREFULLY READ THROUGH THIS MANUAL. CORRECT INSTALLATION, MAINTENANCE AND OPERATION OF THIS MACHINE WILL PROVIDE THE BEST POSSIBLE PERFORMANCE FROM YOUR PRODUCT.

THIS UNIT IS A DUAL TEMPERATURE PREP COUNTER, PROVIDING INDEPENDENT REFRIGERATED STORAGE ON ONE SIDE AND INDEPENDENT FROZEN STORAGE ON THE OTHER. EACH SIDE IS CONTROLLED BY ITS OWN DIGITAL THERMOSTAT AND REFRIGERATION CIRCUIT, SO THE FRIDGE SIDE AND FREEZER SIDE CAN BE OPERATED, SET AND DEFROSTED COMPLETELY INDEPENDENTLY OF ONE ANOTHER.

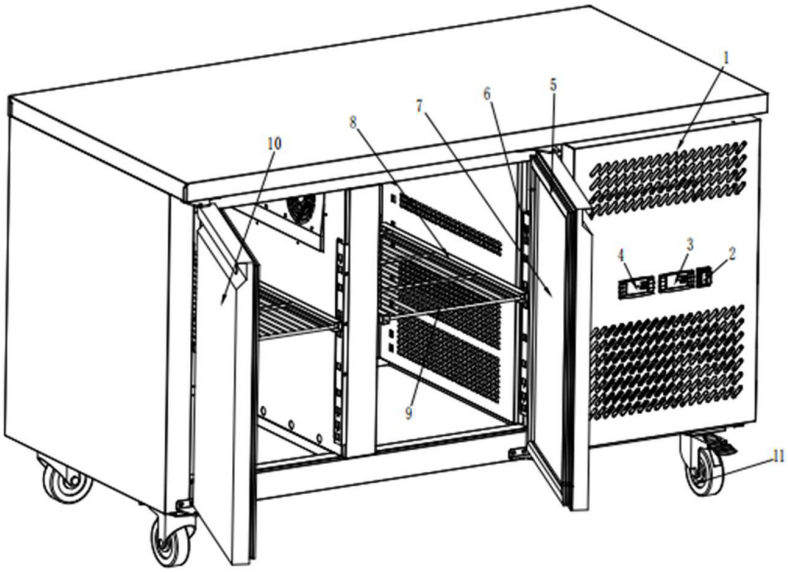

PART NO.	PART NAME
I	FRONT PANEL
2	POWER
3	THERMOSTAT (FREEZER)
4	THERMOSTAT (REFRIGERATOR)
5	GASKET
6	SHELF SUPPORT
7	FREEZER DOOR
8	SHELF GUIDE RAIL
9	SHELF
IO	REFRIGERATOR DOOR
II	FEET

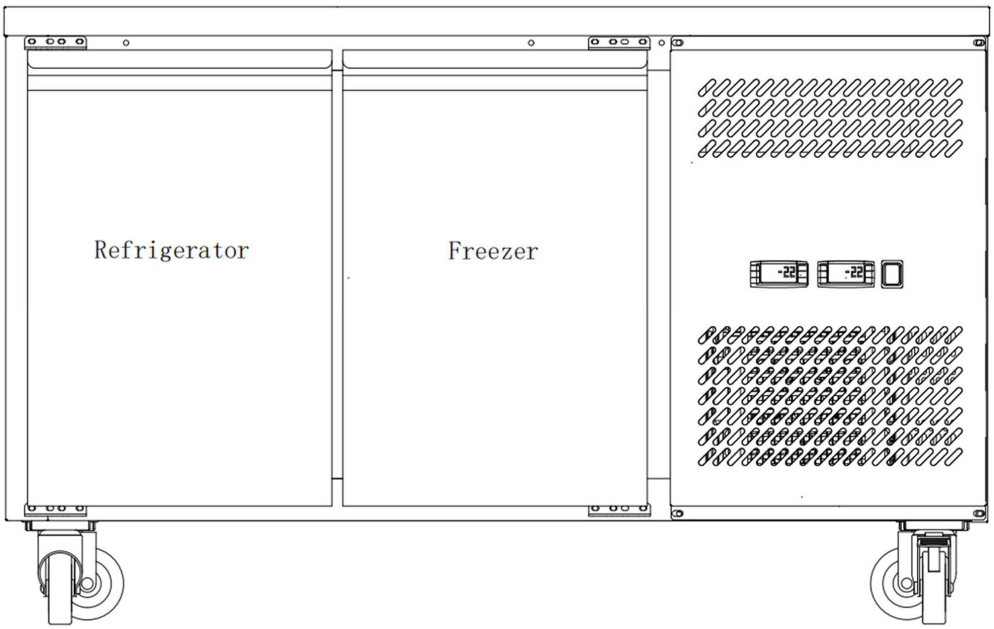

FRONT VIEW – FRIDGE SIDE (LEFT) AND FREEZER SIDE (RIGHT), EACH WITH ITS OWN CONTROL PANEL

3. PACK CONTENTS

THE FOLLOWING IS INCLUDED:

- DUAL TEMPERATURE PREP COUNTER (FRIDGE SIDE AND FREEZER SIDE)
- SHELVES
- SHELF GUIDES
- WASTE WATER TRAY
- DOOR KEYS X 2
- INSTRUCTION MANUAL
- GASTRONORM ADAPTOR BARS, IF REQUIRED WITH THE UNIT

WE PRIDE OURSELVES ON QUALITY AND SERVICE, ENSURING THAT AT THE TIME OF PACKAGING THE CONTENTS ARE SUPPLIED FULLY FUNCTIONAL AND FREE OF DAMAGE. SHOULD YOU FIND ANY DAMAGE AS A RESULT OF TRANSIT, PLEASE CONTACT YOUR DEALER IMMEDIATELY.

4. INSTALLATION

NOTE

IF THE APPLIANCE HAS BEEN STORED OR TRANSPORTED OTHER THAN IN AN UPRIGHT POSITION, ALLOW IT TO STAND UPRIGHT FOR AT LEAST 12 HOURS BEFORE SWITCHING ON. IF IN DOUBT, ALLOW ADDITIONAL TIME.

- REMOVE THE APPLIANCE FROM THE PACKAGING. MAKE SURE THAT ALL PROTECTIVE PLASTIC FILM AND COATINGS ARE THOROUGHLY REMOVED FROM ALL SURFACES. TO PREVENT INJURY OR DAMAGE TO THE UNIT, THE APPLIANCE SHOULD BE UNPACKED AND SET UP BY TWO PEOPLE.
- MAINTAIN A DISTANCE OF 20CM (7 INCHES) BETWEEN THE UNIT AND WALLS OR OTHER OBJECTS FOR VENTILATION ON BOTH THE FRIDGE SIDE AND THE FREEZER SIDE. INCREASE THIS DISTANCE IF THE OBSTACLE IS A HEAT SOURCE.
- SET THE BRAKES ON THE CASTORS TO KEEP THE APPLIANCE IN POSITION, OR LEVEL THE APPLIANCE BY ADJUSTING THE SCREW FEET, AS FITTED.
- THE TEMPERATURE IN THE PLACE WHERE THE COUNTER IS LOCATED MUST BE BETWEEN 10°C AND 32°C. AVOID LOCATING IT IN DIRECT SUNLIGHT OR NEAR A HEAT SOURCE SUCH AS AN OVEN OR RADIATOR.
- PLEASE MAKE SURE THE APPLIANCE IS PROPERLY VENTILATED.
- POWER SUPPLY AND VOLTAGE AT THE OPERATING POINT USED MUST COMPLY WITH THE DETAILS ON THE RATING LABEL. THE PLUG MUST BE ACCESSIBLE AFTER INSTALLATION.
- CORRECTLY CONNECT AND DISCONNECT THE PLUG. WHEN INSERTING THE PLUG, IT MUST BE PUSHED HOME FULLY; WHEN REMOVING IT, HOLD THE PLUG BODY SECURELY. NEVER PULL ON THE SUPPLY CORD DIRECTLY.
- IF THE COUNTER IS TO BE SHUT DOWN FOR A LONG PERIOD, SWITCH IT OFF AND DISCONNECT THE PLUG FROM THE SOCKET OUTLET. CLEAN THE APPLIANCE AND LEAVE THE DOORS OPEN TO PREVENT ODOUR.

WARNING

FOR YOUR PERSONAL SAFETY, THIS APPLIANCE MUST BE PROPERLY GROUNDED. THIS APPLIANCE IS EQUIPPED WITH A CORD HAVING A GROUNDING WIRE WITH A GROUNDING PLUG. THE PLUG MUST BE INSERTED INTO AN OUTLET THAT IS PROPERLY GROUNDED AND INSTALLED. IF IN DOUBT, HAVE A QUALIFIED ELECTRICIAN CHECK THE CIRCUIT.

NOTE

IF POWER IS CUT OFF, WAIT FOR AT LEAST 3 MINUTES BEFORE RESTARTING THE APPLIANCE, TO AVOID DAMAGING THE COMPRESSOR. THIS APPLIES INDEPENDENTLY TO BOTH THE FRIDGE SIDE AND THE FREEZER SIDE.

4.1. LOCKING THE DOORS



A LOCK IS FITTED TO EACH DOOR TO ENSURE FOODSTUFFS ARE KEPT SECURE WITHIN YOUR APPLIANCE. USE THE KEYS PROVIDED TO LOCK AND UNLOCK THE DOORS. BOTH THE FRIDGE SIDE AND FREEZER SIDE DOORS ARE LOCKABLE INDEPENDENTLY.

4.2. FITTING THE WASTE WATER TRAY

THE WASTE WATER TRAY COMES READY FITTED TO THE UNDERSIDE OF THE APPLIANCE. SIMPLY SLIDE THE TRAY INTO THE RUNNERS SITUATED UNDER THE APPLIANCE. A WASTE WATER TRAY IS FITTED TO EACH SIDE OF THE UNIT.

4.3. FITTING THE SHELVES

- PLACE ONE SET OF SHELF GUIDES ON EITHER SIDE OF THE CABINET AT THE DESIRED HEIGHT.
- SLIDE THE SHELF INTO PLACE.
- REPEAT FOR THE REMAINING SHELVES.
- THE SHELF SUPPORTS UP TO 30KG.

NOTE

THIS IS VITAL FOR ENSURING CORRECT DRAINAGE OF CONDENSATION.

5. OPERATION

5.1. STORING FOOD

TO GET THE BEST RESULTS FROM YOUR APPLIANCE, FOLLOW THESE INSTRUCTIONS:


- ONLY STORE FOODSTUFFS IN THE APPLIANCE ONCE THE RELEVANT SIDE HAS REACHED THE CORRECT OPERATING TEMPERATURE.
- ENSURE GN CONTAINER BAYS ARE ALWAYS FULL, EVEN IF THE GN CONTAINERS ARE UNUSED OR EMPTY. EMPTY BAYS WILL GREATLY REDUCE THE EFFICIENCY OF THE APPLIANCE.
- ALWAYS CLOSE THE DOORS AND LID WHEN NOT IN USE.
- DO NOT PLACE UNCOVERED HOT FOOD OR LIQUID INSIDE EITHER SIDE OF THE APPLIANCE.
- WRAP OR COVER FOOD WHERE POSSIBLE.
- DO NOT OBSTRUCT THE FANS INSIDE THE APPLIANCE.
- AVOID OPENING THE DOORS FOR PROLONGED PERIODS OF TIME.
- THE MAXIMUM LOAD FOR A SHELF IS 30KG.
- FOOD MUST BE PLACED INTO A SUITABLE CONTAINER BEFORE BEING PLACED INTO THE CABINET OR ONTO THE SHELF. FOOD MUST NOT BE PLACED INTO THE CABINET DIRECTLY.
- KEEP RAW AND READY-TO-EAT FOOD SEPARATED, AND DO NOT STORE FOODS ON THE FREEZER SIDE THAT ARE INTENDED FOR THE FRIDGE SIDE, OR VICE VERSA.
- WHEN WET FOOD OR VEGETABLES ARE PLACED IN THE COUNTER, IT IS NORMAL FOR ICE (SNOW) TO APPEAR ON THE SURFACE.

5.2. SWITCHING ON


- CLOSE THE DOOR(S) OF THE APPLIANCE.
- ENSURE THE POWER SWITCH(ES) ARE SET TO [O] AND TURN ON AT THE SOCKET.
- SWITCH ON THE POWER [I] FOR THE FRIDGE SIDE AND, SEPARATELY, FOR THE FREEZER SIDE. THE CURRENT TEMPERATURE WITHIN EACH SIDE IS DISPLAYED ON ITS OWN CONTROL PANEL.
- THE SNOWFLAKE SYMBOL ON EACH CONTROL PANEL WILL FLASH FOR 3 MINUTES FOR THE ANTI-SHORT-CYCLE DELAY BETWEEN THE MOTOR COMPRESSOR STOPPING AND THE FOLLOWING RESTART. THIS DELAY APPLIES INDEPENDENTLY TO EACH SIDE

5.3. TEMPERATURE SETTING & CONTROL

THE FRIDGE SIDE AND FREEZER SIDE EACH HAVE THEIR OWN INDEPENDENT DIGITAL THERMOSTAT, SO TEMPERATURES ARE SET AND MONITORED SEPARATELY FOR EACH SIDE.

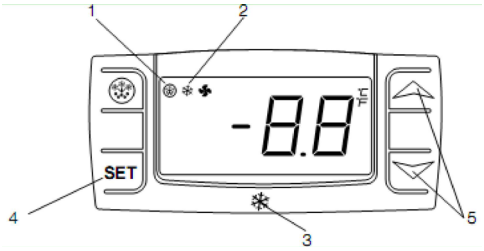

FRIDGE SIDE CONTROLLER

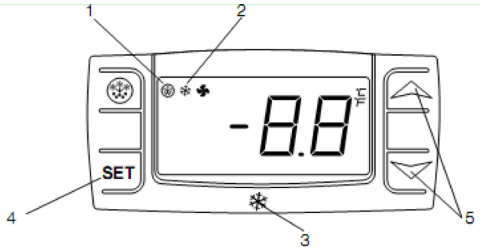

FREEZER SIDE CONTROLLER

NO.	FUNCTION
I	DEFROSTING LIGHT
2	COMPRESSOR OPERATION LIGHT
3	DIGITAL THERMOSTAT DISPLAY
4	PROGRAMMING KEY (NOT ACCESSIBLE TO THE USER) / SET SELECTION KEY
5	TEMPERATURE MODIFICATION KEYS (UP/DOWN)

5.4. HOW TO SEE THE SET POINT

- PUSH AND IMMEDIATELY RELEASE THE SET KEY ON THE RELEVANT SIDE'S CONTROL PANEL; THE SET POINT WILL BE SHOWN.
- PUSH AND IMMEDIATELY RELEASE THE SET KEY AGAIN, OR WAIT APPROXIMATELY 5 SECONDS, TO RETURN TO NORMAL DISPLAY.

5.5. HOW TO CHANGE THE SET POINT

- PUSH THE SET KEY FOR MORE THAN 2 SECONDS TO CHANGE THE SET POINT VALUE.
- THE SET POINT VALUE WILL BE DISPLAYED AND THE °C SYMBOL WILL START BLINKING.
- USE THE UP OR DOWN ARROW KEYS WITHIN IO SECONDS TO CHANGE THE SET VALUE.
- TO STORE THE NEW SET POINT VALUE, PUSH THE SET KEY AGAIN, OR WAIT IO SECONDS.

NOTE

THE FRIDGE SIDE AND FREEZER SIDE ARE SET INDEPENDENTLY, USING EACH SIDE'S OWN CONTROLLER. CHANGING THE SET POINT ON ONE SIDE HAS NO EFFECT ON THE OTHER. RECOMMENDED OPERATING RANGES ARE TYPICALLY +2°C TO +8°C FOR THE FRIDGE SIDE AND -I8°C TO -22°C FOR THE FREEZER SIDE — ALWAYS CONFIRM THE EXACT FACTORY SETPOINT AND SAFE RANGE AGAINST THE RATING LABEL OR SPEC SHEET FOR THIS UNIT BEFORE USE.

5.6. MANUAL DEFROST

EACH SIDE OF THE APPLIANCE RUNS ITS OWN AUTOMATIC DEFROST CYCLE:

- FRIDGE SIDE: THE APPLIANCE AUTOMATICALLY RUNS A DEFROST CYCLE EVERY SIX HOURS.
- FREEZER SIDE: THE APPLIANCE AUTOMATICALLY RUNS A DEFROST CYCLE EVERY FOUR HOURS.

NOTE

EACH DEFROST CYCLE STARTS COUNTING FROM THE TIME THAT SIDE OF THE APPLIANCE IS INITIALLY POWERED UP.

TO MANUALLY DEFROST EITHER SIDE OF THE APPLIANCE:

- PRESS AND HOLD THE DEFROST BUTTON ON THE RELEVANT SIDE'S CONTROL PANEL FOR 5 SECONDS.
- THE DEFROST CYCLE WILL START IMMEDIATELY ON THAT SIDE AND THE DEFROST LED ILLUMINATES. THE DEFROST WILL LAST A MAXIMUM OF 30 MINUTES.
- WASTE WATER PRODUCED DURING DEFROST IS COLLECTED IN THAT SIDE'S WASTE WATER TRAY.

NOTE

STARTING A MANUAL DEFROST ALSO RESETS THE AUTOMATIC DEFROST TIMER FOR THAT SIDE ONLY. THE NEXT AUTOMATIC DEFROST ON THAT SIDE WILL START AFTER THE STANDARD INTERVAL HAS ELAPSED FOLLOWING THE MANUAL DEFROST.

6. CLEANING, CARE & MAINTENANCE

6.I. ROUTINE MAINTENANCE

SWITCH OFF AND DISCONNECT FROM THE POWER SUPPLY BEFORE CLEANING EITHER SIDE:

- CLEAN THE ENCLOSURE AND INTERIOR OF BOTH THE FRIDGE SIDE AND FREEZER SIDE AS OFTEN AS POSSIBLE.
- WASH THE UNIT WITH A MOIST CLOTH. NEVER ALLOW THE SWITCHES, CONTROL PANELS, CABLE OR PLUG TO GET WET.
- DO NOT USE ABRASIVE CLEANING AGENTS. THESE CAN LEAVE HARMFUL RESIDUES. USE ONLY MILD SOAPY WATER.
- CLEAN THE DOOR SEALS WITH WATER ONLY.
- ENSURE THAT NO CLEANING WATER PENETRATES INTO THE ELECTRICAL COMPONENTS.
- MUST NOT BE CLEANED WITH A WATER JET.
- ALWAYS WIPE DRY AFTER CLEANING WITH A SOFT CLOTH.
- DO NOT ALLOW WATER USED IN CLEANING TO RUN THROUGH THE DRAIN HOLE INTO THE EVAPORATION PAN ON EITHER SIDE.
- TAKE CARE WHEN CLEANING THE REAR OF THE APPLIANCE – SHARP EDGES CAN CUT.
- AN AGENT OR QUALIFIED TECHNICIAN MUST CARRY OUT REPAIRS IF REQUIRED.
- IF THE APPLIANCE IS TO BE LEFT INACTIVE FOR LONG PERIODS, UNPLUG THE APPLIANCE AFTER HAVING TURNED BOTH SWITCHES TO THE OFF POSITION, EMPTY BOTH COMPARTMENTS AND CLEAN THOROUGHLY.

6.2. SPECIAL MAINTENANCE


THE INSTRUCTIONS GIVEN IN THIS SECTION ARE FOR A SKILLED PERSON:


- PERIODICALLY CLEAN BOTH CONDENSERS USING SUITABLE TOOLS (VACUUM CLEANER OR SOFT BRUSHES).
- CHECK THAT THE ELECTRICAL CONNECTIONS ARE NOT LOOSE.
- CHECK THAT EACH THERMOSTAT AND SENSOR IS IN PROPER WORKING ORDER.
- PERIODICALLY CLEANING THE CONDENSERS CAN EXTEND THE LIFE OF THE APPLIANCE.
- WE RECOMMEND THAT AN AGENT OR QUALIFIED TECHNICIAN CLEAN THE CONDENSERS.
- THE KEY TO THE ELECTRICAL CABINET SHOULD BE KEPT OUT OF THE REACH OF CHILDREN AND USERS.
- ONLY USE THE KEY TO OPEN THE LOCK.

7. ASSEMBLY GUIDE


THE FOLLOWING EXPLODED DIAGRAMS SHOW THE INTERNAL SHELF/DRAWER RUNNER ASSEMBLY FOR THIS UNIT. REFER TO THESE DIAGRAMS IF YOU NEED TO FIT OR REFIT THE INTERNAL RUNNERS ON EITHER SIDE OF THE CABINET.

7.I. SET I DRAWER ASSEMBLY GUIDE

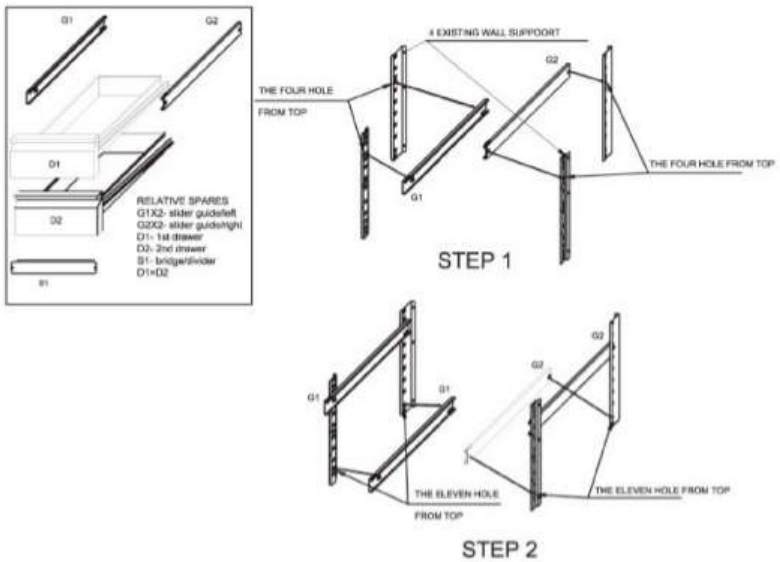

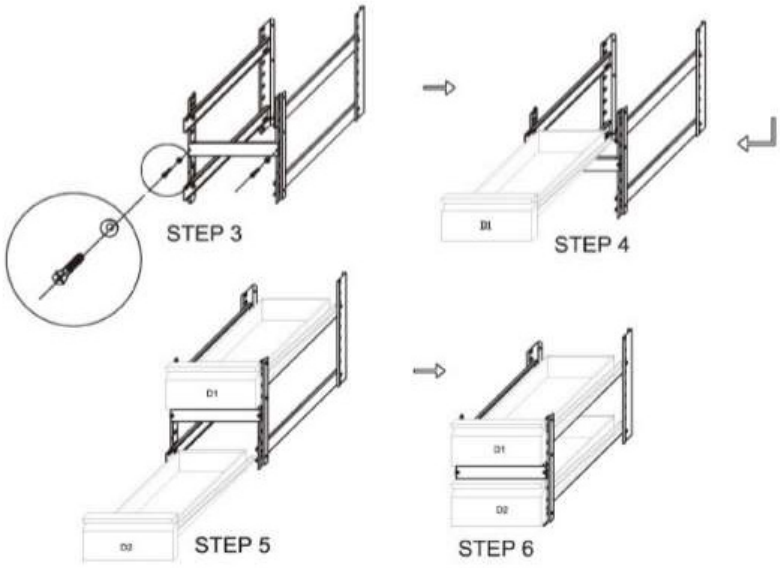

7.2. SET 2 DRAWER ASSEMBLY GUIDE

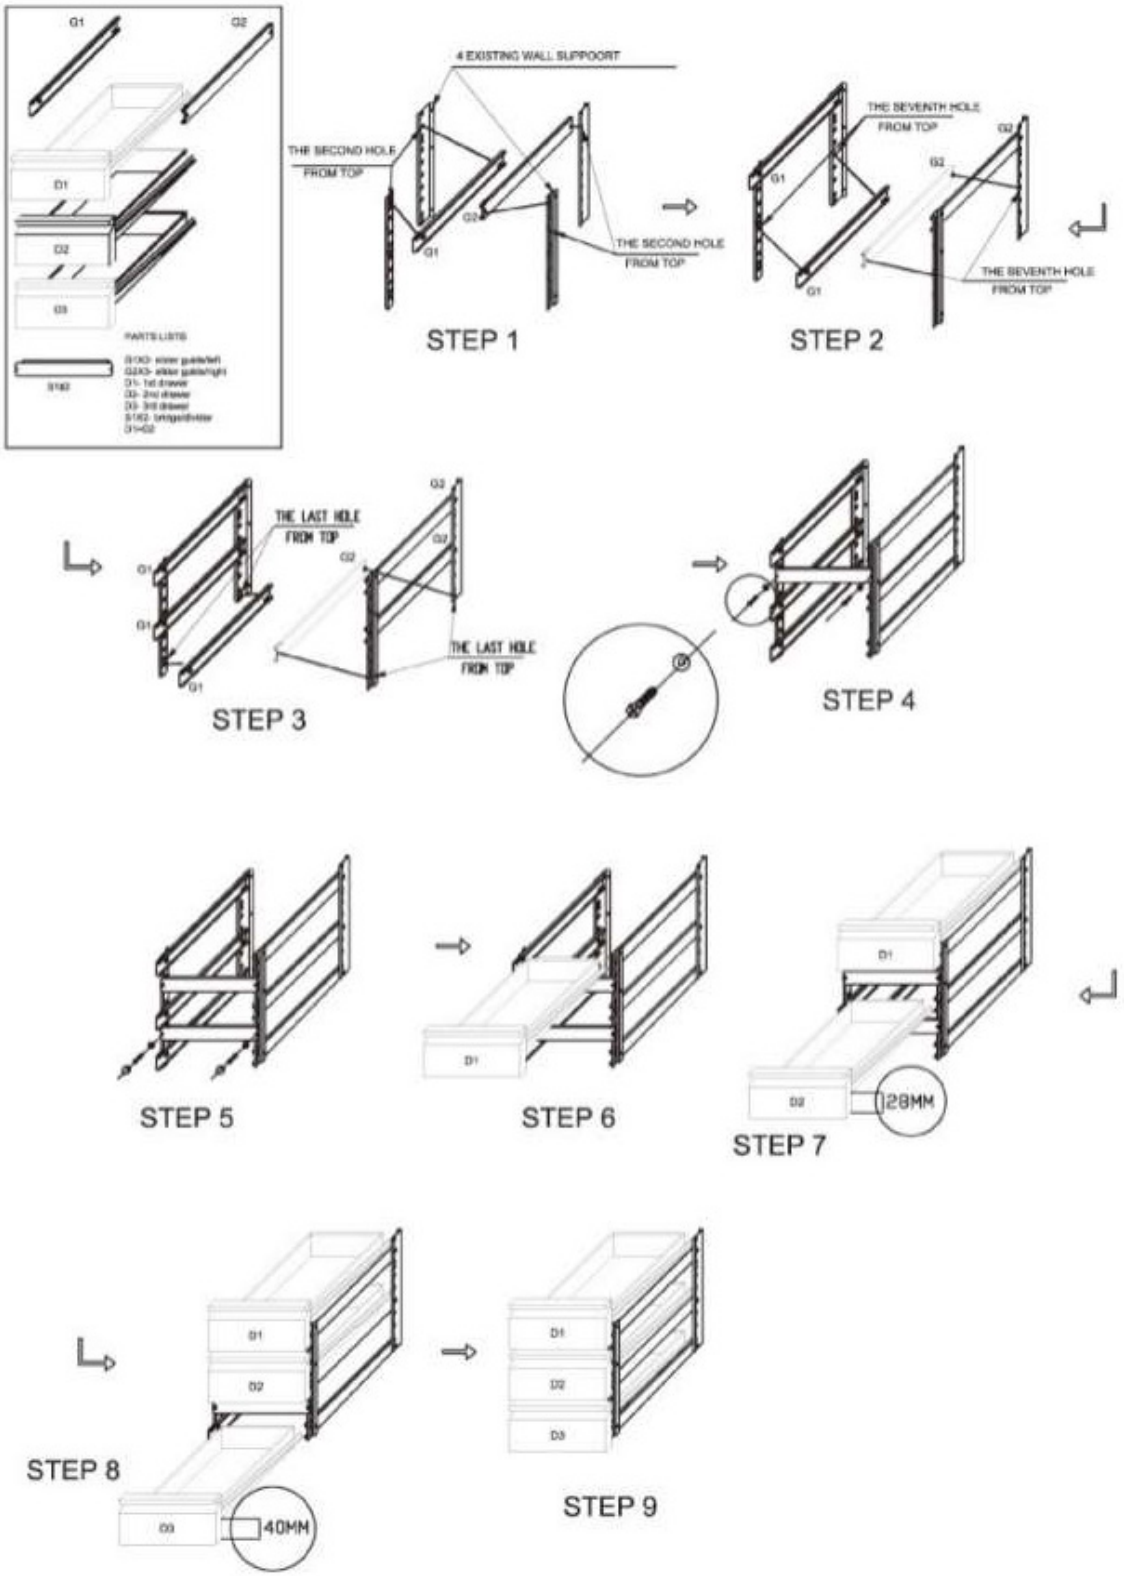

8. TROUBLESHOOTING

IF YOUR APPLIANCE DEVELOPS A FAULT, PLEASE CHECK THE FOLLOWING TABLE BEFORE MAKING A CALL TO YOUR RETAILER. REMEMBER THAT THE FRIDGE SIDE AND FREEZER SIDE OPERATE INDEPENDENTLY, SO A FAULT ON ONE SIDE DOES NOT NECESSARILY AFFECT THE OTHER.

PROBLEM	POSSIBLE CAUSE	SOLUTION
APPLIANCE NOT WORKING	UNIT NOT SWITCHED ON	CHECK THE UNIT IS PLUGGED IN CORRECTLY AND SWITCHED ON
	PLUG OR LEAD DAMAGED	CONTACT YOUR AGENT OR A QUALIFIED TECHNICIAN
	FUSE IN PLUG HAS BLOWN	REPLACE THE FUSE
	POWER SUPPLY FAULT	CHECK THE MAINS POWER SUPPLY
	INTERNAL WIRING FAULT	CONTACT YOUR AGENT OR A QUALIFIED TECHNICIAN
ONE SIDE TURNS ON, BUT THE TEMPERATURE IS TOO HIGH/LOW	TOO MUCH ICE ON THE EVAPORATOR	DEFROST THAT SIDE OF THE APPLIANCE
	CONDENSER BLOCKED WITH DUST	CALL YOUR AGENT OR QUALIFIED TECHNICIAN
	DOORS ARE NOT SHUT PROPERLY	CHECK DOORS ARE SHUT AND SEALS ARE NOT DAMAGED
	APPLIANCE IS LOCATED NEAR A HEAT SOURCE, OR AIRFLOW TO THE CONDENSER IS INTERRUPTED	MOVE THE APPLIANCE TO A MORE SUITABLE LOCATION
	AMBIENT TEMPERATURE IS TOO HIGH	INCREASE VENTILATION OR MOVE APPLIANCE TO A COOLER POSITION
	UNSUITABLE FOODSTUFFS ARE BEING STORED IN THE APPLIANCE	REMOVE ANY EXCESSIVE HOT FOODSTUFF OR BLOCKAGES TO THE FAN
	APPLIANCE IS OVERLOADED	REDUCE THE AMOUNT OF FOOD STORED IN THAT SIDE OF THE APPLIANCE
THE APPLIANCE IS LEAKING WATER	THE APPLIANCE IS NOT PROPERLY LEVELLED	ADJUST THE SCREW FEET TO LEVEL THE APPLIANCE (IF APPLICABLE)
	THE DISCHARGE OUTLET IS BLOCKED	CLEAR THE DISCHARGE OUTLET
	MOVEMENT OF WATER TO DRAIN IS OBSTRUCTED	CLEAR THE FLOOR OF THE APPLIANCE (IF APPLICABLE)
	THE WASTE WATER TRAY IS DAMAGED	CALL YOUR AGENT OR QUALIFIED TECHNICIAN
	THE WASTE WATER TRAY IS OVERFLOWING	EMPTY THE WASTE WATER TRAY
THE APPLIANCE IS UNUSUALLY LOUD	LOOSE NUT/SCREW	CHECK AND TIGHTEN ALL NUTS AND SCREWS
	THE APPLIANCE HAS NOT BEEN INSTALLED IN A LEVEL OR STABLE POSITION	CHECK INSTALLATION POSITION AND ADJUST AS NECESSARY

9. DISPOSAL

EU AND UK REGULATIONS REQUIRE REFRIGERATION PRODUCT TO BE DISPOSED OF BY SPECIALIST COMPANIES WHO REMOVE OR RECYCLE ALL GASSES, METAL AND PLASTIC COMPONENTS.

CONSULT YOUR LOCAL WASTE COLLECTION AUTHORITY REGARDING DISPOSAL OF YOUR APPLIANCE. LOCAL AUTHORITIES ARE NOT OBLIGED TO DISPOSE OF COMMERCIAL REFRIGERATION EQUIPMENT BUT MAY BE ABLE TO OFFER ADVICE ON HOW TO DISPOSE OF THE EQUIPMENT LOCALLY.

WARNING

THIS APPLIANCE CONTAINS FLAMMABLE REFRIGERANT (R290/R600A). IT MUST NOT BE DISPOSED OF BY INCINERATION, CRUSHING OR ANY METHOD THAT COULD RUPTURE THE REFRIGERANT CIRCUIT. DISPOSAL MUST BE CARRIED OUT BY A SPECIALIST WEEE/F-GAS REGISTERED CONTRACTOR.

10. COMPLIANCE

THIS PRODUCT HAS UNDERGONE STRICT PRODUCT TESTING IN ORDER TO COMPLY WITH THE REGULATORY STANDARDS AND SPECIFICATIONS SET BY UK AND INTERNATIONAL AUTHORITIES, INCLUDING:


- BS EN 60335-1 – HOUSEHOLD AND SIMILAR ELECTRICAL APPLIANCES – SAFETY – GENERAL REQUIREMENTS.
- BS EN 60335-2-89 – PARTICULAR REQUIREMENTS FOR COMMERCIAL REFRIGERATING APPLIANCES WITH AN INCORPORATED OR REMOTE REFRIGERANT CONDENSING UNIT OR COMPRESSOR.
- BS EN 378 – REFRIGERATING SYSTEMS AND HEAT PUMPS – SAFETY AND ENVIRONMENTAL REQUIREMENTS (FLAMMABLE REFRIGERANT SAFETY).
- WEEE REGULATIONS 2013 – WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT.
- IET WIRING REGULATIONS, BS 7671 – FOR ANY ASSOCIATED FIXED ELECTRICAL INSTALLATION WORK.
- UKCA AND CE MARKING, AS APPLICABLE TO THE MARKET OF SALE.

THIS APPLIANCE USES A NATURAL HYDROCARBON REFRIGERANT (R290 AND/OR R600A). AS A HYDROCARBON RATHER THAN A FLUORINATED GAS, IT DOES NOT FALL WITHIN THE SCOPE OF THE F-GAS REGULATIONS; HOWEVER, IT IS MANUFACTURED AND MUST BE SERVICED IN ACCORDANCE WITH THE FLAMMABLE REFRIGERANT SAFETY REQUIREMENTS OF BS EN 378 AND BS EN 60335-2-89. REFER TO THE RATING LABEL FOR THE EXACT REFRIGERANT TYPE AND CHARGE.



RECYCLABLE PACKAGING



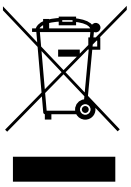

WEEE – DO NOT DISPOSE IN DOMESTIC WASTE

NOTE

IN CASE THE SUPPLY CABLE IS DAMAGED, THE MANUFACTURER, AFTER-SALES SERVICE, OR A QUALIFIED TECHNICIAN SHALL REPLACE IT IN ORDER TO PREVENT ANY POSSIBLE RISK. ONLY QUALIFIED TECHNICIANS SHALL CARRY OUT EXTRAORDINARY MAINTENANCE INTERVENTIONS.

II. WARRANTY

II.I. WARRANTY COVERAGE

CONTENDER WARRANTS THIS APPLIANCE AGAINST DEFECTS IN MATERIALS AND WORKMANSHIP FROM THE DATE OF ORIGINAL PURCHASE BY THE END-USER CUSTOMER AS FOLLOWS:

II.2. WHAT IS COVERED

DURING THE APPLICABLE WARRANTY PERIOD, CONTENDER WILL, AT ITS SOLE DISCRETION, REPAIR OR REPLACE (WITH A NEW OR REFURBISHED EQUIVALENT) ANY DEFECTIVE PART, FREE OF CHARGE, PROVIDED THE APPLIANCE HAS BEEN USED IN ACCORDANCE WITH THIS INSTRUCTION MANUAL AND ALL RELEVANT LEGISLATION.

- DEFECTS IN MATERIALS OR WORKMANSHIP PRESENT AT THE TIME OF MANUFACTURE.
- COMPONENT FAILURES OCCURRING UNDER NORMAL COMMERCIAL OPERATING CONDITIONS.
- ELECTRICAL FAULTS ARISING FROM MANUFACTURING DEFECTS.

II.3. WHAT IS NOT COVERED

- DAMAGE CAUSED BY ACCIDENT, MISUSE, NEGLECT, UNAUTHORISED MODIFICATION, OR USE CONTRARY TO THIS MANUAL.
- DAMAGE ARISING FROM FAILURE TO INSTALL, OPERATE, OR MAINTAIN THE APPLIANCE IN ACCORDANCE WITH THIS MANUAL.
- DAMAGE CAUSED BY USE OF NON-APPROVED PARTS, ACCESSORIES, OR REFRIGERANTS.
- NORMAL WEAR AND TEAR, INCLUDING COSMETIC DAMAGE (SCRATCHES, DENTS, DISCOLOURATION).
- CONSUMABLE PARTS (DOOR SEALS, LAMPS, FILTERS) AFTER THE 90-DAY CONSUMABLES PERIOD.
- DAMAGE RESULTING FROM THE USE OF THE APPLIANCE OUTSIDE OF ITS INTENDED COMMERCIAL PURPOSE.
- DAMAGE CAUSED BY POWER SURGES, FLUCTUATIONS, OR INADEQUATE ELECTRICAL SUPPLY.
- DAMAGE CAUSED BY INADEQUATE VENTILATION OR INSTALLATION NOT IN ACCORDANCE WITH THIS MANUAL.
- COSTS ASSOCIATED WITH GAINING ACCESS TO THE APPLIANCE FOR SERVICE (E.G. REMOVAL FROM BUILT-IN INSTALLATIONS).
- CLAIMS MADE WITHOUT VALID PROOF OF PURCHASE.

COMPONENT	PARTS	LABOUR
COMPRESSOR	2 YEARS	DEPENDING ON THE PACKAGE SELECTED AT THE TIME OF PURCHASE.
REFRIGERATION SYSTEM (EXCLUDING COMPRESSOR)	2 YEARS	DEPENDING ON THE PACKAGE SELECTED AT THE TIME OF PURCHASE.
ELECTRICAL & ELECTRONIC COMPONENTS	I YEAR	DEPENDING ON THE PACKAGE SELECTED AT THE TIME OF PURCHASE.
CABINET & STRUCTURAL COMPONENTS	2 YEARS	DEPENDING ON THE PACKAGE SELECTED AT THE TIME OF PURCHASE.
CONSUMABLES (SEALS, BULBS, FILTERS)	90 DAYS	DEPENDING ON THE PACKAGE SELECTED AT THE TIME OF PURCHASE.

NOTE

THE WARRANTY PERIODS COMMENCE FROM THE DATE OF PURCHASE BY THE ORIGINAL END-USER. PROOF OF PURCHASE IS REQUIRED FOR ALL WARRANTY CLAIMS.

II.4. MAKING A WARRANTY CLAIM

CONTACT THE AUTHORISED CONTENDER DEALER OR SERVICE AGENT FROM WHOM THE APPLIANCE WAS PURCHASED. PLEASE PROVIDE:

- PROOF OF PURCHASE SHOWING THE DATE AND PLACE OF PURCHASE.
- THE MODEL NUMBER (SKU) AND SERIAL NUMBER FROM THE RATING PLATE.
- DETAILS OF THE FAULT, INCLUDING ANY DISPLAYED ERROR CODES.

WARRANTY WORK MUST ONLY BE CARRIED OUT BY AN AUTHORISED CONTENDER SERVICE AGENT. UNAUTHORISED REPAIRS WILL INVALIDATE THE WARRANTY.

II.5. LIMITATION OF LIABILITY

TO THE FULLEST EXTENT PERMITTED BY LAW, THE REMEDIES PROVIDED UNDER THIS WARRANTY ARE THE BUYER'S SOLE REMEDIES. CONTENDER IS NOT LIABLE FOR INCIDENTAL, SPECIAL OR CONSEQUENTIAL LOSSES, INCLUDING LOSS OF PROFITS, REVENUE, STORED FOOD OR BUSINESS INTERRUPTION. THIS WARRANTY DOES NOT AFFECT YOUR RIGHTS UNDER THE UK CONSUMER RIGHTS ACT 2015 OR EQUIVALENT EU LEGISLATION, WHERE APPLICABLE.

II.6. WARRANTY REGISTRATION

RETAIN YOUR PROOF OF PURCHASE AND CONFIRM WARRANTY REGISTRATION WITH YOUR DEALER WITHIN 30 DAYS OF INSTALLATION. KEEP RECORDS OF REGULAR CLEANING AND MAINTENANCE TO SUPPORT ANY FUTURE CLAIM.

NOTE

NOTHING IN THIS WARRANTY AFFECTS YOUR STATUTORY RIGHTS UNDER UK OR EU CONSUMER PROTECTION LEGISLATION. FOR COMMERCIAL BUYERS, THE WARRANTY TERMS ABOVE REPRESENT THE ENTIRETY OF CONTENDER'S LIABILITY IN RESPECT OF PRODUCT DEFECTS.



CONTENDER

STEP UP TO THE PLATE

Distributed by RG Distributors Ltd | Unit 7 Jade Business Park | Spring Road | Seaham | SR7 9DR

SERVICE & SUPPORT: **0333 358 3678** **sales@ecatering.co.uk**

Office Hours: Mon – Fri 9:00AM – 5:00PM (excluding public holidays)