COMMERCIAL MICROWAVE OVEN
USER MANUAL

MODEL

SKU Code	Product Dimensions	Net Weight	Power
MIC055	420 x 563 x 340mm	31.6kg	230-240V~50Hz 1800W



PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

(a) Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.

(b) Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

(c) WARNING: If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

Specifications

Model	MIC055
Rated Voltage	230-240 V~ 50 Hz
Microwave Input	3000 W
Microwave Output	1800 W

IMPORTANT SAFETY INSTRUCTIONS

WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:

1. Read and follow the specific:"PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY".

2. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

3. Keep the appliance and its cord out of reach of children less than 8 years.

4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

5. WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

6. WARNING: It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

7. WARNING: Liquids and other foods must not be heated in sealed containers since they are liable to explode.

8. When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.

9. Only use utensils that are suitable for use in microwave ovens.

10. If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

11. WARNING: Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

12. WARNING : The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

13. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

14. The oven should be cleaned regularly and any food deposits should be removed.

15. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

16. The appliance must not be cleaned with a water jet.

17. Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)

18. Metallic containers for food and beverages are not allowed during microwave cooking.

19. The appliance shall not be cleaned with a steam cleaner.

READ MANUAL CAREFULLY AND KEEP FOR FUTURE REFERENCE

IMPORTANT, READ CAREFULLY.

DANGER

Electric Shock Hazard Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

WARNING

This product is an electrical appliance and if not used correctly or used while damaged could cause electric shock.
This appliance MUST be earthed, in the event of an electrical short circuit this will reduce the risk of an electric shock. The unit is supplied with an earthed cable with an earthed plug. you must ensure that the plug is plugged into an earthed socket. Consult a qualified electrician should you have any doubt as to the installation. The unit is supplied with a power cord, DO NOT change the cord this should only be completed by a trained electrician and may invalidate the warranty.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.

2. Extension cord should be complete unwound before use.
   There may be a risk of overheating and possible fire if the extension cable is left wound.

3. If a long cord set or extension cord is used:
   1) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
   2) The extension cord must be a grounding-type 3-wire cord.
   3) The long cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

CAUTION

Personal Injury Hazard

It is hazardous for anyone other than a compentent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

See the instructions on "Materials you can use in microwave oven or to be avoided in microwave oven." There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.

Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 minute.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 minute cooking time.

Materials you can use in microwave oven

Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.
Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.
Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.
Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.
Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.
Paper plates and cups	Use for short–term cooking/warming only. Do not leave oven unattended while cooking.
Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.
Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.
Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package.
Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food.
Thermometers	Microwave-safe only (meat and candy thermometers).
Wax paper	Use as a cover to prevent splattering and retain moisture.

Materials to be avoided in microwave oven

Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.
Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.
Metal or metaltrimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.
Metal twist ties	May cause arcing and could cause a fire in the oven.
Paper bags	May cause a fire in the oven.
Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.
Wood	Wood will dry out when used in the microwave oven and may split or crack.

Names of Oven Parts and Accessories

(In case of any differences between the appliance and the pictures in this manual, the product shall prevail.)

Remove the oven and all materials from the carton and oven cavity.
Your oven comes with the following accessories:

Instruction Manual 1


A) Control panel

B) Safety interlock system

C) Observation window

D) Ceramic board

E) Filter

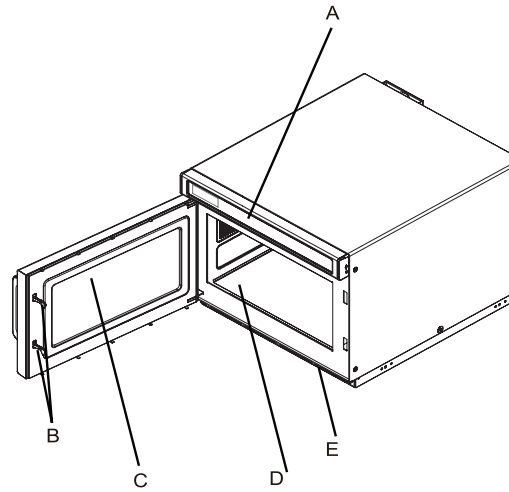

Note:

1. Don't press the ceramic board forcibly.
2. Take and put the utensils gently during the operation in order to avoid damage to the ceramic board.
3. After using, don't touch the ceramic board by hand in order to avoid high temperature scald.

Countertop Installation

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.


Cabinet: Remove any protective film found on the microwave oven cabinet surface.

Installation

Select a level surface that provide enough open space for the intake and/ or outlet vents (Figure1) .

A 10-cm spacing should be kept between the appliance and right and back walls, and a 30-cm spacing kept on the top.Never dismantle the applicance's feet ,nor block the air intake and exhaust opening. The left side must be open.

Fig 1

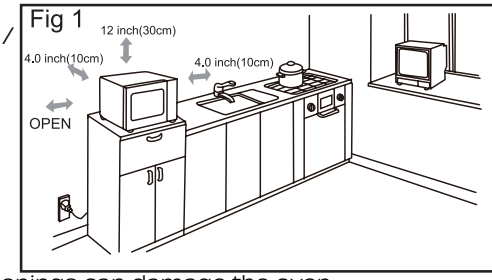

1) Blocking the intake and/or outlet openings can damage the oven.

2) Place the oven as far away from radios and TV as possible. Operation of microwave oven may cause interference to your radio or TV reception.

3) Plug your oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.


4) Warning: The plug socket,electric appliances or the appliance which are liable effected by heat and moisture should be kept away from any vents on the oven.

2. Stacking and installation of the microwave oven. The maximum height of stacking shall be two layers. Specific stacking installation is as follows

(A) Unscrew and remove the mounting plate, and then tighten the screws.

(B) Remove the four screws as shown in Figure.

(C) Mount the mounting plate to the lower position and fix the screws that are just loosened.

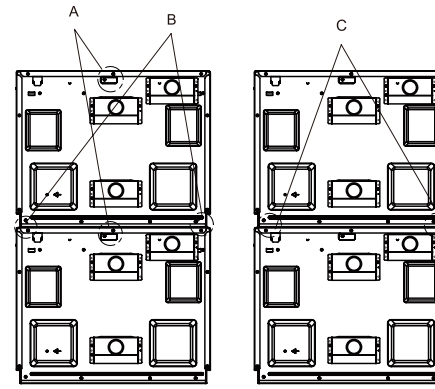

CONTENDER

Cleaning Instructions

Always keep the oven clean

1. Cleaning the glass viewing window, the inner door panel and oven front face. For best performance and to maintain the high degree of safety, the inner door panel and oven front face should be free of food or grease build-up. Wipe these parts with a mild detergent, rinse and wipe dry. Never use abrasive powders or pads.

2. Cleaning the control panel and plastic parts. Do not apply a detergent or an alkaline liquid spray to the control panel and plastic parts, as this may cause damage to these parts. Use a dry cloth (not a soaked cloth) to clean these parts.


3. Cleaning the oven interior
   After use be sure to clean up spilled liquids, spattered oil and food debris as quickly as possible. If the oven is used when dirty, efficiency drops and the dirt gets stuck on the oven surface and may cause bad odours. Clean the interior with a cloth soaked in warm water with a mild detergent dissolved in it, then rinse the soap off with a damp cloth.

4. Cleaning the filter regularly, keep it clear. The appliance will over heat when the filter is blocked.

5. When the appliance is operated,oil blockage and filter location must correct, avioding to damage other parts.

CAUTION: Do Not wipe plastic and painted sections of the oven with bleach, thinners or other cleaning agents, as this may cause these parts to dissolve or change sharp.

Control Panel(with braille) and Features

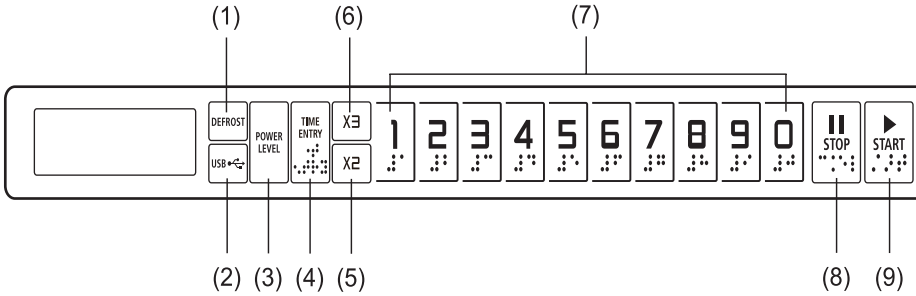

(1) Defrost Button

(2) USB Button

(3) Power Level Button

(4) Time Entry Button

(5) Double Quantity Button

(6) Triple Quantity Button

(7) Number Buttons

(8) Stop Button

(9) Start Button

Appendix. A User Options

Items bolded below are the default values.

OPTION	SETTING	DISCRIPTION
1 EOC Tone	**OP:10**	**Beeper sounds three times**
	OP:11	Continuous beep
	OP:12	5 quick beeps (repeating)
2 Beeper Volume	OP:20	Beeper Off
	OP:21	Low
	OP:22	Medium
	OP:23	**High**
3 Key Tone On/Off	OP:30	Off
	OP:31	**On**
4 Keyboard Window	OP:40	no operation in ready, pause or set state for 15sec, idle mode will be entered
	OP:41	No operation in ready, pause or set state for 30sec, idle mode will be entered
	OP:42	**No operation in ready, pause or set state for 60sec, idle mode will be entered**
	OP:43	No operation in ready, pause or set state for 120sec, idle mode will be entered
5 On the Fly	OP:50	Pressing number keys can't switch
	OP:51	**Pressing number keys can switch**
6 Door Reset	**OP:60**	**Open the door to enter pause mode**
	OP:61	Open the door and return
7 Max Time	**OP:70**	**60 Minute Maximum Cook Time**
	OP:71	10 Minute Maximum Cook Time
8 Manual Programming	OP:80	Manual Programming disabled
	OP:81	**Manual Programming Enabled**
0 Clean Filter	OP:00	Off-Never Display Clean filter
	OP:01	Weekly-Display every 7 days
	OP:02	**Monthly-Display every 30 days**
	OP:03	Quarterly-Display every 90 days

Note: See " User Option Mode" for detailed setting steps.

Appendix. B Default Cook Times

Press the number key to quickly activate the preset time and power.

Button	Display (Time)	Power
1	0:10	100%
2	0:20	100%
3	0:30	100%
4	0:45	100%
5	1:00	100%
6	1:30	100%
7	2:00	100%
8	2:30	100%
9	3:00	100%
0	3:30	100%

1. Power Up

When the oven is electrified for the first time, "-------" will display on the screen.If the " STOP " button is pressed, the oven will enter Idle Mode. If the oven door is open, the oven will enter Door Open Mode.

2. Idle Mode

In Idle Mode, the screen will display " E ".

Notes:

1. In Pause Mode or Ready Mode, if there is no operation within certain times, the oven will enter to Idle Mode. The certain times are determined by the setting of User Option "4 Keyboard Window".
2. If you press the " STOP " button, a buzzer will ring, but no program runs.

3. Ready Mode

1. In this mode, the oven is ready to begin a cook cycle.
2. Opening and closing the door while the oven is in Idle Mode will put the oven into Ready Mode.
3. During Ready Mode, "READY" will display.

4. Door Open Mode

When the oven door is open, the oven will enter the Door Open Mode. "DOOR" and "OPEN" will display.

Notes:

1. When the door is open, if User Option OP:60 is selected and the oven was running a manual cook entry or preset program cook mode, the oven will enter Pause Mode. If User Option OP:61 is selected and the oven was running a manual cook entry or preset program cook mode, the oven will enter the Door Open Mode.
2. In this mode, "Time Entry" or "Defrost" can not be pressed to enter cooking setting.

5. Pause Mode

1. When the microwave oven is running in its own or preset cooking state, press " STOP " to enter Pause Mode. The screen will display remaining cooking time.
2. Press " STOP " to enter Ready Mode or press " START " to start cooking.

6. Manual Cook Entry Mode

1. You can manually enter a cook time and power level while in this mode.
2. Press "TIME ENTRY" and press number keys to enter the cooking time. The maximum time is 60 minutes.
3. Press "POWER" and press number keys to enter power level 0-10.
4. Press " START " to start cooking.

CONTENDER

Level	10	9	8	7	6	5	4	3	2	1	0
Power	100%	90%	80%	70%	60%	50%	40%	30%	20%	10%	0%

7. Preset Program Cook Mode

1. This mode allows cooking of food items through a one pad touch operation. While in Ready Mode, pressing number buttons will cause the oven to run the Preset Program associated with that number button.
2. During this mode, the screen displays the remaining cooking time. If it is multi-stage cooking, the total remaining cooking time displays not a particular stage cooking time.
3. If " ▶ START " is pressed or if there is no operation within 2 seconds, the oven will start cooking.

8. End of Cook Cycle Mode

1. After the time has expired in a Manual Cook Entry Mode or Preset Program Cook Mode, the oven will enter the End of Cook Cycle Mode.
2. During this mode, "DONE" will display.
3. If the OP:11 or OP:12 is selected, the oven will continue to sound until you open the door or press " ⏸ STOP ". If OP:10 is selected, the oven will sound three times.

9. On the Fly Cooking

1. In Preset Program Cook Mode, if the OP:51 is set, press number key to select other preset program.
2. Press " ▶ START " to start cooking.

10. Time Defrost Function

1. In Ready Mode, press "DEFROST" button.
2. Press number keys to enter time. The maximum time is 99 minutes and 99 seconds.
3. Press " ▶ START " to start defrosting,

Note:

1. The default power is power level 20%.
2. When half of the time has passed, the buzzer will sound to remind you to turn the food over. If no operation, the oven will continue working.

11. Manual Preset Program Cook Mode

In this mode, you can specify the cooking time and power level.

1. If you have set the user option "OP:81" mode, open the door and press "1" pad for 5 seconds, the buzzer will sound once and enter to this mode.
2. "PROGRAM" displays on the screen.
3. Press the number key "0-999" to select a preset program.
4. The screen will display preset time and power level. Press number keys to set a new cooking time. The maximum time is 60 minutes.

5. Press “POWER LEVEL” and press number keys to set a new power level.
6. Press “ ▶ START ” to save.

Note:

1. If the electricity is cut off, the saved program will not be lost.
2. If the program need to reset, just repeat the above steps.
3. If press " ⏸ STOP " during the process of setting, the oven will turn back to Door Open Mode. The setting is invalid.

12. Double/ Triple Quantity Cooking

1. In Ready Mode, press “X2” or “X3”, the screen will display “DOUBLE” or “TRIPLE”. Press number keys to start the corresponding quantity cooking time.
2. Press "X2" or "X3" in 5 seconds of starting a Preset Program, the oven will start cooking with the quantity preset cooking time.
   For example, if the preset cooking time for 5 number key is 5 minutes, then it will change to 10 minutes if “X2” is pressed.

Note: This function is only available for Preset Program Cook Mode.

13. Filter Cleaning Function

1. If User Option OP:01 is selected and the setting time arrives, the oven will remind you to cleaning the filter.

Note: The oven must be electrified.

2. The screen will display "CLEAN FILTER". At this time, opening the door will enter Ready Mode.
3. If you do not need to clean the filter , press " ⏸ STOP " button and hold for 3 seconds.

14. Multi-Stage Cooking

You can set this mode in manual preset program cook mode or manual cook entry mode.

1. Three stages can be set. After setting the power level and time for the first stage, press “TIME ENTRY” and then press number keys to set the time. Then press “POWER LEVEL” and the press number keys to set the power level for the second stage. The third stage is same operation.
2. Press “ ▶ START ” to start cooking.

   Example: In manual preset program cook mode, press number key "3" to set two stages. The first stage is 70% and time is 1 minute 25 seconds. The second stage is 50% and 5 minutes and 40 seconds. The steps are follow.

   a. Open the door, press number key "1" for 5 seconds. "PROGRAM" displays.

   b. Press number button "3", the screen will display "P003". After two seconds, the screen will display the related time " :30".

   c. Press "1","2","5" to input the cooking time. "1:25" displays.

   d. Press "POWER LEVEL" then press " 7". The first stage is finished.

e. Press " TIME ENTRY ", "STAGE-2" displays.

f. Press "5", "4","0" , "5:40" displays.

g. Press "POWER LEVEL" then press "5". The second stage is finished.

h. Press " ▶ START " button to start save the program.

Note: Defrost cannot be set as one of the Multi-Stage Cooking.

15. User Option Mode

1. In Ready Mode, open the oven door and press “2” number key for 5 seconds. The buzzer sounds once and enter this mode.
2. The screen will display “OP:--”.
3. Press number key to enter related mode setting. (See the appendix A)
4. Press the number key repeatedly to select the mode you want.
5. Press “ ▶ START ” to save.

16. Factory- default setting


1. In Ready Mode, press “ ▶ START ” + “ 0 ”, the screen will display “CHECK”.
2. If it is in the factory-default setting, the screen will display “11”. If it is not in the factory-default setting, the screen will display “00”.
3. Press “ ▶ START ” to enter factory-default setting. “CLEAR” will display.

17. USB Function

1. During Ready Mode, insert the U disk which saved the "COOKDATA" file.
2. Press "USB" button to update the data of computer board. "LOADING" displays.
3. If the update is successful, the screen will display "SUCCESS". Otherwise, "FAIL" will display.


How to set the U disk

1. Insert U disk to your PC or Mac, select the appropriate installer package according to the computer system. FlashTune 1.1.3.exe is for Windows; FlashTune 1.1.3 is for Mac. Double click the package to install the software.




2. Click the icon after installation to open the FlashTune software and click the Commercial MWO.




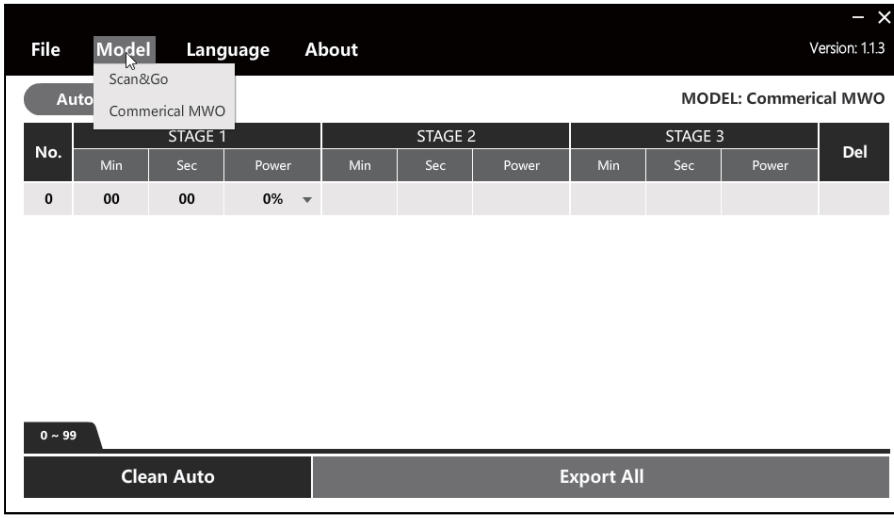

3. Complete the cooking time required for the first Stage of your cooking cycle. The maximum time value of each stage is 60 minutes.

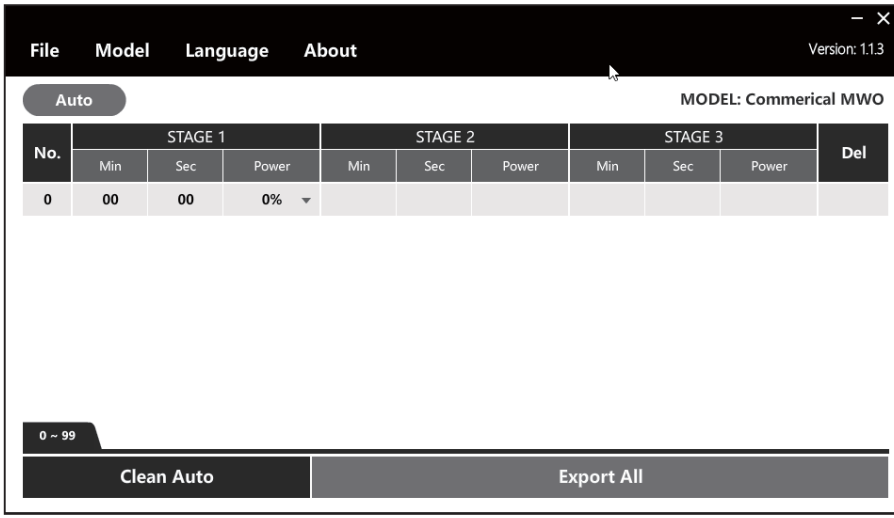


4. Select the % of power required for STAGE1 within the drop-down field.

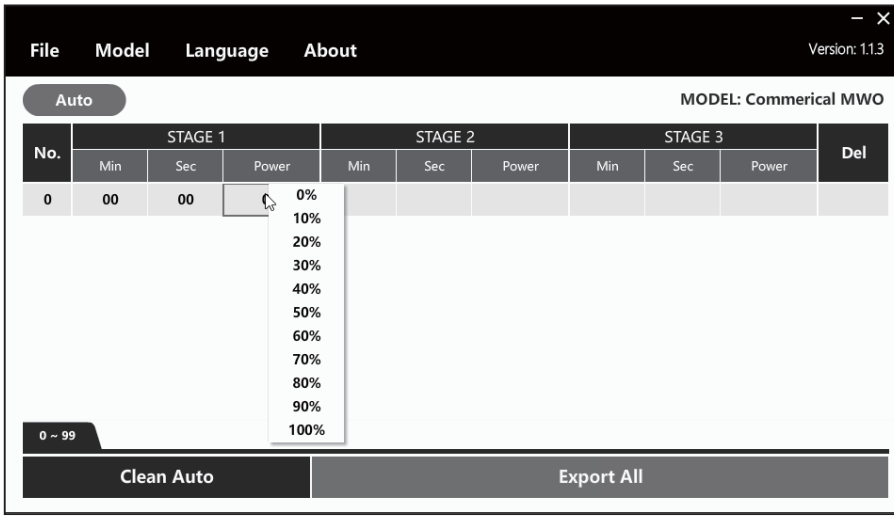

How to set the U disk

5. Complete each stage of cooking, STAGE1, 2 and 3 if applicable. Update each menu item line by line. Key in the Min and Sec, and choose Power of each STAGE of each line.

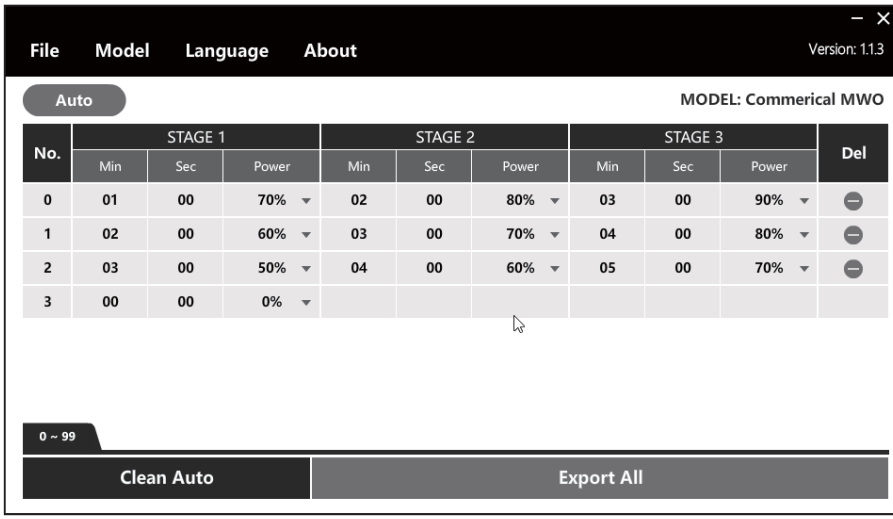


No.	STAGE 1			STAGE 2			STAGE 3			Del
	Min	Sec	Power	Min	Sec	Power	Min	Sec	Power	
0	01	00	70%	02	00	80%	03	00	90%	⊖
1	02	00	60%	03	00	70%	04	00	80%	⊖
2	03	00	50%	04	00	60%	05	00	70%	⊖
3	00	00	0%							

6. The auto recipe setup can be completed by either software or microwave oven. Open the door and long press the number Key 1 when the power is on and the “PROGRAM” will be shown on the display screen. Input the reset recipe number and the recipe may be set up by inputting number Key 1.
The number Key 0-9 are also available for changing the cooking time. If the heat power is to be changed, press “power level” key. For example, press Key 6 indicates 60% power level. Finally press “Start” key to complete the operation.

How to Save Your Program File

1. To save your progress or add/edit menu items, click on File and Save as.Name your file and save.

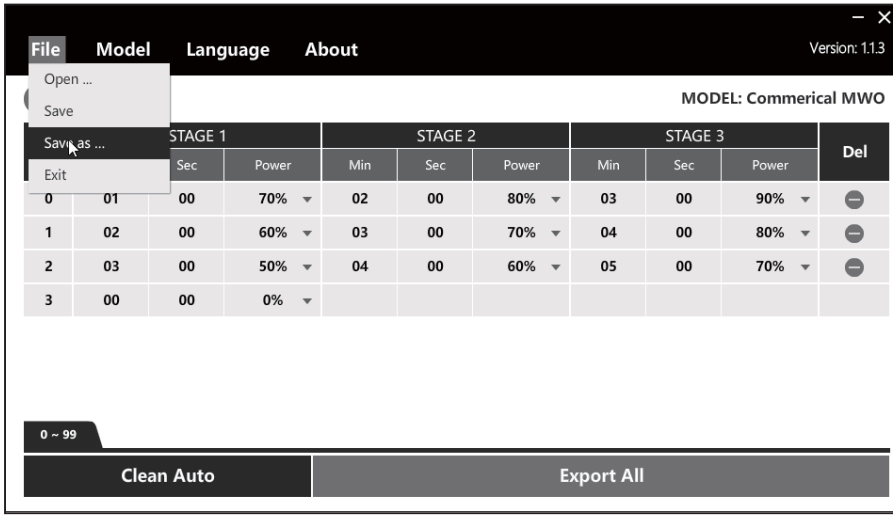


2. Your files are saved and can be opened and edited later. And the saved files can be transferred to another computer installed with this software through a USB or network. And then you can also open, edit and save your files on the another computer.




How to Clear or Remove Items from Software Window

1. To clear ALL menu items within the display, click Clean Auto. A pop-up box will be displayed. “Are you sure to remove all auto recipes?” Click Yes. And the specific items is not allowed to delete.

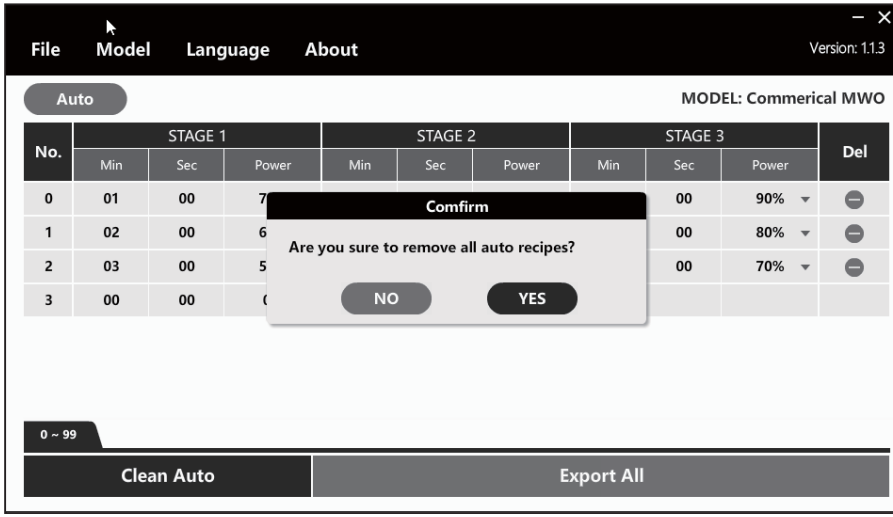


2. Your menu display is now clear.

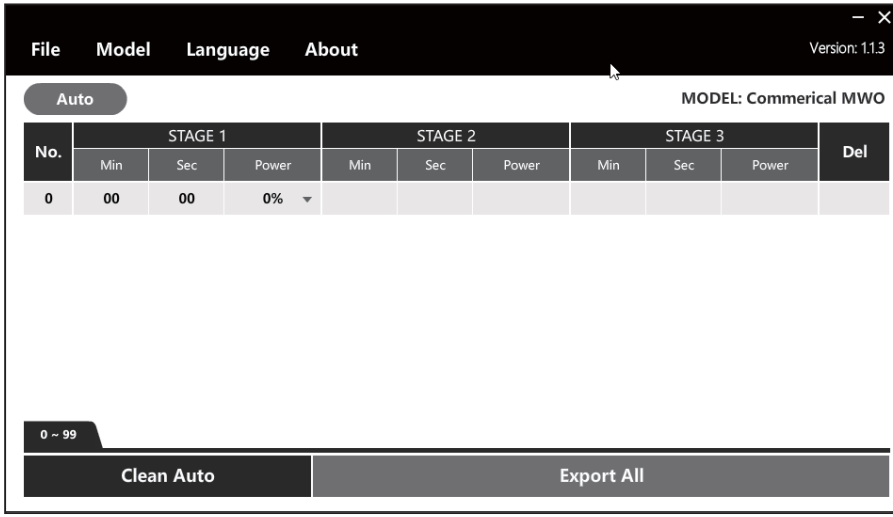


How to Retrieve Your Saved File

1. To retrieve your saved menu items, click on File and Open.

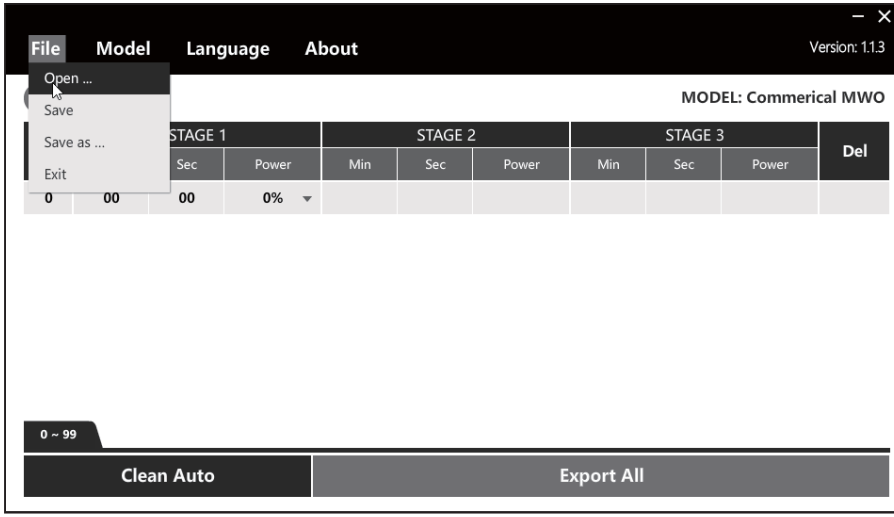

2. Select your previously saved menu file. Your menu item will be re-imported and displayed in the window, as shown in the image below.




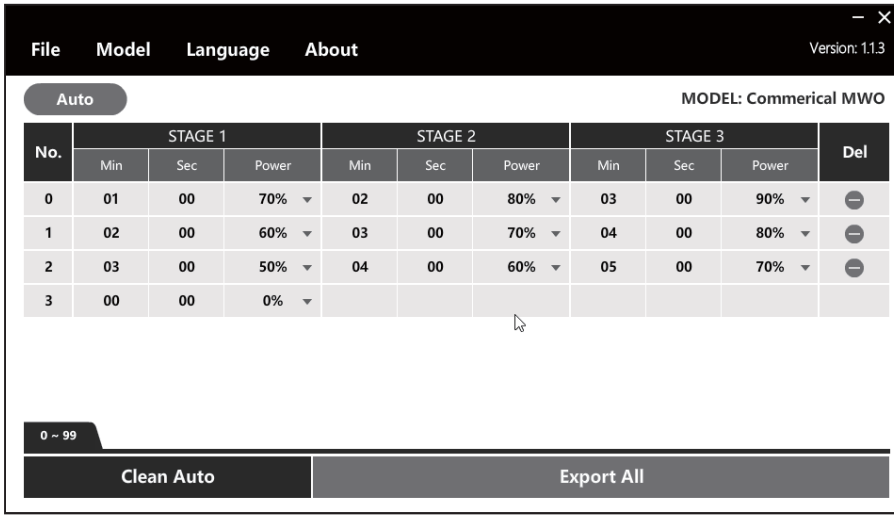


CONTENDER

How to Export Your Menu Items via USBExport all

1. To export menu items to USB, click the Export All.

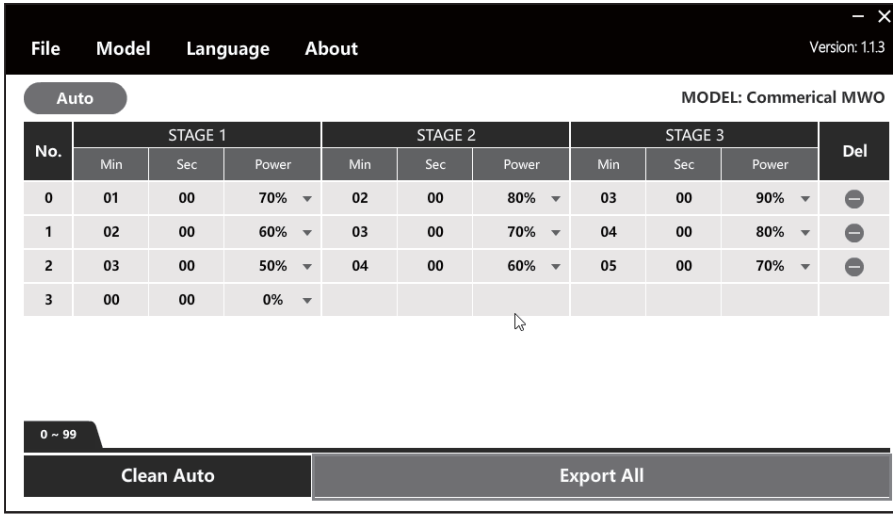

2. Select your location to export. Your folder will be automatically named COOKDATA. If the current directory already has a "COOKDATA" folder, the original COOKDATA folder will be deleted and a new folder will replace the original folder.



3. Copy the COOKDATA folder to the root directory of the USB.

How to Export Your Program File Cookdata to USB

1. Your saved file is now ready to be transferred to USB.
   Note: The USB must be formatted to FAT32 to successfully transfer the file and upload




2. To load your menu items to the microwave, insert the USB stick into the USB port located on the right hand side of the unit, as directed in the image below. Press the USB button to start the transfer. The transfer will take a few seconds. “SUCCESS” will be displayed in the window when the transfer is completed.




INSERT USB

3. The USB is now ready to use.

Filter cleaning.

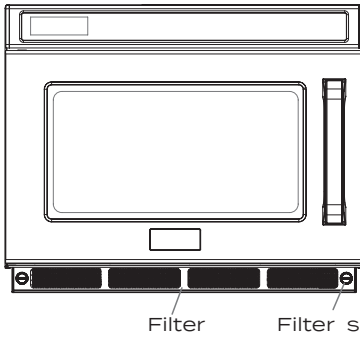

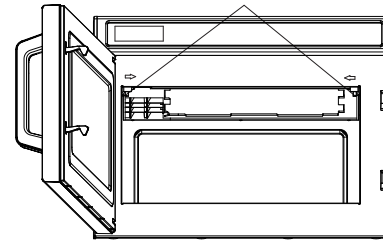

Caution! Make sure the splash shield is installed correctly before use of the microwave oven!

The front filter serves as the air inlet; the filter should be cleaned on time to keep the chamber clean.

1. Turn counterclockwise to unscrew and take down the filter ; and wash it with warm soap water;
2. Install the filter screen Tighten clockwise the screws to fix the filter ;
3. Make sure the filter is installed before use of the microwave oven;
4. The factory setting has the function to remind the user of washing the filter every 30 days.

Splash shield cleaning

1. Detaching: Hold the two buckle positions in front of the splash shield with your hands (as shown by the arrows). Exert your strength following the direction of the arrows and pull downwards after you have pulled out the buckles:
2. Wash the splash shield:
3. Installation: Pick up the splash shield and obliquely put it into the chamber in the way that insert the first pin at the rear into the positioning hole on the rear plate of chamber, then push the other side to insert all positioning pins into their positioning holes.

Installation (supplement)

1. The switching operation of this microwave oven can cause voltage fluctuations on the supply line. The operation of this oven under unfavorable voltage supply conditions can have adverse effects. This device is intended for the connection to a power supply system with a maximum permissible system impedance Zmax of 0.3Ohms at the interface point of the user's supply. The user has to ensure that this device is connected only to a power supply system which fulfills the requirement above. If necessary, the user can ask the public power supply company for the system impedance at the interface point.

2. If there is no equipotential bonding conductor in the electric supply, an external equipotential bonding conductor must be installed at the rear of the appliance (see symbol).This terminal shall be in effective electrical contact with all fixed exposed metal parts and shall allow the connection of a conductor having a nominal cross-sectional area up to 10 mm^2.



Symbol for the external connection of equipotential bonding conductors.

TROUBLE SHOOTING

Normal	
Microwave oven interfering TV reception	Radio and TV reception may be interfered when microwave oven operating. It is similar to the interference of small electrical appliances, like mixer, vacuum cleaner, and electric fan. It is normal.
Dim oven light	In low power microwave cooking, oven light may become dim. It is normal.
Steam accumulating on door, hot air out of vents	In cooking, steam may come out of food. Most will get out from vents. But some may accumulate on cool place like oven door. It is normal.
Oven started accidentally with no food in.	It is forbidden to run the unit without any food inside. It is very dangerous.

Trouble	Possible Cause	Remedy
Oven can not be started.	(1) Power cord not plugged in tightly.	Unplug. Then plug again after 10 seconds.
	(2) Fuse blowing or circuit breaker works.	Replace fuse or reset circuit breaker (repaired by professional personnel of our company)
	(3) Trouble with outlet.	Test outlet with other electrical appliances.
Oven does not heat.	(4) Door not closed well.	Close door well.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

CONTENDER

RG Distributors Ltd TA eCatering
Unit 7, Spring Road, Jade Business Park
Seaham, SR7 9DR

0333 358 3678
sales@ecatering.co.uk

www.ecatering.co.uk

