
CONTENDER

STEP UP TO THE PLATE

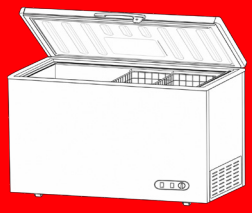

CONTENDER CHEST FREEZER

FZC004 I FZC018 I FZC019 I FZC020 I FZC021 I FZC033

THANK YOU FOR BUYING THIS HIGH QUALITY APPLIANCE

THIS HANDBOOK IS DESIGNED TO HELP YOU THROUGH EACH STEP OF OWNING YOUR NEW APPLIANCE, FROM INSTALLATION TO USE.

PLEASE READ THROUGH THIS HANDBOOK CAREFULLY BEFORE YOU START USING YOUR APPLIANCE, AS WE HAVE ENDEAVOURED TO ANSWER AS MANY QUESTIONS AS POSSIBLE, AND PROVIDE YOU WITH AS MUCH SUPPORT AS POSSIBLE.

IF, HOWEVER, YOU FIND SOMETHING MISSING OR NOT COVERED, PLEASE CONTACT OUR CUSTOMER CARE CENTRE, USING THE NUMBER AT THE BACK OF THIS HANDBOOK, WHO WILL BE ONLY TOO HAPPY TO HELP YOU.

OUR POLICY IS ONE OF CONSTANT DEVELOPMENT AND IMPROVEMENT, THEREFORE WE CANNOT GUARANTEE THE STRICT ACCURACY OF ALL OUR ILLUSTRATIONS AND SPECIFICATIONS, CHANGES MAY HAVE BEEN MADE SUBSEQUENT TO PUBLISHING.

WARNING: WHEN POSITIONING THE APPLIANCE ENSURE THE SUPPLY CORD IS NOT TRAPPED OR DAMAGED.

WARNING: DO NOT LOCATE EXTENSION SOCKETS OR CHARGING TRANSFORMERS/POWER SUPPLIES ADJACENT TO THE COMPRESSOR AS THEY COULD OVERHEAT.



CONTENTS

1. BEFORE USING YOUR APPLIANCE 4
2. OPERATING YOUR APPLIANCE 8
3. DEFROSTING AND CLEANING 9
4. TROUBLESHOOTING 10
5. WARRANTY 11

I. BEFORE USING YOUR APPLIANCE

SAFETY INSTRUCTIONS

PLEASE READ THIS BOOKLET THOROUGHLY BEFORE INSTALLING AND SWITCHING ON THE APPLIANCE. THE MANUFACTURER ACCEPTS NO RESPONSIBILITY FOR INCORRECT INSTALLATION AND USE.

- AFTER INSTALLATION MAKE SURE THAT THE POWER CABLE IS NOT TRAPPED UNDERNEATH THE APPLIANCE.
- IF THIS APPLIANCE IS TO REPLACE AN OLD ONE EQUIPPED WITH A LOCK, BREAK OR REMOVE THE LOCK OF THE OLD UNIT AS A SAFETY MEASURE TO AVOID CHILDREN BECOMING TRAPPED INSIDE.
- DO NOT DAMAGE THE REFRIGERANT CIRCUIT. IN THE EVENT THAT THE REFRIGERANT CIRCUIT IS DAMAGED, AVOID OPEN FLAMES OR IGNITION SOURCES AND VENTILATE THE ROOM IN WHICH THE UNIT IS PLACED – DO NOT USE THE APPLIANCE UNTIL YOU HAVE BEEN ADVISED TO DO SO BY A SERVICE ENGINEER.
- DO NOT ALLOW CHILDREN TO PLAY WITH THE APPLIANCE. CHILDREN MUST NEVER SIT IN THE DRAWERS OR HANG FROM THE DOOR.
- DO NOT PLUG THIS APPLIANCE INTO AN EXTENSION LEAD.
- DO NOT USE OLD OR DAMAGED POWER SUPPLY CABLES.
- DO NOT TWIST, BEND OR TRAP THE CABLE. CABLES SHOULD ALSO BE KEPT CLEAR OF HEAT SOURCES.
- WHEN PLUGGING IN THE APPLIANCE, ALWAYS MAKE SURE THAT YOUR HANDS ARE DRY.
- YOUR OLD APPLIANCES CONTAIN INSULATION GASES AND REFRIGERANT THAT MUST BE DISPOSED OF PROPERLY. PLEASE CONTACT YOUR LOCAL AUTHORITY FOR INFORMATION ABOUT RECYCLING CENTRE'S. DO NOT DISPOSE OF THIS APPLIANCE WITH HOUSEHOLD WASTE.

WARNINGS

- THIS CHEST FREEZER IS ONLY TO BE USED BY A COMPETENT PERSON WHO IS ABLE TO TAKE RESPONSIBILITY FOR THEIR SAFETY. CHILDREN AND PERSONS SHOULD BE SUPERVISED TO ENSURE THEY DO NOT PLAY WITH THE APPLIANCE.
- DO NOT DEFROST THE APPLIANCE WITH OTHER ELECTRICAL DEVICES (I.E. HAIR DRYER) OR ANY ARTIFICIAL MEANS AND DO NOT USE SHARP METAL OBJECTS TO REMOVE THE ICE ON THE FREEZER, AS THIS COULD CAUSE DAMAGE TO THE REFRIGERANT SYSTEM.
- DO NOT OPERATE ANY ELECTRICAL APPLIANCES INSIDE THE REFRIGERATOR OR FREEZER.

WARNING: DO NOT PLACE BOTTLES (GLASS OR PLASTIC) CONTAINING LIQUIDS (ESPECIALLY EFFERVESCENT LIQUIDS) INTO THE FREEZER AS THEY COULD CAUSE THE BOTTLE TO BURST DURING FREEZING.

WARNING: DO NOT STORE EXPLOSIVE SUBSTANCES SUCH AS AEROSOL CANS WITH A FLAMMABLE PROPELLANT IN THIS APPLIANCE.

WARNING: DO NOT DAMAGE THE REFRIGERANT CIRCUIT.

WARNING: KEEP THE AREA AROUND THE APPLIANCE VENTILATED ESPECIALLY IF IT IS IN A BUILT IN ENCLOSURE AND KEEP THE AREA CLEAR OF OBSTRUCTIONS

- DO NOT TOUCH THE COOLING SURFACES WHILE THE APPLIANCE OPERATES, ESPECIALLY WITH WET HANDS, BECAUSE THE SKIN MAY STICK TO COLD SURFACES.
- DO NOT EAT ICE WHICH HAS JUST BEEN REMOVED FROM THE FREEZER AS THIS CAN CAUSE FREEZER BURNS TO THE HANDS AND TONGUE.

	FZC004	FZC018	FZC019	FZC020	FZC021	FZC033
NETT CAPACITY (L)	550	272	670	450	272	148
ELECTRICAL SUPPLY	13 AMP/230V/SINGLE PHASE					
TEMPREATURE RANGE	(-18-22 DEGREES C)					
NO OF LIDS	1	1	2	1	1	1
LID TYPE	STAINLESS STEEL	STAINLESS STEEL	STAINLESS STEEL	STAINLESS STEEL	WHITE	STAINLESS STEEL
LOCKABLE	YES					
NO KEYS	2					
WEIGHT (KG)	92	82	99	83	80	51
DIMENSIONS MM (W X D X H)	1810 X 755 X 840	1030 X 755 X 840	2000 X 740 X 850	1530 X 755 X 840	1030 X 755 X 840	771 X 560 X 840
CASTORS	YES 2-REAR					

INSTALLATION


- INSTALL AND LEVEL THE APPLIANCE ON A FLOOR ABLE TO TAKE ITS WEIGHT AND IN A PLACE SUITABLE FOR ITS SIZE AND USE.
- YOU MUST NOT TURN THE FREEZER ON FOR AT LEAST 8 HOURS AFTER IT BEING IN ITS FINAL POSITION. IT MAY TAKE THIS TIME FOR THE REFRIGERANT TO SETTLE AND IF TURNED ON BEFORE 8 HOURS THE UNIT TEMPERATURE MAY NOT DESCEND TO THE CORRECT TEMPERATURE.
- INSERT THE PLUG INTO A SOCKET WHICH IS APPROPRIATE. THIS APPLIANCE HAS A PLUG ALREADY FITTED – IF THE PLUG IS NOT SUITABLE FOR YOUR SOCKET WE SUGGEST THAT YOU CALL AN AUTHORIZED ELECTRICIAN FOR ASSISTANCE. IF THE PLUG IS DAMAGED IN ANY WAY – DO NOT ATTEMPT TO USE IT. IT MUST BE REPLACED WITH A NEW PLUG.
- DO NOT INSTALL THE APPLIANCE IN DIRECT SUNLIGHT AND CLOSE TO HEAT SOURCES. DO NOT ALLOW THE APPLIANCE TO BE EXPOSED TO RAIN.
- CHOOSE A WELL VENTILATED AREA. THERE SHOULD BE AT LEAST 10 CM OF OPEN SPACE ALONG THE SIDES, TOP, AND BACK OF THE FREEZER.
- BEFORE SWITCHING ON PLACE THE APPLIANCE IN AN UPRIGHT POSITION AND WAIT AT LEAST THREE HOURS WITHOUT MOVING THE APPLIANCE. THIS WILL GIVE THE REFRIGERANT CIRCUIT TIME TO SETTLE AND OPERATE EFFICIENTLY.
- INSTALL THE APPLIANCE IN A DRY AND WELL-VENTILATED PLACE. THE APPLIANCE IS FOR USE IN PLACES WITHIN THE TEMPERATURE RANGES DEFINED ACCORDING TO THE CLIMATIC CLASS GIVEN ON THE DATA LABEL LOCATED ON THE BACK OF THE PRODUCT. THE APPLIANCE MAY NOT OPERATE CONSISTENTLY IF IT IS SITED FOR EXTENDED PERIODS OF TIME BELOW THE COLD END OF THE CLIMATE CLASS TEMPERATURE RANGE FOR WHICH THE APPLIANCE IS DESIGNED.
- IF THE APPLIANCE IS INSTALLED NEXT TO ANOTHER REFRIGERATOR OR FREEZER, OBSERVE THE MINIMUM DISTANCE OF 10CM TO AVOID CONDENSATION.
- THE MANUFACTURER IS NOT RESPONSIBLE FOR FAILURE TO COMPLETE INSTALLATION AS DESCRIBED IN THIS GUIDE.

THE OPERATING VOLTAGE FOR YOUR FRIDGE IS 220-240 V AT 50HZ.


CONFORMITY INFORMATION

THE APPLIANCE IS DESIGNED IN COMPLIANCE WITH THE DIRECTIVE 2006/95/EC, IEC60335-2-24, IEC60335-1. DIRECTIVE 2004/108/EC, EN55014-1:2006/+A1:2009, EN55014-2:1997/+A1:2001/+A2:2008, EN61000-3-2:2006/+A1:2009/+A2:2009 AND EN61000-3-3:2008.


INSTALLATION OF LATCH HOOK

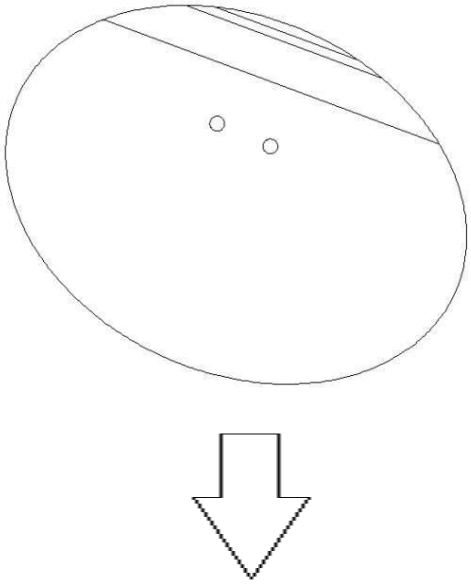

STEP I:
TAKE OFF THE GUMMED TAPE COVERED ON THE HOLE.

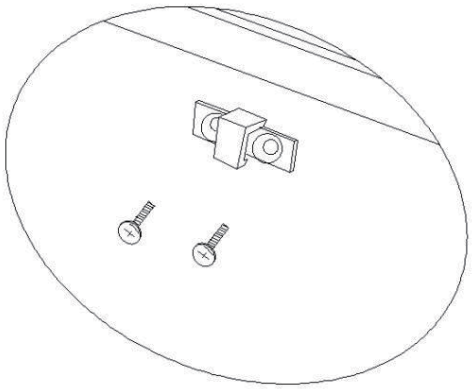


STEP 2:
MAKE THE LATCH HOOK AIMED AT HOLE AND FIX IT WITH TWO SCREWS.

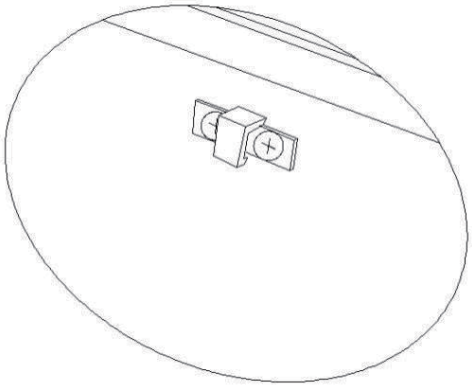


STEP 3:
INSTALLATION OF LATCH HOOK IS FINISHED.

INSTALLATION OF HANDLE

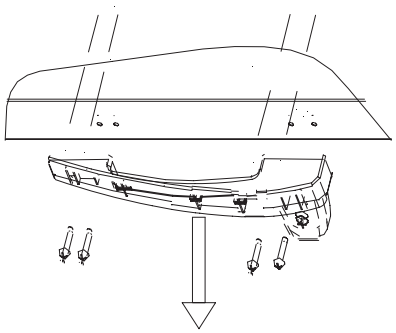

STEP I:


FIX THE HANDLE ON THE DOOR WITH FOUR SCREWS.

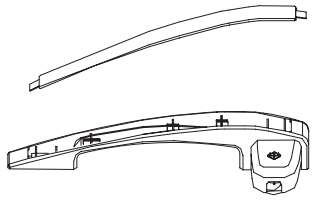



STEP 2:


INSERT ONE SIDE OF THE HANDLE COVER INTO THE HANDLE PEDESTAL.

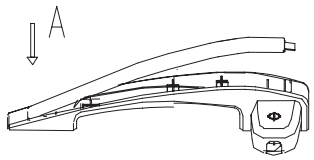



STEP 3:


INSERT THE OTHER SIDE OF THE HANDLE COVER INTO THE HANDLE PEDESTAL.

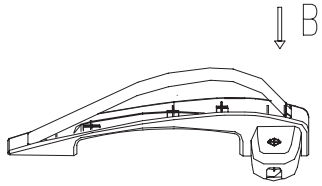




STEP 4:

PRESS THE COVER INTO THE HANDLE PEDESTAL.

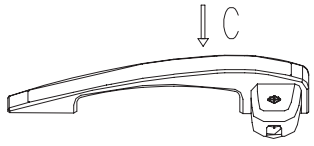

2. OPERATING YOUR APPLIANCE

PARTS OF THE APPLIANCE

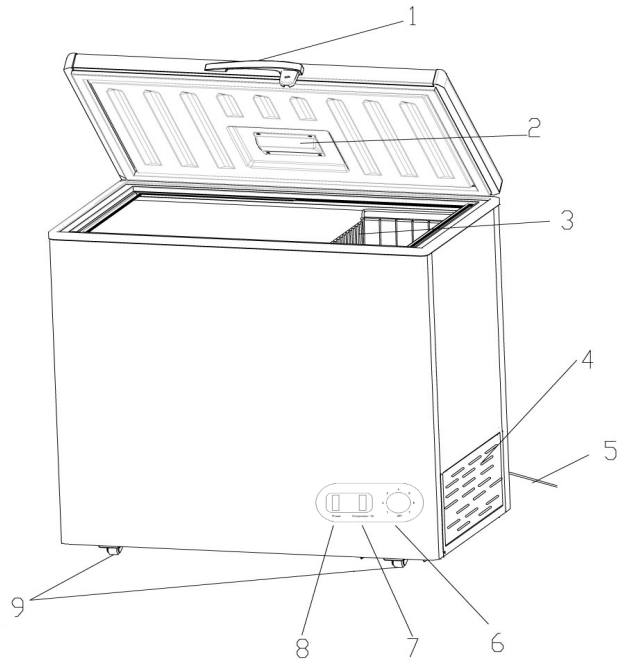

I. HANDLE
2. INNER LIGHT
3. BASKET
4. COMPRESSOR GRILL
5. POWER LINE
6. KNOB
7. COMPRESSOR 'ON' LIGHT
8. POWER LIGHT
9. WHEEL

THE FUNCTION OF THE PANEL

- YOUR REFRIGERATOR HAS ONE CONTROL FOR REGULATING THE TEMPERATURE. THE TEMPERATURE CONTROL IS FEATURE 6
- THE FIRST TIME YOU TURN THE UNIT ON, TURN THE TEMPERATURE CONTROL KNOB IN A CLOCKWISE DIRECTION TO THE MAXIMUM SETTING "7" AND RUN FOR AT LEAST 2 HOURS BEFORE PUTTING FROZEN FOODS INSIDE. THIS WILL ENSURE THE CABINET IS THOROUGHLY CHILLED BEFORE FOOD IS PUT IN.
- THE RANGE OF THE TEMPERATURE CONTROL IS FROM POSITION "I" THE WARMEST TO "7" THE COLDEST. ADJUST THE TEMPERATURE CONTROL TO THE SETTING THAT BEST SUITS YOUR NEEDS.
- TO TURN THE REFRIGERATOR OFF, TURN THE TEMPERATURE CONTROL TO " OFF"
- GREEN LIGHT: POWER ON
- RED LIGHT: COMPRESSOR ON

NOTE:

- TURNING THE TEMPERATURE CONTROL TO "OFF" POSITION STOPS THE COOLING CYCLE BUT DOES NOT SHUT OFF THE POWER TO THE REFRIGERATOR.
- IF THE UNIT IS UNPLUGGED, LOST POWER, OR TURNED OFF; YOU MUST WAIT 3 TO 5 MINUTES BEFORE RESTARTING THE UNIT. IF YOU ATTEMPT TO RESTART BEFORE THIS TIME DELAY, THE REFRIGERATOR WILL NOT START.
- LARGE AMOUNTS OF FOOD WILL LOWER THE COOLING EFFICIENCY OF THE APPLIANCE.
- IF YOU CHOOSE TO CHANGE THE THERMOSTAT SETTING, ADJUST THERMOSTAT CONTROL BY ONE NUMERICAL INCREMENT AT A TIME. ALLOW SEVERAL HOURS FOR TEMPERATURE TO STABILIZE BETWEEN ADJUSTMENTS.
- ONCE POWER IS CUT OFF, WAIT FOR AT LEAST 5 MINUTES BEFORE PLUGGING IN AGAIN TO AVOID DAMAGING THE COMPRESSOR OR THE SYSTEM.

TEMPERATURE ADJUSTMENT/OPERATION

- THE APPLIANCE TEMPERATURE CAN BE ADJUSTED BY TURNING THE THERMOSTAT ON THE CONTROL PANEL.
- THE THERMOSTAT SHOULD BE ADJUSTED ACCORDING TO DIFFERENT ENVIRONMENT TEMPERATURE AND THE AND THE QUANTITY OF FOOD BEING STORED BY ADJUSTING THE KNOB OF THE THERMOSTAT. THE KNOB ROTATES CLOCKWISE FROM "I" TO "7" .THE SETTING SHOULD BE REDUCED DOWN IN SUMMER (ANTI-CLOCKWISE ROTATION) AND UP IN WINTER (CLOCKWISE ROTATION). THE THERMOSTAT IS SET TO A CERTAIN POINT BEFORE LEAVING THE FACTORY, THIS IS THE OPTIMUM SETTING FOR THE PRODUCT.
- IF A LARGE AMOUNT OF FRESH FOOD IS PLACED IN THE APPLIANCE FOR FREEZING THE THERMOSTAT SHOULD BE TURNED UP FOR A PERIOD OF 4-6 HOURS, AFTER THIS PERIOD IT SHOULD BE RETURNED TO ITS INITIAL SETTING.
- THE GREEN LAMP IS A POWER INDICATING LAMP. WHEN THE POWER IS ON, THE LAMP WILL BE ON.
- ONCE POWER IS CUT OFF, WAIT FOR AT LEAST 5 MINUTES BEFORE PLUGGING IN AGAIN TO AVOID DAMAGING THE COMPRESSOR OR THE SYSTEM.

FOOD STORAGE IN THE APPLIANCE

THIS FREEZER IS A 4 STAR RATED APPLIANCE.

- THE USE OF A FREEZER IS FOR FREEZING FRESH FOOD AND STORING FROZEN FOOD FOR LONG PERIODS OF TIME AND MAKING ICE CUBES.
- DO NOT PUT FRESH OR WARM FOOD WITH FROZEN FOOD SIDE BY SIDE AS IT CAN THAW THE FROZEN FOOD.
- WHILE FREEZING FRESH FOOD (I.E. MEAT, FISH ETC) DIVIDE THEM INTO SMALLER PORTIONS, THIS WILL ALLOW YOU TO DEFROST ONLY THE FOOD YOU NEED.
- **FOR STORING FROZEN FOOD;** THE INSTRUCTIONS SHOWN ON FROZEN FOOD PACKAGES SHOULD ALWAYS BE FOLLOWED CAREFULLY, IF NO INFORMATION IS PROVIDED FOOD SHOULD NOT BE STORED FOR MORE THAN 3 MONTHS FROM THE PURCHASED DATE.
- **WHEN BUYING FROZEN FOOD;** ENSURE THAT THESE HAVE BEEN FROZEN AT SUITABLE TEMPERATURES AND THAT THE PACKING IS INTACT.
- FROZEN FOOD SHOULD BE TRANSPORTED IN APPROPRIATE CONTAINERS TO MAINTAIN THE QUALITY OF THE FOOD AND SHOULD BE PLACED INTO THE FREEZER AS SOON AS POSSIBLE.
- IF A PACKAGE OF FROZEN FOOD SHOWS SIGNS OF HUMIDITY AND ABNORMAL SWELLING IT IS PROBABLE THAT IT HAS BEEN PREVIOUSLY STORED AT AN UNSUITABLE TEMPERATURE AND THAT THE CONTENTS HAVE DETERIORATED. DO NOT USE THIS FOOD, DISPOSE OF IT AS SOON AS POSSIBLE.
- THE STORAGE LIFE OF FROZEN FOOD DEPENDS ON THE ROOM TEMPERATURE, THERMOSTAT SETTING, HOW OFTEN THE DOOR IS OPENED, THE TYPE OF FOOD AND THE LENGTH OF TIME REQUIRED TO TRANSPORT THE PRODUCT FROM THE SHOP TO YOUR HOME. ALWAYS FOLLOW THE INSTRUCTIONS PRINTED ON THE PACKAGE AND NEVER EXCEED THE MAXIMUM STORAGE LIFE INDICATED.

3. DEFROSTING AND CLEANING

- DEFROST TWICE A YEAR OR WHEN A FROST LAYER OF AROUND 7 MM (1/4") HAS FORMED. TO START DEFROSTING PROCEDURE SWITCH OFF THE FREEZER AT THE SOCKET OUTLET AND PULL OUT THE MAINS PLUG.
- ALL FOOD SHOULD BE WRAPPED IN SEVERAL LAYERS OF NEWSPAPER AND STORED IN A COOL PLACE (E.G. FRIDGE OR LARDER).
- CONTAINERS FULL OF WARM WATER MAY BE PLACED CAREFULLY IN THE FREEZER TO SPEED UP THE DEFROSTING.
- DO NOT USE POINTED OR SHARP EDGED OBJECTS SUCH AS KNIVES, FORKS TO REMOVE THE FROST.
- NEVER USE HAIRDRYERS, ELECTRICAL HEATERS AND OTHER SIMILAR ELECTRICAL APPLIANCES FOR DEFROSTING.
- WHEN DEFROSTING HAS FINISHED, SPONGE OUT ANY DEFROST WATER WHICH COLLECTS AT THE BOTTOM OF THE FREEZER AND DRY THE INTERIOR THOROUGHLY.
- YOU CAN WIPE THE INNER AND OUTER SIDES WITH A SOFT CLOTH OR A SPONGE USING WARM AND SOAPY WATER.

- DO NOT WASH YOUR FREEZER BY POURING WATER INTO IT.
- NEVER USE FLAMMABLE, EXPLOSIVE OR CORROSIVE MATERIAL LIKE THINNER, GAS, ACID FOR CLEANING.
- MAKE SURE THAT YOUR FREEZER REMAINS UNPLUGGED WHILE CLEANING.
- ONCE DEFROSTING/CLEANING HAS BEEN COMPLETED, PLUG IN THE APPLIANCE AND RETURN TO ITS TEMPERATURE SETTING.

4. TROUBLESHOOTING

PROBLEM	CAUSES AND RESOLUTIONS
THERE IS A SOUND OF LIQUID FLOWING IN THE FREEZER	IT IS THE SOUND OF REFRIGERANT FLOWING IN THE CIRCULATING PIPELINE OF THE REFRIGERATING SYSTEM, THIS IS NORMAL
TOO NOISY	THE FREEZER IS NOT INSTALLED IN A LEVEL GROUND, CHANGE THE POSITION
THE REFRIGERATION SYSTEM DOES NOT WORK FOR A LONG TIME BUT THE INSIDE TEMPERATURE IS VERY LOW	IT IS AN INDICATOR OF GOOD INSULATION AND LOW COOLING RETENTION, THIS IS NORMAL.

TROUBLE	POSSIBILITIES		CHECKS	SOLUTIONS	SOLUTIONS
COMPRESSOR DOES NOT WORK	POWER IS OFF	THE FUSE IS BROKEN	CHECK THE FUSE	REPLACE THE FUSE	IF IT IS NECESSARY PLEASE CONTACT AFTER-SALES SERVICE FOR REPAIR
		THE CONNECTION BETWEEN PLUG AND SOCKET IS NOT GOOD	CHECK THE SOCKET	REPAIR OR REPLACE THE SOCKET	
		THE CIRCUIT OF INPUT AND OUTPUT IS OUT OF USE	MAKE SURE THAT THE POWER IS ON	CHECK THE CIRCUIT WITH ELECTRIC INSTRUMENT	
	THE THERMOSTAT KNOB IS NOT IN THE PROPER POSITION		CHECK THE THERMOSTAT	ROTATE THE THERMOSTAT TO THE PROPER POSITION	SEEK PROFESSIONAL HELP
COMPRESSOR KEEPS ON WORKING	THE TEMPERATURE INSIDE IS TOO HIGH	FROST ON THE EVAPORATOR IS TOO THICK	CHECK WHETHER THE FROST IS THICKER THAN 6-8MM	DEFROST REGULARLY	-
		THE DOOR IS BEING OPENED TOO FREQUENTLY	-	REDUCE THE TIMES OF OPENING	-
		TOO MUCH FOOD HAS BEEN STORED AT ONCE	-	TAKE OUT SOME OF THE FOOD	-
	THE TEMPERATURE INSIDE IS OK	THE AMBIENT TEMPERATURE IS TOO HIGH .WHILE THE THERMOSTAT INDICATES A SMALL NUMBER	CHECK WHETHER THE KNOB IS INDICATING AT THE "5-6"(OR DEEPER)	ADJUST THE THERMOSTAT KNOB	THE THERMOSTAT KNOB ON"2-4"IS BETTER (OR PROPER)
		THE THERMOSTAT DOES NOT WORK	-	REPLACE THE THERMOSTAT	ASK FOR AFTER-SALES SERVICE
TOO NOISY	THE FLOOR IS NOT LEVEL		MAKE SURE THE FREEZER IS LEVEL	PUT PAD UNDER THE CASTORS	-
	THE SCREW IN FAN OR CONDENSER IS LOOSE		THE SCREW IS LOOSE	ROTATE THE FIXED SCREW	-
	THE REFRIGERATING CIRCUITS TOUCH EACH OTHER		-	SEPARATE THEM	-

5. WARRANTY

5.1. COVERAGE

YOUR CONTENDER CHEST FREEZER IS SUPPLIED WITH A 24-MONTH PARTS WARRANTY FROM THE DATE OF PURCHASE, IN ACCORDANCE WITH THE TERMS AGREED BETWEEN RG DISTRIBUTORS LIMITED AND THE BUYER. FAILURE TO COMPLY WITH THE OPERATING, CLEANING AND MAINTENANCE INSTRUCTIONS IN THIS MANUAL MAY AFFECT YOUR WARRANTY ENTITLEMENT.

5.2. WARRANTY VALID CONDITIONS

- THE APPLIANCE MUST BE INSTALLED AND OPERATED AS DESCRIBED IN THIS MANUAL
- THE RATING PLATE MUST REMAIN LEGIBLE AND INTACT
- REPAIRS MUST BE CARRIED OUT BY AUTHORIZED TECHNICIANS
- PROOF OF PURCHASE MUST BE PROVIDED FOR WARRANTY CLAIMS
- THE MACHINE MUST BE USED FOR ITS INTENDED COMMERCIAL PURPOSE ONLY
- ALL SAFETY GUIDELINES MUST HAVE BEEN FOLLOWED

5.3. WARRANTY EXCLUSIONS

THE WARRANTY DOES NOT COVER:

- DAMAGE CAUSED BY IMPROPER INSTALLATION OR INAPPROPRIATE USE
- MISUSE, ABUSE, OR FAILURE TO FOLLOW OPERATING INSTRUCTIONS
- WEAR AND TEAR FROM NORMAL COMMERCIAL USE
- UNAUTHORISED REPAIRS OR MODIFICATIONS
- DAMAGE FROM FAILURE TO FOLLOW MAINTENANCE AND LUBRICATION INSTRUCTIONS
- ELECTRICAL DAMAGE FROM INCORRECT VOLTAGE, PHASE, OR POWER ISSUES
- DAMAGE CAUSED BY OVERLOADING BEYOND SPECIFIED CAPACITY OR EXCEEDING MAXIMUM OPERATING TIMES
- USE OF NON-APPROVED REPLACEMENT PARTS OR ACCESSORIES
- DAMAGE FROM WATER PENETRATION DUE TO IMPROPER CLEANING METHODS
- GEAR BOX DAMAGE CAUSED BY CHANGING SPEEDS WHILE THE MACHINE IS RUNNING

5.4. SERVICE & SUPPORT

IF THE APPLIANCE FAILS TO OPERATE CORRECTLY:

1. STOP USING THE APPLIANCE IMMEDIATELY AND UNPLUG FROM POWER SUPPLY
2. DO NOT ATTEMPT SELF-REPAIR AS THIS WILL VOID THE WARRANTY
3. CONTACT YOUR AUTHORIZED DISTRIBUTOR OR SERVICE PROVIDER
4. PROVIDE PROOF OF PURCHASE AND THE MODEL NUMBER (MXP004 OR MXP005) FROM THE RATING PLATE
5. DESCRIBE THE PROBLEM IN DETAIL, INCLUDING WHEN IT STARTED AND ANY ERROR SYMPTOMS
6. FOLLOW GUIDANCE FROM THE AUTHORISED SERVICE REPRESENTATIVE
7. ONLY USE REPLACEMENT PARTS SUPPLIED OR APPROVED BY THE MANUFACTURER

USE ONLY AS INTENDED. OPERATE SAFELY. MAINTAIN REGULARLY.

FZC004 · CONTENDER 537L CHEST FREEZER – LOCKABLE STAINLESS STEEL LID – HIGH-CAPACITY BULK STORAGE

FZC018 · CONTENDER 272L CHEST FREEZER – LOCKABLE STAINLESS STEEL LID – SECURE BULK STORAGE

FZC019 · CONTENDER 670L CHEST FREEZER – TWIN LID – ENERGY-EFFICIENT BULK STORAGE

FZC020 · CONTENDER 450L CHEST FREEZER – LOCKABLE STAINLESS STEEL LID – SECURE, HIGH-CAPACITY STORAGE

FZC021 · CONTENDER 320L CHEST FREEZER – STORAGE BASKETS INCLUDED – EFFICIENT BULK STORAGE

FZC033 · CONTENDER 148L COMMERCIAL CHEST FREEZER - STAINLESS STEEL LOCKABLE LID

CONTENDER

STEP UP TO THE PLATE

Distributed by RG Distributors Ltd | Unit 7 Jade Business Park | Spring Road | Seaham | SR7 9DR

SERVICE & SUPPORT: **0333 358 3678** **sales@ecatering.co.uk**

Office Hours: Mon – Fri 9:00AM – 5:00PM (excluding public holidays)