
CONTENDER

STEP UP TO THE PLATE



QUARTZ LAMP HEATED DISPLAY WITH 1/1 GN BASE

HDL003

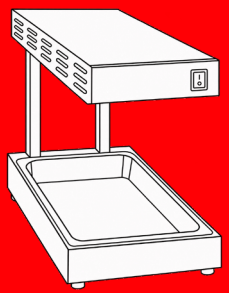

CONTENTS

1. INTRODUCTION 3
2. SAFETY INFORMATION 4
3. PRODUCT DESCRIPTION & TECHNICAL DATA 5
4. PACKAGE CONTENTS 5
5. ASSEMBLY 6
6. INSTALLATION & POSITIONING 7
7. OPERATION 7
8. CLEANING & CARE 8
9. TROUBLESHOOTING 9
10. MAINTENANCE & SERVICING 9
11. WARRANTY 10
12. DISPOSAL 10
13. REGULATORY INFORMATION 11

I. INTRODUCTION

IMPORTANT

READ THIS MANUAL FULLY BEFORE ASSEMBLING OR USING THE APPLIANCE. KEEP IT IN A SAFE PLACE WITH THE APPLIANCE FOR FUTURE REFERENCE AND PASS IT ON TO ANY NEW OWNER OR OPERATOR.

I.I. WELCOME

THANK YOU FOR CHOOSING CONTENDER. THE HDL003 QUARTZ LAMP HEATED DISPLAY USES A SINGLE OVERHEAD 450 W QUARTZ HEATING LAMP TO KEEP HOT FOOD AT SERVING TEMPERATURE ON A 1/1 GASTRONORM (GN) BASE. IT IS IDEAL AS A CHIP SCUTTLE IN FISH AND CHIP SHOPS, AS A COMPACT HOT-HOLDING POINT ON CARVERY AND BUFFET COUNTERS, OR ANYWHERE A SMALL, FOCUSED HOT SPOT IS NEEDED.

INTENDED USE:

- FOR COMMERCIAL CATERING USE ONLY, BY TRAINED STAFF.
- FOR HOLDING FOOD THAT HAS ALREADY BEEN COOKED OR REHEATED TO A SAFE TEMPERATURE. IT IS NOT DESIGNED TO COOK, DEFROST OR REHEAT FOOD.
- FOR INDOOR USE ON A STABLE, LEVEL, HEAT-RESISTANT COUNTER TOP.

ANY OTHER USE IS CONSIDERED IMPROPER. RG DISTRIBUTORS LIMITED ACCEPTS NO LIABILITY FOR INJURY OR DAMAGE RESULTING FROM IMPROPER USE, INCORRECT ASSEMBLY OR FAILURE TO FOLLOW THIS MANUAL, AND SUCH USE WILL INVALIDATE THE WARRANTY.

I.2. LABELS AND SYMBOLS

THE FOLLOWING SIGNS AND SYMBOLS ARE USED THROUGHOUT THIS INSTRUCTION MANUAL TO INDICATE HAZARDS AND POINTS OF SPECIAL NOTE. PLEASE FAMILIARISE YOURSELF WITH THEM BEFORE USE.

WARNING

A POTENTIALLY HAZARDOUS SITUATION THAT COULD CAUSE SERIOUS INJURY. FOLLOW ALL STATED PRECAUTIONS TO AVOID THE HAZARD.

CAUTION

A POTENTIALLY HAZARDOUS SITUATION THAT COULD CAUSE MINOR OR MODERATE INJURY. FOLLOW ALL STATED PRECAUTIONS TO AVOID THE HAZARD.

IMPORTANT

ESSENTIAL INSTRUCTIONS FOR THE CORRECT ASSEMBLY, OPERATION AND CARE OF THE APPLIANCE. READ AND FOLLOW THIS INFORMATION CAREFULLY TO ENSURE RELIABLE PERFORMANCE AND PREVENT DAMAGE OR INCORRECT USE.

NOTE

ADDITIONAL INFORMATION, PRACTICAL TIPS OR CLARIFICATION TO HELP YOU UNDERSTAND AND USE THE APPLIANCE EFFECTIVELY.

2. SAFETY INFORMATION

WARNING

READ AND FOLLOW ALL SAFETY INSTRUCTIONS. FAILURE TO DO SO MAY RESULT IN ELECTRIC SHOCK, FIRE, BURNS OR SERIOUS INJURY.

2.1. ELECTRICAL SAFETY

- CONNECT ONLY TO A CORRECTLY INSTALLED AND EARTHED 220–240 V ~ 50 HZ SOCKET OUTLET. THE APPLIANCE MUST BE EARTHED.
- USE OF A SOCKET PROTECTED BY A RESIDUAL CURRENT DEVICE (RCD) IS RECOMMENDED.
- DO NOT USE EXTENSION LEADS, ADAPTORS OR MULTI-WAY SOCKETS.
- DO NOT USE THE APPLIANCE IF THE CABLE, PLUG OR HOUSING IS DAMAGED. A DAMAGED SUPPLY CABLE MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE AGENT OR A SIMILARLY QUALIFIED PERSON TO AVOID A HAZARD.
- NEVER IMMERSE THE APPLIANCE, CABLE OR PLUG IN WATER OR ANY OTHER LIQUID, AND NEVER USE A WATER JET, STEAM CLEANER OR PRESSURE WASHER ON IT.
- ALWAYS SWITCH OFF AND UNPLUG BEFORE ASSEMBLY, CLEANING, MOVING OR MAINTENANCE, AND WHENEVER THE APPLIANCE IS NOT IN USE.
- DO NOT LET THE SUPPLY CABLE HANG OVER THE EDGE OF THE COUNTER OR TOUCH THE HOT LAMP HOUSING OR HOT SURFACES.
- REPAIRS AND ELECTRICAL WORK MUST ONLY BE CARRIED OUT BY A QUALIFIED ELECTRICIAN OR AUTHORISED SERVICE AGENT. DO NOT ATTEMPT TO REPAIR OR MODIFY THE APPLIANCE YOURSELF.

2.2. BURNS AND FIRE

- THE LAMP HOUSING, QUARTZ LAMP, GN PAN AND SURROUNDING SURFACES BECOME VERY HOT DURING USE AND REMAIN HOT FOR SOME TIME AFTER SWITCHING OFF. DO NOT TOUCH THEM WHILE HOT.
- NEVER COVER THE LAMP HOUSING OR PLACE ANYTHING ON TOP OF IT. DO NOT PLACE KITCHEN FOIL, CLING FILM, PLASTIC, PAPER, CARD, CLOTHS OR PACKAGING UNDER THE LAMP OR IN CONTACT WITH HOT SURFACES. DOING SO CAN CREATE BURN OR FIRE HAZARDS.
- IF ANY MATERIAL MELTS, SWITCH OFF AND UNPLUG IF SAFE TO DO SO. ALLOW THE APPLIANCE TO COOL COMPLETELY BEFORE REMOVING ANY RESIDUE, THEN CLEAN AS DESCRIBED IN SECTION 8.
- KEEP THE APPLIANCE AWAY FROM CURTAINS, WALLS, SHELVES AND OTHER FLAMMABLE MATERIALS, AND DO NOT OPERATE IT BENEATH WALL CUPBOARDS OR SHELVING.
- DO NOT LEAVE THE APPLIANCE SWITCHED ON UNATTENDED OR WHEN IT IS NOT IN USE.

2.3. QUARTZ LAMP

- DO NOT LOOK DIRECTLY INTO THE LIT LAMP FOR PROLONGED PERIODS.
- AVOID SPLASHING WATER OR COLD LIQUIDS ONTO A HOT LAMP — THE QUARTZ TUBE CAN SHATTER.
- IF THE LAMP IS CRACKED OR BROKEN, SWITCH OFF AND UNPLUG IMMEDIATELY AND DO NOT USE THE APPLIANCE UNTIL THE LAMP HAS BEEN REPLACED BY A COMPETENT PERSON.

2.4. USERS AND THE WORKPLACE

- THE APPLIANCE MUST ONLY BE OPERATED BY TRAINED ADULT STAFF WHO HAVE READ THIS MANUAL.
- KEEP CHILDREN AND UNAUTHORISED PERSONS AWAY FROM THE APPLIANCE. DO NOT ALLOW ANYONE TO SIT, STAND OR LEAN ON ANY PART OF IT.
- EMPLOYERS ARE RESPONSIBLE FOR ENSURING THE APPLIANCE IS USED, INSPECTED AND MAINTAINED IN LINE WITH THE ELECTRICITY AT WORK REGULATIONS 1989 AND THE PROVISION AND USE OF WORK EQUIPMENT REGULATIONS 1998 (PUWER), INCLUDING PERIODIC PORTABLE APPLIANCE INSPECTION AND TESTING.

3. PRODUCT DESCRIPTION & TECHNICAL DATA

SPECIFICATION	HDL003
MODEL / SKU	HDL003
DESCRIPTION	QUARTZ LAMP HEATED DISPLAY WITH 1/1 GN BASE
POWER SUPPLY	220–240 V ~ 50 HZ, SINGLE PHASE
RATED POWER INPUT	450 W
RATED CURRENT	APPROX. 2.0 A AT 230 V
HEAT SOURCE	1 × 450 W OVERHEAD QUARTZ HEATING LAMP
CONTROLS	ON / OFF SWITCH ON LAMP HOUSING
ELECTRICAL PROTECTION	CLASS I APPLIANCE — MUST BE EARTHED
PLUG	FITTED UK 3-PIN PLUG TO BS 1363 (13 A) WITH BS 1362 FUSE
PAN CAPACITY	1 × 1/1 GN PAN (530 × 325 MM) — SUPPLIED
EXTERNAL DIMENSIONS (W × D × H)	330 × 560 × 500 MM
NET WEIGHT	9.0 KG
CONSTRUCTION	STAINLESS STEEL PAN AND LAMP HOUSING; COATED STEEL FRAME
CONFORMITY MARKING	UKCA / CE
WARRANTY	1 YEAR PARTS AND LABOUR

NOTE

THE RATING LABEL ON THE APPLIANCE SHOWS THE DEFINITIVE ELECTRICAL DATA AND SERIAL NUMBER. ALWAYS REFER TO IT WHEN ORDERING PARTS OR CONTACTING SUPPORT. IF THE PLUG FUSE NEEDS REPLACING, FIT ONLY A BS 1362 FUSE OF THE SAME RATING AS THE ONE FITTED. DUE TO CONTINUOUS PRODUCT IMPROVEMENT, SPECIFICATIONS MAY CHANGE WITHOUT NOTICE.

4. PACKAGE CONTENTS

CAREFULLY UNPACK THE APPLIANCE AND REMOVE ALL PACKAGING, PROTECTIVE FILM AND TRANSIT MATERIALS. CHECK THAT ALL PARTS BELOW ARE PRESENT AND UNDAMAGED BEFORE ASSEMBLY. IF ANYTHING IS MISSING OR DAMAGED, DO NOT USE THE APPLIANCE AND CONTACT OUR TECHNICAL TEAM ON 0333 358 3678.

REF	PART	QTY
A	TOP BODY (QUARTZ LAMP HOUSING)	1
B	BOTTOM BODY (BASE)	1
C	1/1 GN PAN (STAINLESS STEEL)	1
D	SUPPORT TUBES	2
E	FIXING SCREWS	20
F	HEX (ALLEN) KEY	1
-	OPERATOR MANUAL (THIS DOCUMENT)	1



< FIGURE I — PARTS SUPPLIED (SHOWN BEFORE ASSEMBLY)

NOTE

PLEASE KEEP THE ORIGINAL PACKAGING UNTIL YOU ARE SATISFIED THE APPLIANCE IS WORKING CORRECTLY. IT IS THE SAFEST WAY TO RETURN THE APPLIANCE IF IT EVER NEEDS REPAIR UNDER WARRANTY.

5. ASSEMBLY

CAUTION

ASSEMBLE THE APPLIANCE WITH THE PLUG DISCONNECTED FROM THE MAINS SUPPLY. WORK ON A CLEAN, FLAT SURFACE COVERED WITH A SOFT CLOTH OR THE PACKAGING TO AVOID SCRATCHING. TWO PEOPLE ARE RECOMMENDED. TIGHTEN SCREWS FIRMLY BUT DO NOT OVER-TIGHTEN, AS THIS CAN STRIP THE THREADS.



FIGURE 2 — FITTING THE SUPPORT TUBES TO THE TOP BODY

STEP I — FIT THE SUPPORT TUBES TO THE TOP BODY

I. LAY THE TOP BODY (A) UPSIDE DOWN ON THE SOFT SURFACE.
2. INSERT THE TWO SUPPORT TUBES (D) INTO THE SQUARE SOCKETS ON THE TOP BODY.
3. LINE UP THE THREADED HOLES IN EACH TUBE WITH THE HOLES IN THE TOP BODY.
4. USING THE HEX KEY (F), SECURE EACH TUBE WITH 6 SCREWS (I2 SCREWS IN TOTAL).



FIGURE 3 — FIXING THE SUPPORT TUBES TO THE BOTTOM BODY

STEP 2 — FIT THE BOTTOM BODY

I. POSITION THE BOTTOM BODY (B) ONTO THE FREE ENDS OF THE TWO SUPPORT TUBES, WITH THE RUBBER FEET FACING OUTWARDS.
2. LINE UP THE HOLES AND SECURE THE TUBES TO THE BOTTOM BODY WITH THE REMAINING 8 SCREWS (4 PER TUBE).



FIGURE 4 — FULLY ASSEMBLED APPLIANCE WITH GN PAN FITTED

STEP 3 — FINAL CHECKS

I. CHECK THAT ALL 20 SCREWS ARE IN PLACE AND TIGHT, AND THAT THE FRAME IS RIGID WITH NO MOVEMENT.
2. TURN THE APPLIANCE THE RIGHT WAY UP AND STAND IT ON ITS FEET ON THE COUNTER.
3. PLACE THE I/I GN PAN (C) INTO THE BASE.

6. INSTALLATION & POSITIONING

- PLACE THE APPLIANCE ON A STABLE, LEVEL, HEAT-RESISTANT SURFACE CAPABLE OF SUPPORTING ITS WEIGHT WHEN LOADED.
- ALLOW A MINIMUM CLEARANCE OF 100 MM AROUND THE APPLIANCE AND KEEP THE SPACE ABOVE THE LAMP HOUSING CLEAR. DO NOT INSTALL UNDER SHELVING OR WALL CUPBOARDS.
- KEEP THE APPLIANCE AWAY FROM WATER SOURCES, SINKS, FRYERS AND OTHER SOURCES OF HEAT OR STEAM.
- POSITION THE APPLIANCE SO THAT THE SUPPLY CABLE REACHES THE SOCKET WITHOUT STRAIN AND DOES NOT CREATE A TRIP HAZARD OR TOUCH HOT SURFACES.
- ENSURE THE PLUG REMAINS ACCESSIBLE AFTER INSTALLATION SO THE APPLIANCE CAN BE DISCONNECTED QUICKLY.
- IN CUSTOMER-FACING AREAS, POSITION THE APPLIANCE SO THAT CUSTOMERS CANNOT REACH THE LAMP OR HOT PAN.

WARNING

BEFORE FIRST CONNECTION, CHECK THAT THE SUPPLY VOLTAGE SHOWN ON THE RATING LABEL MATCHES YOUR MAINS SUPPLY, AND THAT THE SOCKET IS CORRECTLY EARTHED.

7. OPERATION

7.1. BEFORE FIRST USE

- REMOVE ALL PACKAGING AND PROTECTIVE FILM.
- WASH THE GN PAN IN WARM WATER WITH A MILD DETERGENT, RINSE AND DRY THOROUGHLY.
- WIPE THE BASE AND FRAME WITH A CLOTH DAMPENED WITH WARM WATER AND MILD DETERGENT, THEN DRY WITH A SOFT, LINT-FREE CLOTH.
- SWITCH THE APPLIANCE ON WITH THE PAN EMPTY FOR APPROXIMATELY 15 MINUTES. A SLIGHT ODOUR MAY BE NOTICED AS MANUFACTURING RESIDUES BURN OFF — THIS IS NORMAL. ENSURE THE AREA IS WELL VENTILATED.

7.2. CONTROLS

CONTROL	FUNCTION
ON / OFF SWITCH (LAMP HOUSING)	SWITCHES THE QUARTZ HEATING LAMP ON AND OFF. THE LAMP GLOWS WHEN SWITCHED ON.

7.3. DAILY USE

- INSERT THE PLUG INTO THE SOCKET AND SWITCH ON AT THE WALL.
- SWITCH THE APPLIANCE ON AND ALLOW APPROXIMATELY 10 MINUTES FOR THE PAN AND SURROUNDINGS TO WARM UP BEFORE LOADING FOOD.
- PLACE HOT FOOD — ALREADY COOKED OR REHEATED — INTO THE GN PAN.
- CHECK THE CORE TEMPERATURE OF THE FOOD REGULARLY WITH A CALIBRATED PROBE THERMOMETER AND RECORD CHECKS IN LINE WITH YOUR FOOD SAFETY MANAGEMENT SYSTEM.
- REPLENISH FOOD FREQUENTLY IN SMALL QUANTITIES RATHER THAN HOLDING LARGE AMOUNTS FOR LONG PERIODS.
- AT THE END OF SERVICE, SWITCH THE APPLIANCE OFF, SWITCH OFF AT THE WALL AND REMOVE THE PLUG. ALLOW TO COOL FULLY BEFORE CLEANING.

IMPORTANT

UK FOOD HYGIENE LAW REQUIRES HOT FOOD HELD FOR SERVICE OR DISPLAY TO BE KEPT AT 63 °C OR ABOVE. THIS APPLIANCE IS DESIGNED TO MAINTAIN THE TEMPERATURE OF FOOD THAT IS ALREADY HOT; IT WILL NOT BRING COLD OR CHILLED FOOD UP TO A SAFE TEMPERATURE. FOLLOW YOUR HACCP-BASED FOOD SAFETY PROCEDURES AND LOCAL ENVIRONMENTAL HEALTH GUIDANCE ON HOT HOLDING TIMES AND TEMPERATURES.

8. CLEANING & CARE

WARNING

ALWAYS SWITCH OFF, UNPLUG AND ALLOW THE APPLIANCE TO COOL COMPLETELY BEFORE CLEANING. NEVER IMMERSE THE APPLIANCE IN WATER OR USE A WATER JET, STEAM CLEANER OR PRESSURE WASHER.

8.1. DAILY CLEANING

- REMOVE THE GN PAN AND WASH IT IN WARM WATER WITH A MILD DETERGENT, OR IN A COMMERCIAL DISHWASHER. RINSE AND DRY THOROUGHLY.
- WIPE THE BASE, FRAME AND THE OUTSIDE OF THE LAMP HOUSING WITH A SOFT CLOTH OR SPONGE DAMPENED WITH WARM WATER AND MILD DETERGENT.
- WIPE OVER WITH A CLOTH DAMPENED IN CLEAN WATER TO REMOVE DETERGENT RESIDUE.
- DRY ALL SURFACES THOROUGHLY WITH A SOFT, LINT-FREE CLOTH.

8.2. STUBBORN DEPOSITS

- SOFTEN DRIED-ON FOOD BY LAYING A WARM, DAMP CLOTH OVER IT FOR A FEW MINUTES BEFORE WIPING. DO NOT SCRAPE WITH METAL TOOLS.

8.3. DO NOT USE

- ABRASIVE CLEANERS, SCOURING POWDERS, STEEL WOOL, WIRE BRUSHES OR ABRASIVE PADS.
- BLEACH, CHLORINE-BASED CLEANERS, OR CLEANERS CONTAINING ACTIVE OXYGEN OR OTHER CORROSIVE AGENTS.
- SPONGES OR CLOTHS PREVIOUSLY USED ON OTHER SURFACES OR WITH OTHER CHEMICALS, WHICH CAN CAUSE DISCOLOURATION.

CAUTION

DO NOT WIPE OR SPRAY THE QUARTZ LAMP. KEEP MOISTURE AWAY FROM THE LAMP, SWITCH AND ELECTRICAL COMPONENTS. CLEANER RESIDUES LEFT ON HOT SURFACES CAN CAUSE DISCOLOURATION.

9. TROUBLESHOOTING

IF A PROBLEM OCCURS, SWITCH OFF AND UNPLUG THE APPLIANCE, THEN CHECK THE TABLE BELOW. IF THE PROBLEM CONTINUES, CONTACT OUR TECHNICAL TEAM ON 0333 358 3678. DO NOT ATTEMPT TO OPEN OR REPAIR THE APPLIANCE.

PROBLEM	POSSIBLE CAUSE	SOLUTION
LAMP DOES NOT COME ON	NOT PLUGGED IN OR SOCKET SWITCHED OFF	CHECK PLUG AND SOCKET, SWITCH ON AT THE WALL
	PLUG FUSE BLOWN	REPLACE FUSE WITH ONE OF THE SAME RATING
	LAMP FAILED	CONTACT OUR TECHNICAL TEAM ON 0333 358 3678
FOOD NOT HOT ENOUGH	FOOD WAS NOT HOT WHEN LOADED	ONLY LOAD FOOD AT 63 °C OR ABOVE
	PAN OVERLOADED OR FOOD PILED TOO DEEP	USE A SHALLOWER LAYER AND REPLENISH MORE OFTEN
	APPLIANCE IN A DRAUGHT	RE-POSITION AWAY FROM DOORS, FANS AND AIR CONDITIONING
PLUG FUSE BLOWS OR RCD TRIPS	ELECTRICAL FAULT	STOP USING THE APPLIANCE IMMEDIATELY AND CONTACT OUR TECHNICAL TEAM ON 0333 358 3678 OR CONSULT A QUALIFIED ELECTRICIAN
LAMP FLICKERS OR IS CRACKED	LAMP OR CONNECTION FAULT	SWITCH OFF AND UNPLUG IMMEDIATELY; CONTACT OUR TECHNICAL TEAM ON 0333 358 3678
BURNING SMELL	FIRST USE (NORMAL)	RUN EMPTY FOR 15 MINUTES WITH GOOD VENTILATION
	FOOD OR PACKAGING ON HOT SURFACES	SWITCH OFF, ALLOW TO COOL AND CLEAN

10. MAINTENANCE & SERVICING

- BEFORE EACH USE, VISUALLY CHECK THE SUPPLY CABLE, PLUG AND HOUSING FOR DAMAGE. DO NOT USE THE APPLIANCE IF ANY DAMAGE IS FOUND.
- REGULARLY CHECK THAT ALL FRAME SCREWS REMAIN TIGHT.
- HAVE THE APPLIANCE INSPECTED AND TESTED BY A COMPETENT PERSON AT INTERVALS APPROPRIATE TO ITS USE (PORTABLE APPLIANCE INSPECTION AND TESTING), IN LINE WITH THE ELECTRICITY AT WORK REGULATIONS 1989.
- THE QUARTZ LAMP AND ANY ELECTRICAL COMPONENTS MUST ONLY BE REPLACED BY A COMPETENT PERSON USING GENUINE CONTENDER REPLACEMENT PARTS. FOR SPARE PARTS, CONTACT OUR TECHNICAL TEAM ON 0333 358 3678, QUOTING THE MODEL NUMBER (HDL003) AND THE SERIAL NUMBER FROM THE RATING LABEL.

11. WARRANTY

11.1. COVERAGE

YOUR CONTENDER HDL003 IS COVERED BY A 1 YEAR PARTS AND LABOUR WARRANTY FROM THE DATE OF PURCHASE, PROVIDED DIRECTLY BY RG DISTRIBUTORS LIMITED. THE WARRANTY COVERS DEFECTS IN MATERIALS AND WORKMANSHIP UNDER NORMAL COMMERCIAL USE, IN ACCORDANCE WITH THIS MANUAL.

11.2. MAKING A CLAIM

- SWITCH OFF AND STOP USING THE APPLIANCE.
- CONTACT OUR TECHNICAL TEAM ON 0333 358 3678, QUOTING THE MODEL NUMBER, SERIAL NUMBER AND YOUR ORDER NUMBER OR PROOF OF PURCHASE.
- DESCRIBE THE FAULT. PHOTOGRAPHS OR A SHORT VIDEO MAY BE REQUESTED TO HELP DIAGNOSE THE ISSUE.
- OUR TEAM WILL ARRANGE REPAIR, REPLACEMENT PARTS OR A REPLACEMENT UNIT AS APPROPRIATE.

11.3. WARRANTY EXCLUSIONS

THE WARRANTY DOES NOT COVER:

- DAMAGE CAUSED BY MISUSE, NEGLECT, ACCIDENTAL DAMAGE, INCORRECT ASSEMBLY OR FAILURE TO FOLLOW THIS MANUAL.
- DAMAGE RESULTING FROM CONNECTION TO AN INCORRECT OR FAULTY ELECTRICAL SUPPLY.
- REPAIRS, MODIFICATIONS OR ALTERATIONS MADE BY ANYONE OTHER THAN RG DISTRIBUTORS LIMITED OR AN AUTHORISED SERVICE AGENT.
- NORMAL WEAR AND TEAR, COSMETIC DAMAGE, AND CONSUMABLE PARTS INCLUDING THE QUARTZ LAMP, EXCEPT WHERE THEY ARE FAULTY ON DELIVERY.
- DAMAGE CAUSED BY CLEANING WITH UNSUITABLE CHEMICALS, ABRASIVES, WATER JETS OR STEAM.
- DAMAGE IN TRANSIT NOT REPORTED PROMPTLY ON RECEIPT OF THE GOODS.
- USE OF THE APPLIANCE FOR DOMESTIC OR NON-CATERING PURPOSES.

NOTE

OPTIONAL EXTENDED WARRANTY AND ACCIDENTAL DAMAGE PROTECTION MAY BE AVAILABLE AT THE POINT OF PURCHASE. THIS WARRANTY DOES NOT AFFECT YOUR STATUTORY RIGHTS.

12. DISPOSAL

THIS APPLIANCE IS MARKED WITH THE CROSSED-OUT WHEELED BIN SYMBOL. IN ACCORDANCE WITH THE WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE) REGULATIONS 2013, IT MUST NOT BE DISPOSED OF WITH GENERAL WASTE. AT THE END OF ITS LIFE, TAKE IT TO AN AUTHORISED WEEE COLLECTION OR RECYCLING FACILITY, OR CONTACT OUR TECHNICAL TEAM ON 0333 358 3678 FOR ADVICE ON TAKE-BACK OPTIONS. PACKAGING MATERIALS SHOULD BE RECYCLED WHERE FACILITIES EXIST.

13. REGULATORY INFORMATION

THIS APPLIANCE HAS BEEN DESIGNED AND MANUFACTURED TO MEET THE REQUIREMENTS OF THE FOLLOWING UK LEGISLATION AND THE CORRESPONDING EU DIRECTIVES FOR CE MARKING:

LEGISLATION	SCOPE
ELECTRICAL EQUIPMENT (SAFETY) REGULATIONS 2016	ELECTRICAL SAFETY (EU EQUIVALENT: LOW VOLTAGE DIRECTIVE 2014/35/EU)
ELECTROMAGNETIC COMPATIBILITY REGULATIONS 2016	EMC (EU EQUIVALENT: EMC DIRECTIVE 2014/30/EU)
RESTRICTION OF THE USE OF CERTAIN HAZARDOUS SUBSTANCES IN ELECTRICAL AND ELECTRONIC EQUIPMENT REGULATIONS 2012	ROHS (EU EQUIVALENT: DIRECTIVE 2011/65/EU)
MATERIALS AND ARTICLES IN CONTACT WITH FOOD (ENGLAND) REGULATIONS 2012 AND EQUIVALENTS	FOOD CONTACT MATERIALS (EU EQUIVALENT: REGULATION (EC) NO 1935/2004)
WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT REGULATIONS 2013	END-OF-LIFE DISPOSAL

13.1. DESIGNATED STANDARDS APPLIED

- BS EN 60335-1 — HOUSEHOLD AND SIMILAR ELECTRICAL APPLIANCES: SAFETY — GENERAL REQUIREMENTS
- BS EN 60335-2-49 — PARTICULAR REQUIREMENTS FOR COMMERCIAL ELECTRIC APPLIANCES FOR KEEPING FOOD AND CROCKERY WARM
- BS EN IEC 55014-1 / BS EN IEC 55014-2 — ELECTROMAGNETIC COMPATIBILITY
- BS EN IEC 61000-3-2 / BS EN 61000-3-3 — HARMONIC CURRENT EMISSIONS AND VOLTAGE FLUCTUATIONS

A COPY OF THE DECLARATION OF CONFORMITY IS AVAILABLE ON REQUEST FROM RG DISTRIBUTORS LIMITED.

MANUFACTURER / UK RESPONSIBLE PERSON	DETAILS
COMPANY	RG DISTRIBUTORS LIMITED
ADDRESS	UNIT 7, JADE BUSINESS PARK, SEAHAM, SR7 9DR, UNITED KINGDOM
TELEPHONE	0333 358 3678
WEBSITE	RGDEQUIPMENT.COM

PLEASE SAVE THIS USER MANUAL FOR FUTURE REFERENCE.

CONTENDER

STEP UP TO THE PLATE

Distributed by RG Distributors Ltd | Unit 7 Jade Business Park | Spring Road | Seaham | SR7 9DR

SERVICE & SUPPORT: **0333 358 3678** **sales@ecatering.co.uk**

Office Hours: Mon – Fri 9:00AM – 5:00PM (excluding public holidays)