
CONTENDER

STEP UP TO THE PLATE



STAINLESS STEEL SINGLE DOOR UPRIGHT REFRIGERATORS

RUSO35 I RUSO38

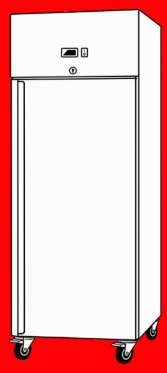

CONTENTS

I. INTRODUCTION 3
2. SAFETY INFORMATION 4
3. TECHNICAL SPECIFICATION & ELECTRICAL DATA 5
4. PACKAGE CONTENTS 6
5. INSTALLATION 6
6. OPERATION 7
7. CLEANING, CARE & MAINTENANCE 8
8. TROUBLESHOOTING 9
9. WARRANTY ..... IO
IO. DISPOSAL ..... IO
II. REGULATORY INFORMATION II

MODELS COVERED BY THIS MANUAL	DESCRIPTION
RUSO35	CONTENDER 600 LITRE STAINLESS STEEL SINGLE DOOR FISH FRIDGE WITH TRAYS AND CASTORS
RUSO38	CONTENDER 550 LITRE STAINLESS STEEL SINGLE DOOR REFRIGERATOR WITH SHELVES AND CASTORS

WHERE AN INSTRUCTION APPLIES TO ONE MODEL ONLY, IT IS MARKED RUSO35 ONLY OR RUSO38 ONLY.

I. INTRODUCTION

IMPORTANT

READ THIS MANUAL FULLY BEFORE INSTALLING OR USING THE APPLIANCE, AND KEEP IT IN A SAFE PLACE FOR FUTURE REFERENCE. THESE APPLIANCES USE A FLAMMABLE HYDROCARBON REFRIGERANT. FOLLOW THE SAFETY INFORMATION IN SECTION 2.

I.I. WELCOME

THANK YOU FOR PURCHASING A CONTENDER UPRIGHT REFRIGERATOR. PLEASE TAKE A FEW MOMENTS TO READ THIS MANUAL CAREFULLY — CORRECT INSTALLATION, OPERATION AND MAINTENANCE WILL GIVE THE BEST POSSIBLE PERFORMANCE AND SERVICE LIFE FROM YOUR APPLIANCE. BOTH MODELS SHARE THE SAME STAINLESS STEEL CABINET CONSTRUCTION, FAN-ASSISTED COOLING WITH A TOP-MOUNTED COMPRESSOR, DIGITAL TEMPERATURE CONTROLLER, AUTOMATIC DEFROST AND SELF-CLOSING, COUNTERBALANCED DOOR. THEY DIFFER IN SIZE AND INTERIOR FITTINGS:

- RUSO35 FISH FRIDGE — 600 LITRE CABINET FITTED WITH TRAY RUNNERS AND SUPPLIED WITH SEVEN FISH TRAYS, FOR STORING FRESH FISH AND SEAFOOD.
- RUSO38 REFRIGERATOR — A SMALLER 550 LITRE CABINET FITTED WITH THREE ADJUSTABLE SHELVES, FOR GENERAL CHILLED STORAGE.

I.2. INTENDED USE

- COMMERCIAL CHILLED STORAGE OF FOOD AND DRINK, INDOORS, BY TRAINED STAFF.
- NOT FOR STORING MEDICAL SUPPLIES, PHARMACEUTICALS OR EXPLOSIVE OR FLAMMABLE SUBSTANCES.
- NOT FOR USE OUTDOORS.

ANY OTHER USE IS CONSIDERED IMPROPER. RG DISTRIBUTORS LIMITED ACCEPTS NO LIABILITY FOR INJURY OR DAMAGE RESULTING FROM IMPROPER USE, INCORRECT INSTALLATION OR FAILURE TO FOLLOW THIS MANUAL, AND SUCH USE WILL INVALIDATE THE WARRANTY.

I.3. SYMBOLS USED IN THIS MANUAL

WARNING

A POTENTIALLY HAZARDOUS SITUATION THAT COULD CAUSE SERIOUS INJURY. FOLLOW ALL STATED PRECAUTIONS TO AVOID THE HAZARD.

CAUTION

A POTENTIALLY HAZARDOUS SITUATION THAT COULD CAUSE MINOR OR MODERATE INJURY. FOLLOW ALL STATED PRECAUTIONS TO AVOID THE HAZARD.

IMPORTANT

ESSENTIAL INSTRUCTIONS FOR THE CORRECT ASSEMBLY, OPERATION AND CARE OF THE APPLIANCE. READ AND FOLLOW THIS INFORMATION CAREFULLY TO ENSURE RELIABLE PERFORMANCE AND PREVENT DAMAGE OR INCORRECT USE.

NOTE

ADDITIONAL INFORMATION, PRACTICAL TIPS OR CLARIFICATION TO HELP YOU UNDERSTAND AND USE THE APPLIANCE EFFECTIVELY.

2. SAFETY INFORMATION

WARNING

- FLAMMABLE REFRIGERANT. THIS APPLIANCE CONTAINS A HYDROCARBON REFRIGERANT (R290 OR R600A — SEE THE RATING PLATE).
- KEEP VENTILATION OPENINGS IN THE APPLIANCE ENCLOSURE CLEAR OF OBSTRUCTION.
- DO NOT DAMAGE THE REFRIGERANT CIRCUIT.
- DO NOT USE MECHANICAL DEVICES OR OTHER MEANS TO ACCELERATE DEFROSTING, OTHER THAN THOSE RECOMMENDED BY THE MANUFACTURER.
- DO NOT USE ELECTRICAL APPLIANCES INSIDE THE FOOD STORAGE COMPARTMENT.
- REPAIRS TO THE REFRIGERATION SYSTEM MUST ONLY BE CARRIED OUT BY A TECHNICIAN QUALIFIED TO WORK WITH FLAMMABLE REFRIGERANTS.

2.1. INSTALLATION AND ELECTRICAL

- POSITION THE APPLIANCE ON A FLAT, STABLE, LEVEL FLOOR ABLE TO BEAR ITS FULL LOADED WEIGHT.
- CONNECT ONLY TO A CORRECTLY INSTALLED AND EARTHED 220–240 V ~ 50 HZ SOCKET OUTLET. DO NOT USE EXTENSION LEADS OR MULTI-WAY ADAPTORS.
- ENSURE THE PLUG REMAINS ACCESSIBLE AFTER INSTALLATION.
- INSTALLATION AND ANY REPAIRS SHOULD BE CARRIED OUT BY A SERVICE AGENT OR QUALIFIED TECHNICIAN. DO NOT REMOVE ANY COMPONENTS OR SERVICE PANELS.
- IF THE SUPPLY CORD IS DAMAGED, IT MUST BE REPLACED BY THE MANUFACTURER, ITS SERVICE AGENT OR A SIMILARLY QUALIFIED PERSON IN ORDER TO AVOID A HAZARD.
- CONSULT LOCAL AND NATIONAL STANDARDS TO COMPLY WITH HEALTH AND SAFETY AT WORK LEGISLATION, BS EN CODES OF PRACTICE, FIRE PRECAUTIONS, BS 7671 (IET WIRING REGULATIONS) AND BUILDING REGULATIONS.

2.2. USE AND CARE

- DO NOT USE THE APPLIANCE OUTDOORS.
- NEVER STORE EXPLOSIVE SUBSTANCES, SUCH AS AEROSOL CANS WITH A FLAMMABLE PROPELLANT, IN THIS APPLIANCE.
- BOTTLES CONTAINING A HIGH PERCENTAGE OF ALCOHOL MUST BE SEALED AND STORED UPRIGHT.
- DO NOT EXCEED THE MAXIMUM LOAD OF 30 KG PER SHELF (RUS038). LOAD FISH TRAYS EVENLY (RUS035).
- DO NOT ALLOW OIL OR FAT TO COME INTO CONTACT WITH PLASTIC COMPONENTS OR THE DOOR SEAL. CLEAN IMMEDIATELY IF CONTACT OCCURS.
- ALWAYS SWITCH OFF AND UNPLUG THE APPLIANCE BEFORE CLEANING. NEVER USE JET OR PRESSURE WASHERS.
- ALWAYS CARRY, STORE AND HANDLE THE APPLIANCE UPRIGHT, AND MOVE IT BY HOLDING THE BASE.
- KEEP ALL PACKAGING AWAY FROM CHILDREN AND DISPOSE OF IT IN ACCORDANCE WITH LOCAL AUTHORITY REGULATIONS.
- THIS IS A COMMERCIAL APPLIANCE AND SHOULD ONLY BE USED BY PERSONS WHO HAVE READ THIS MANUAL, HAVE BEEN INSTRUCTED IN ITS SAFE USE AND UNDERSTAND THE HAZARDS INVOLVED. CHILDREN MUST NOT PLAY WITH THE APPLIANCE. CLEANING AND USER MAINTENANCE MUST NOT BE CARRIED OUT BY CHILDREN WITHOUT SUPERVISION.

3. TECHNICAL SPECIFICATION & ELECTRICAL DATA

SPECIFICATION	RUS035 FISH FRIDGE	RUS038 REFRIGERATOR
MODEL / SKU	RUS035	RUS038
DESCRIPTION	600 L SINGLE DOOR FISH FRIDGE WITH TRAYS	550 L SINGLE DOOR REFRIGERATOR WITH SHELVES
GROSS CAPACITY	600 L	550 L (429 L NET)
TEMPERATURE RANGE	+2 °C TO +8 °C	+2 °C TO +8 °C
MAXIMUM AMBIENT TEMPERATURE	+32 °C	+32 °C
INTERIOR FITTINGS	7 × FISH TRAYS W 400 × D 600 × H 125 MM EACH	3 × ADJUSTABLE SHELVES
COOLING	FAN-ASSISTED, TOP-MOUNTED COMPRESSOR	FAN-ASSISTED, TOP-MOUNTED COMPRESSOR
CONTROLLER	DIGITAL TEMPERATURE CONTROLLER WITH EXTERNAL DISPLAY	DIGITAL TEMPERATURE CONTROLLER WITH EXTERNAL DISPLAY
DEFROST	AUTOMATIC EVERY 6 HOURS, PLUS MANUAL DEFROST	AUTOMATIC EVERY 6 HOURS, PLUS MANUAL DEFROST
INTERIOR LIGHTING	LED	-
DOOR	SINGLE, REVERSIBLE, SELF-CLOSING, COUNTERBALANCED	SINGLE, SELF-CLOSING, COUNTERBALANCED, FOLD-BACK HANDLE
DOOR LOCK	LOCK WITH 2 KEYS	LOCK WITH 2 KEYS
MOBILITY	CASTORS WITH BRAKES	CASTORS WITH BRAKES
REFRIGERANT	R290 / R600A (SEE RATING PLATE)	R290 / R600A (SEE RATING PLATE)
POWER SUPPLY	220–240 V ~ 50 HZ	220–240 V ~ 50 HZ
PLUG	FITTED UK 3-PIN 13 A PLUG (BS 1363)	FITTED UK 3-PIN 13 A PLUG (BS 1363)
ELECTRICAL PROTECTION	CLASS I — MUST BE EARTHED	CLASS I — MUST BE EARTHED
EXTERNAL DIMENSIONS (W × D × H)	680 × 810 × 2010 MM	680 × 710 × 2010 MM
NET WEIGHT	80.0 KG	113.0 KG
CONSTRUCTION	STAINLESS STEEL INTERIOR AND EXTERIOR	STAINLESS STEEL INTERIOR AND EXTERIOR
CONFORMITY MARKING	UKCA / CE	UKCA / CE
WARRANTY	1 YEAR PARTS AND LABOUR	1 YEAR PARTS AND LABOUR

NOTE

THE RATING PLATE INSIDE THE CABINET SHOWS THE DEFINITIVE ELECTRICAL DATA (RATED POWER AND CURRENT), REFRIGERANT TYPE AND CHARGE, AND SERIAL NUMBER. ALWAYS REFER TO IT WHEN ORDERING PARTS OR CONTACTING OUR TECHNICAL TEAM. DUE TO CONTINUOUS PRODUCT IMPROVEMENT, SPECIFICATIONS MAY CHANGE WITHOUT NOTICE.

4. PACKAGE CONTENTS

ITEM	RUSO35	RUSO38
REFRIGERATOR	1	1
FISH TRAYS (W 400 × D 600 × H 125 MM)	7	-
SHELVES WITH SHELF GUIDES	-	3
WASTE WATER TRAY	1	1
DOOR KEYS	2	2
OPERATION & MAINTENANCE MANUAL (THIS DOCUMENT)	1	1

NOTE

STAINLESS STEEL TRAY INSERTS FOR THE RUSO35 FISH TRAYS ARE AVAILABLE SEPARATELY AND ARE NOT INCLUDED. THE CONTENTS ARE CHECKED TO BE COMPLETE, FULLY FUNCTIONAL AND FREE OF DAMAGE AT THE TIME OF PACKING. IF YOU FIND ANY TRANSIT DAMAGE, DO NOT USE THE APPLIANCE AND CONTACT OUR TECHNICAL TEAM ON 0333 358 3678 IMMEDIATELY.

5. INSTALLATION

NOTE

IF THE APPLIANCE HAS NOT BEEN STORED OR MOVED UPRIGHT, LET IT STAND UPRIGHT FOR APPROXIMATELY 12 HOURS BEFORE SWITCHING ON. IF IN DOUBT, ALLOW IT TO STAND.

5.1. POSITIONING

- REMOVE THE APPLIANCE FROM ITS PACKAGING AND PEEL OFF ALL PROTECTIVE FILM AND COATINGS FROM EVERY SURFACE.
- POSITION THE APPLIANCE INDOORS ON A LEVEL FLOOR, AWAY FROM HEAT SOURCES SUCH AS OVENS, FRYERS, RADIATORS AND DIRECT SUNLIGHT.
- LEAVE A CLEARANCE OF AT LEAST 200 MM BETWEEN THE APPLIANCE AND WALLS OR OTHER OBJECTS FOR VENTILATION. INCREASE THIS DISTANCE NEXT TO A HEAT SOURCE. DO NOT BLOCK THE VENTS AROUND THE TOP-MOUNTED COMPRESSOR.
- MAKE SURE THE ROOM TEMPERATURE WILL NOT EXCEED +32 °C. HIGHER AMBIENT TEMPERATURES REDUCE PERFORMANCE.
- LOCK THE BRAKES ON THE CASTORS TO KEEP THE APPLIANCE IN POSITION.
- BEFORE FIRST USE, CLEAN THE INTERIOR, SHELVES OR TRAYS WITH WARM SOAPY WATER, THEN RINSE AND DRY.

5.2. FITTING THE WASTE WATER TRAY

THE WASTE WATER TRAY IS SUPPLIED READY TO FIT TO THE UNDERSIDE OF THE APPLIANCE. SLIDE IT INTO THE RUNNERS UNDER THE CABINET. THE TRAY COLLECTS CONDENSATION FROM THE DEFROST DRAINAGE HOLE IN THE BASE OF THE CABINET.

NOTE

CORRECT FITTING OF THE WASTE WATER TRAY, WITH THE APPLIANCE LEVEL, IS VITAL FOR PROPER DRAINAGE OF CONDENSATION.

5.3. FITTING THE SHELVES

RUS038 ONLY. THREE ADJUSTABLE SHELVES ARE SUPPLIED. FIT A PAIR OF SHELF GUIDES AT THE REQUIRED HEIGHT, ONE ON EACH SIDE OF THE CABINET, THEN SLIDE THE SHELF INTO PLACE. REPEAT FOR THE REMAINING SHELVES. MAXIMUM LOAD: 30 KG PER SHELF, EVENLY DISTRIBUTED.

5.4. FITTING THE FISH TRAYS

RUS035 ONLY. SEVEN FISH TRAYS (W 400 × D 600 × H 125 MM) ARE SUPPLIED. SLIDE EACH TRAY FULLY ONTO A PAIR OF RUNNERS, ENSURING THE DOOR CLOSES AND SEALS CORRECTLY. LOAD EVENLY WITHOUT OVERFILLING, LEAVING SPACE FOR COLD AIR TO CIRCULATE. OPTIONAL STAINLESS STEEL TRAY INSERTS ARE AVAILABLE SEPARATELY.

5.5. LOCKING AND UNLOCKING THE DOOR

A LOCK IS FITTED TO THE DOOR TO KEEP STOCK SECURE. USE THE TWO KEYS PROVIDED TO LOCK AND UNLOCK THE DOOR. KEEP THE SPARE KEY IN A SAFE PLACE.

5.6. ELECTRICAL CONNECTION

- PLUG THE APPLIANCE INTO A DEDICATED, CORRECTLY EARTHED 13 A SOCKET OUTLET. A SOCKET PROTECTED BY A 30 MA RCD IS RECOMMENDED.
- DO NOT USE EXTENSION LEADS OR MULTI-WAY ADAPTORS, AND DO NOT TRAP OR CRUSH THE SUPPLY CORD WHEN POSITIONING THE UNIT.

6. OPERATION


6.1. SWITCHING ON AND SETTING THE TEMPERATURE

CLOSE THE DOOR, PLUG IN AND SWITCH ON AT THE SOCKET, THEN SWITCH ON THE APPLIANCE AT ITS POWER SWITCH (I). THE CONTROLLER DISPLAYS THE CABINET TEMPERATURE. ALLOW IT TO REACH THE OPERATING TEMPERATURE BEFORE LOADING FOOD.

TO VIEW THE SET POINT: PRESS AND RELEASE SET. PRESS SET AGAIN, OR WAIT APPROX. 5 SECONDS, TO RETURN TO THE NORMAL DISPLAY.

TO CHANGE THE SET POINT:

- HOLD SET FOR MORE THAN 2 SECONDS UNTIL THE °C INDICATOR FLASHES.
- WITHIN 10 SECONDS, USE THE UP OR DOWN BUTTONS TO ADJUST THE TEMPERATURE.
- PRESS SET AGAIN, OR WAIT APPROXIMATELY 10 SECONDS, TO SAVE.

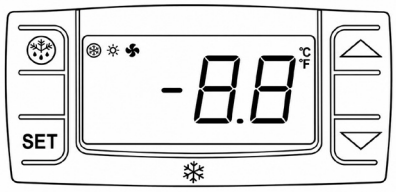

6.2. STORING FOOD

- ONLY LOAD FOOD ONCE THE APPLIANCE HAS REACHED THE CORRECT OPERATING TEMPERATURE.
- DO NOT PLACE UNCOVERED HOT FOOD OR LIQUIDS IN THE APPLIANCE. COOL FOOD BEFORE STORING IT.
- WRAP OR COVER FOOD WHEREVER POSSIBLE.
- DO NOT OBSTRUCT THE FANS INSIDE THE APPLIANCE, AND KEEP FOOD CLEAR OF THE REAR WALL SO COLD AIR CAN CIRCULATE.
- AVOID OPENING THE DOOR FOR LONG PERIODS.
- DO NOT PLACE ACIDS, ALKALIS OR SALT DIRECTLY IN CONTACT WITH THE INTERIOR SURFACES.
- DO NOT OVERLOAD THE APPLIANCE.

6.3. STORING FISH

RUSO35 ONLY. FOR THE BEST QUALITY AND SAFETY WHEN STORING FRESH FISH AND SEAFOOD:

- SET THE CONTROLLER TO THE LOWER END OF THE RANGE (CLOSE TO +2 °C).
- STORE FISH IN THE TRAYS SO THAT JUICES ARE CONTAINED AND DO NOT DRIP ONTO OTHER PRODUCTS.
- KEEP RAW FISH SEPARATE FROM READY-TO-EAT FOODS, AND LABEL AND ROTATE STOCK.
- EMPTY AND CLEAN TRAYS REGULARLY TO PREVENT ODOURS AND CROSS-CONTAMINATION.

IMPORTANT

UK FOOD HYGIENE LAW REQUIRES CHILLED FOOD TO BE KEPT AT 8 °C OR BELOW; 5 °C OR BELOW IS RECOMMENDED. CHECK TEMPERATURES REGULARLY WITH A CALIBRATED PROBE THERMOMETER AND RECORD CHECKS IN LINE WITH YOUR HACCP-BASED FOOD SAFETY PROCEDURES.

6.4. DEFROSTING

THE APPLIANCE RUNS AN AUTOMATIC DEFROST CYCLE EVERY SIX HOURS, TIMED FROM WHEN IT IS FIRST POWERED UP. DEFROST WATER DRAINS INTO THE WASTE WATER TRAY.

TO DEFROST MANUALLY:

- PRESS AND HOLD THE DEFROST BUTTON FOR FIVE SECONDS.
- THE DEFROST CYCLE STARTS IMMEDIATELY AND THE DEFROST LED LIGHTS. THE DEFROST LASTS A MAXIMUM OF 30 MINUTES.
- WASTE WATER IS COLLECTED IN THE WASTE WATER TRAY. EMPTY IT AS REQUIRED.

NOTE

STARTING A MANUAL DEFROST RESETS THE AUTOMATIC DEFROST TIMER. THE NEXT AUTOMATIC DEFROST WILL START SIX HOURS AFTER THE MANUAL DEFROST HAS FINISHED.

7. CLEANING, CARE & MAINTENANCE

WARNING

SWITCH OFF AND DISCONNECT THE APPLIANCE FROM THE POWER SUPPLY BEFORE CLEANING. NEVER USE JET OR PRESSURE WASHERS.

7.1. CLEANING

- CLEAN THE INTERIOR AS OFTEN AS POSSIBLE — THE RUSO35 SHOULD BE CLEANED FREQUENTLY, AS FISH CAN CAUSE ODOURS.
- WASH SHELVES AND TRAYS IN WARM WATER WITH A MILD DETERGENT, RINSE AND DRY THOROUGHLY.
- WIPE THE STAINLESS STEEL INTERIOR AND EXTERIOR WITH A SOFT CLOTH AND MILD DETERGENT, FOLLOWING THE GRAIN OF THE STEEL, THEN WIPE DRY.
- CLEAN THE DOOR SEAL WITH WATER ONLY, AND CHECK IT FOR DAMAGE.
- DO NOT USE ABRASIVE OR CHLORINE-BASED CLEANING AGENTS, WHICH CAN DAMAGE STAINLESS STEEL AND LEAVE HARMFUL RESIDUES.
- DO NOT LET CLEANING WATER RUN THROUGH THE DRAIN HOLE INTO THE WASTE WATER TRAY OR EVAPORATION PAN.
- EMPTY AND CLEAN THE WASTE WATER TRAY REGULARLY.
- TAKE CARE WHEN CLEANING THE REAR OF THE APPLIANCE — SHARP EDGES CAN CUT.

7.2. CLEANING THE CONDENSER

PERIODICALLY CLEANING THE CONDENSER EXTENDS THE LIFE OF THE APPLIANCE AND KEEPS IT RUNNING EFFICIENTLY. WE RECOMMEND THAT A SERVICE AGENT OR QUALIFIED TECHNICIAN CLEANS THE CONDENSER.

7.3. SERVICING AND REPAIRS

- REPAIRS, INCLUDING REPLACEMENT OF THE SUPPLY CORD OR INTERIOR LAMP, MUST ONLY BE CARRIED OUT BY A QUALIFIED TECHNICIAN WITH THE POWER SUPPLY DISCONNECTED. REPLACE LAMPS ONLY WITH IDENTICAL LAMPS.
- ONLY QUALIFIED TECHNICIANS COMPETENT TO WORK WITH FLAMMABLE REFRIGERANTS MAY CARRY OUT WORK ON THE REFRIGERATION SYSTEM.
- FOR SPARE PARTS OR SERVICE, CONTACT OUR TECHNICAL TEAM ON 0333 358 3678, QUOTING THE MODEL AND SERIAL NUMBER FROM THE RATING PLATE.

8. TROUBLESHOOTING

IF YOUR APPLIANCE DEVELOPS A FAULT, CHECK THE TABLE BELOW BEFORE CALLING FOR SERVICE. IF THE PROBLEM CONTINUES, CONTACT OUR TECHNICAL TEAM ON 0333 358 3678.

PROBLEM	POSSIBLE CAUSE	SOLUTION
APPLIANCE NOT WORKING	NOT SWITCHED ON	CHECK IT IS PLUGGED IN AND SWITCHED ON AT THE SOCKET AND THE POWER SWITCH
	PLUG OR LEAD DAMAGED	DO NOT USE; CONTACT OUR TECHNICAL TEAM ON 0333 358 3678
	FUSE IN THE PLUG HAS BLOWN	REPLACE WITH A FUSE OF THE SAME RATING
	NO POWER SUPPLY	CHECK THE SOCKET AND SUPPLY
	INTERNAL WIRING FAULT	CONTACT OUR TECHNICAL TEAM ON 0333 358 3678
RUNS, BUT TEMPERATURE TOO HIGH OR LOW	TOO MUCH ICE ON THE EVAPORATOR	RUN A MANUAL DEFROST
	CONDENSER BLOCKED WITH DUST	HAVE THE CONDENSER CLEANED BY A QUALIFIED TECHNICIAN
	DOOR NOT SHUT PROPERLY	CHECK THE DOOR CLOSES FULLY AND THE SEAL IS NOT DAMAGED
	NEAR A HEAT SOURCE OR AIRFLOW BLOCKED	MOVE TO A MORE SUITABLE LOCATION; KEEP 200 MM CLEARANCE
	AMBIENT TEMPERATURE TOO HIGH	IMPROVE VENTILATION OR MOVE TO A COOLER POSITION (MAX. +32 °C)
	HOT FOOD STORED, OR FANS BLOCKED	REMOVE HOT FOOD AND ANY BLOCKAGES FROM THE FANS
	APPLIANCE OVERLOADED	REDUCE THE AMOUNT OF FOOD STORED
LEAKING WATER	APPLIANCE NOT LEVEL	RE-POSITION ON A LEVEL FLOOR
	DRAIN OUTLET BLOCKED	CLEAR THE DRAIN OUTLET
	WASTE WATER TRAY FULL OR NOT FITTED	EMPTY THE TRAY AND REFIT IT CORRECTLY
	WASTE WATER TRAY DAMAGED	CONTACT OUR TECHNICAL TEAM ON 0333 358 3678
UNUSUALLY NOISY	LOOSE NUT OR SCREW	CHECK AND TIGHTEN ALL NUTS AND SCREWS
	NOT LEVEL OR STABLE	CHECK THE POSITION AND CASTOR BRAKES

9. WARRANTY

9.1. COVERAGE

YOUR CONTENDER REFRIGERATOR IS COVERED BY A I YEAR PARTS AND LABOUR WARRANTY FROM THE DATE OF PURCHASE, PROVIDED DIRECTLY BY RG DISTRIBUTORS LIMITED. THE WARRANTY COVERS DEFECTS IN MATERIALS AND WORKMANSHIP UNDER NORMAL COMMERCIAL USE, IN ACCORDANCE WITH THIS MANUAL.

9.2. MAKING A CLAIM

- SWITCH OFF THE APPLIANCE AND, IF SAFE TO DO SO, MOVE STOCK TO ALTERNATIVE REFRIGERATION
- CONTACT OUR TECHNICAL TEAM ON 0333 358 3678, QUOTING THE MODEL NUMBER, SERIAL NUMBER AND YOUR ORDER NUMBER OR PROOF OF PURCHASE.
- DESCRIBE THE FAULT AND ANY DISPLAY CODE. PHOTOGRAPHS OR A SHORT VIDEO MAY BE REQUESTED TO HELP DIAGNOSE IT
- OUR TEAM WILL ARRANGE REPAIR, REPLACEMENT PARTS OR A REPLACEMENT UNIT AS APPROPRIATE.

9.3. WARRANTY EXCLUSIONS

THE WARRANTY DOES NOT COVER:

- DAMAGE CAUSED BY MISUSE, NEGLECT, ACCIDENTAL DAMAGE,NCORRECT INSTALLATION OR FAILURE TO FOLLOW THIS MANUAL.
- FAULTS CAUSED BY POOR VENTILATION, BLOCKED OR UNCLEANED CONDENSERS, OR OPERATION ABOVE THE MAXIMUM AMBIENT TEMPERATURE.
- DAMAGE FROM AN INCORRECT OR FAULTY ELECTRICAL SUPPLY.
- REPAIRS, MODIFICATIONS OR ALTERATIONS BY ANYONE OTHER THAN RG DISTRIBUTORS LIMITED OR AN AUTHORISED SERVICE AGENT.
- NORMAL WEAR AND TEAR, COSMETIC DAMAGE, AND CONSUMABLE PARTS SUCH AS LAMPS AND DOOR SEALS, EXCEPT WHERE FAULTY ON DELIVERY.
- LOSS OF STOCK OR CONSEQUENTIAL LOSSES RESULTING FROM A BREAKDOWN.
- DAMAGE IN TRANSIT NOT REPORTED PROMPTLY ON RECEIPT OF THE GOODS.

NOTE

OPTIONAL EXTENDED WARRANTY AND ACCIDENTAL DAMAGE PROTECTION MAY BE AVAILABLE AT THE POINT OF PURCHASE. THIS WARRANTY DOES NOT AFFECT YOUR STATUTORY RIGHTS.

10. DISPOSAL

THE APPLIANCE

THIS APPLIANCE IS MARKED WITH THE CROSSED-OUT WHEELED BIN SYMBOL. UNDER THE WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE) REGULATIONS 2013 IT MUST NOT BE DISPOSED OF WITH GENERAL WASTE. REFRIGERATION EQUIPMENT MUST BE DISPOSED OF BY A SPECIALIST COMPANY THAT SAFELY RECOVERS THE REFRIGERANT AND INSULATION AND RECYCLES THE METAL AND PLASTIC COMPONENTS. LOCAL AUTHORITIES ARE NOT OBLIGED TO COLLECT COMMERCIAL REFRIGERATION EQUIPMENT BUT MAY BE ABLE TO ADVISE ON LOCAL OPTIONS, OR CONTACT OUR TECHNICAL TEAM ON 0333 358 3678.

PACKAGING

DISPOSE OF ALL PACKAGING MATERIALS IN AN ENVIRONMENTALLY FRIENDLY WAY. THE CARDBOARD CAN BE RECYCLED, AND THE PROTECTIVE FILM AND FOAM CUSHIONS ARE CFC-FREE. DO NOT ALLOW CHILDREN TO PLAY WITH THE PACKAGING, AND DESTROY PLASTIC BAGS SAFELY.

II. REGULATORY INFORMATION

THESE APPLIANCES HAVE BEEN DESIGNED AND MANUFACTURED TO MEET THE REQUIREMENTS OF THE FOLLOWING UK LEGISLATION AND THE CORRESPONDING EU DIRECTIVES FOR CE MARKING:

LEGISLATION	SCOPE
ELECTRICAL EQUIPMENT (SAFETY) REGULATIONS 2016	ELECTRICAL SAFETY (EU EQUIVALENT: LOW VOLTAGE DIRECTIVE 2014/35/EU)
ELECTROMAGNETIC COMPATIBILITY REGULATIONS 2016	EMC (EU EQUIVALENT: EMC DIRECTIVE 2014/30/EU)
RESTRICTION OF THE USE OF CERTAIN HAZARDOUS SUBSTANCES IN ELECTRICAL AND ELECTRONIC EQUIPMENT REGULATIONS 2012	ROHS (EU EQUIVALENT: DIRECTIVE 2011/65/EU)
ECODESIGN FOR ENERGY-RELATED PRODUCTS AND ENERGY INFORMATION REGULATIONS 2021	ENERGY EFFICIENCY AND LABELLING OF PROFESSIONAL REFRIGERATED STORAGE CABINETS
MATERIALS AND ARTICLES IN CONTACT WITH FOOD (ENGLAND) REGULATIONS 2012 AND EQUIVALENTS	FOOD CONTACT MATERIALS (EU EQUIVALENT: REGULATION (EC) NO 1935/2004)
WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT REGULATIONS 2013	END-OF-LIFE DISPOSAL

II.I. DESIGNATED STANDARDS APPLIED

- BS EN 60335-1 — HOUSEHOLD AND SIMILAR ELECTRICAL APPLIANCES: SAFETY — GENERAL REQUIREMENTS
- BS EN 60335-2-89 — PARTICULAR REQUIREMENTS FOR COMMERCIAL REFRIGERATING APPLIANCES WITH AN INCORPORATED OR REMOTE REFRIGERANT UNIT OR COMPRESSOR
- BS EN 378 — REFRIGERATING SYSTEMS AND HEAT PUMPS: SAFETY AND ENVIRONMENTAL REQUIREMENTS (HYDROCARBON REFRIGERANTS R290 / R600A)
- BS EN IEC 55014-1 / BS EN IEC 55014-2 — ELECTROMAGNETIC COMPATIBILITY
- BS EN IEC 61000-3-2 / BS EN 61000-3-3 — HARMONIC CURRENT EMISSIONS AND VOLTAGE FLUCTUATIONS

A COPY OF THE DECLARATION OF CONFORMITY IS AVAILABLE ON REQUEST FROM RG DISTRIBUTORS LIMITED.

MANUFACTURER / UK RESPONSIBLE PERSON	DETAILS
COMPANY	RG DISTRIBUTORS LIMITED
ADDRESS	UNIT 7, JADE BUSINESS PARK, SEAHAM, SR7 9DR, UNITED KINGDOM
TELEPHONE	0333 358 3678
WEBSITE	RGDEQUIPMENT.COM

PLEASE SAVE THIS USER MANUAL FOR FUTURE REFERENCE.

RUSO35 · CONTENDER 600 LITRE STAINLESS STEEL SINGLE DOOR FISH FRIDGE WITH TRAYS AND CASTORS

RUSO38 · CONTENDER 550 LITRE STAINLESS STEEL SINGLE DOOR REFRIGERATOR WITH SHELVES AND CASTORS

CONTENDER

STEP UP TO THE PLATE

Distributed by RG Distributors Ltd | Unit 7 Jade Business Park | Spring Road | Seaham | SR7 9DR

SERVICE & SUPPORT: **0333 358 3678** **sales@ecatering.co.uk**

Office Hours: Mon – Fri 9:00AM – 5:00PM (excluding public holidays)